

# WWW.HSPUTELIDS.COM

Part No: B4R-S3.5

# **INSTALLATION INSTRUCTIONS**

Vehicle Model: To suit Mazda BT-50 Dual Cab 2011 -2020





**INSTALLATION TIME:** 1 hours and 45 minutes (Approximately)

IMPORTANT	Do not stand/sit or rest heavy objects on Roll R Cover     Humans or animals are not to be under the closed cover at any given time     Tonneau Cover is not dust or water tight     If contact with volatile chemicals occur, clean Cover with mild detergent and water solution		
Care Instructions	Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process.		
Maintenance	Refer to Maintenance instructions.		
Tools Required	Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic	<ul><li>Scissors &amp; Knife</li><li>Spanner &amp; Socket</li><li>Tape measure</li><li>Holesaw</li><li>Filing tool</li></ul>	<ul> <li>Soapy water solution</li> <li>Allen Key set</li> <li>Screw driver</li> <li>Rust Inhibitor</li> <li>Trim Removal Tool</li> </ul>

### PERSONAL PROTECTIVE EQUIPMENT:



 


 


 
**Rubber Gloves** 

 
**Hearing Protection** 

## **BOX CONTENTS**









S2.5-DC-AE-005 -B

#### STANDARD KIT

COVER END CAPS



S2.5-DC-PI-004ds

**%** 

COUNTERSUNK SCREW Qty - 4



FLAT PLATE Qty- 2



 
CABLE TIE Qty x 16



BATTERY LOOM S2.75



Drainage pipe Qty - 2



SIDERAIL CLAMP Qty - 6



 
M8 x 35mm Qty - 6



M8 WASHER Qty - 6



M8 SPRING WASHER Qty - 6



M8 x 70 mm Qty - 2



M8 NUT Qty - 8



## **SPECIFIC KIT B4R**



RBRH



**RBLH** 



M6 x 20 ALLEN Head Bolt Qty - 2



M8 x 20 ALLEN Head Bolt Qty - 4



Clear protective tape ( 30mm x 65mm) Qty - 2



50449 D-SPONGE Qty-2



TAPE Qty -2



Foam seal Qty - 1.7m





CL-LOOM-SHORT



P-PATCH-K



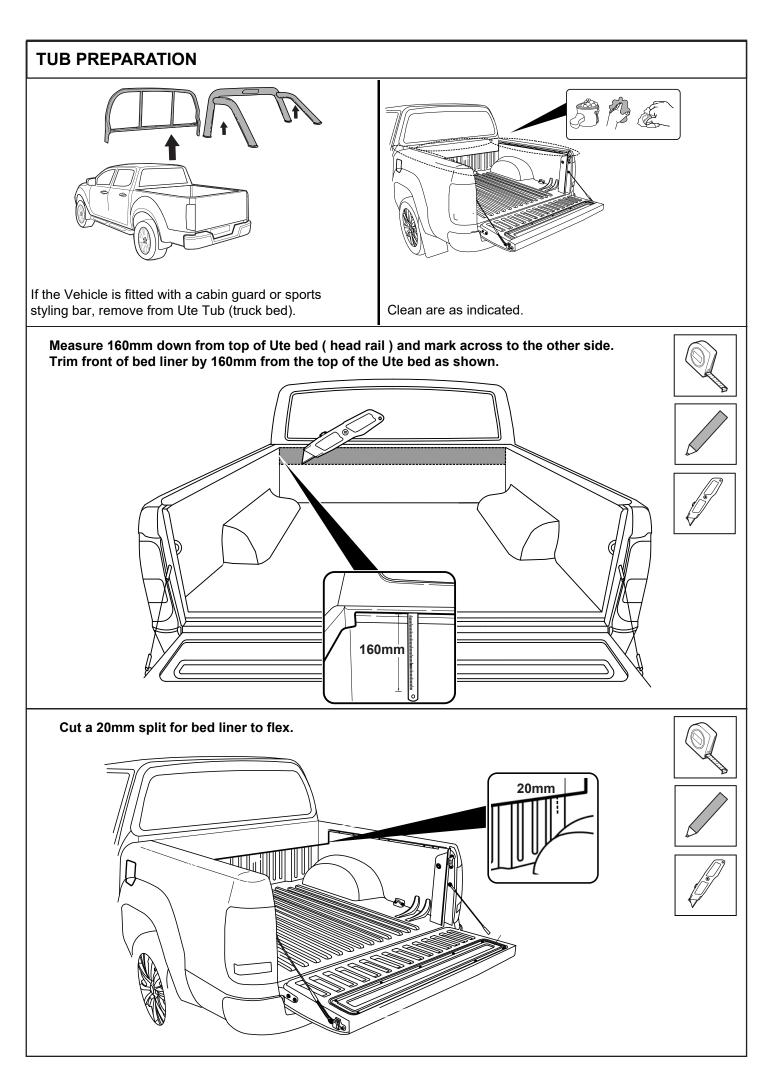

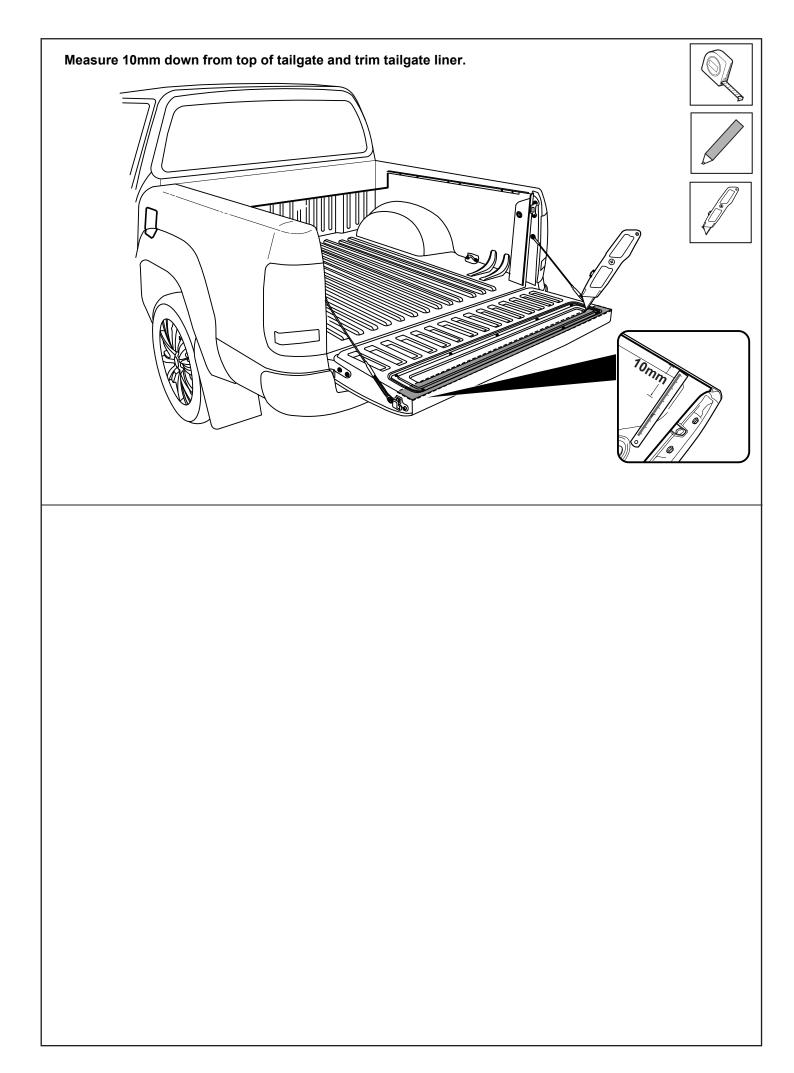

Measure down from top of headboard 220mm & 100mm from inside wall of bed liner as shown. Repeat to the other side.


Using a 50mm hole-saw drill the liner only as indicated.











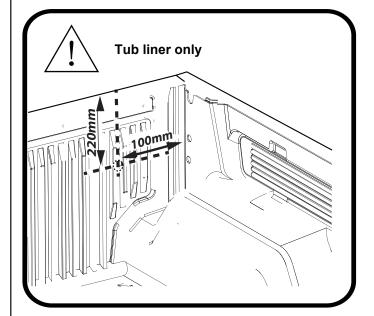


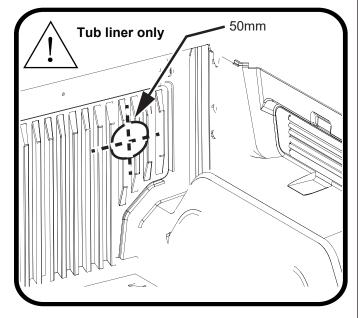

Measure down from top of headboard 230mm & 105mm from inside wall of bed as shown. Repeat to the other side.

 Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.

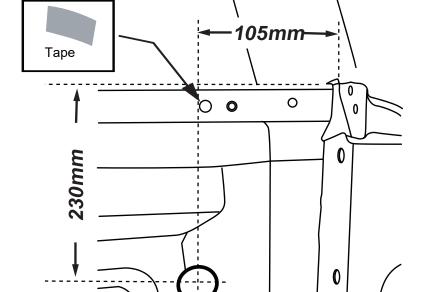



**30**mm













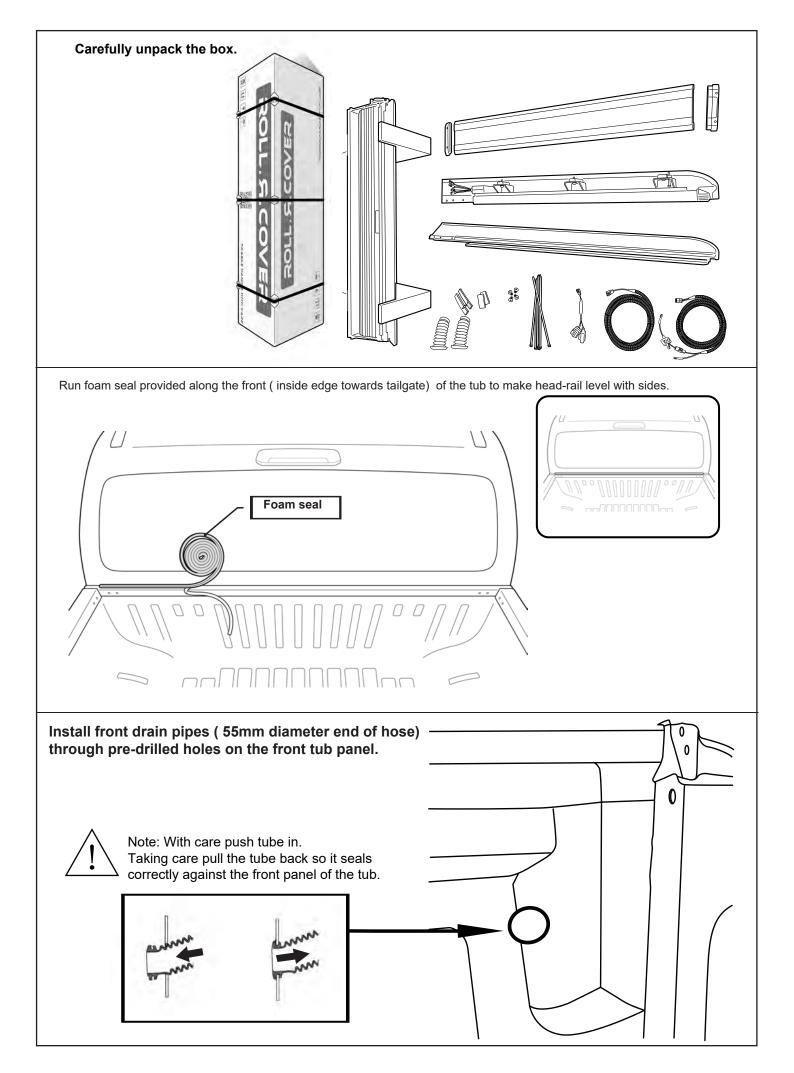

Remove and retain tail lights.

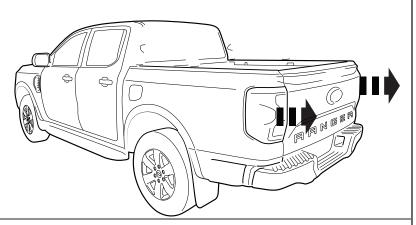

90mm

00

100mm

Measure 90mm towards the front of tub from the center of the indicated factory M6 thread. Measure down 100mm from the top edge of the tub as directed and make a mark.

Use a 15mm hole-saw to drill through the tub pillar, and file away any sharp edges. Apply an anti-rust coating.

Repeat the same steps on the other side.













ATTENTION: Do not exceed 15mm hole.


- a In the specified orientation insert the rear drainage pipe into the previously drilled hole.
- **b** Leaving 150mm of the pipe hanging out.
- Check the tail light cavity to ensure there are no obstructions to the drainage pipe. Repeat to the other side.

  Re-fit the tail lights.

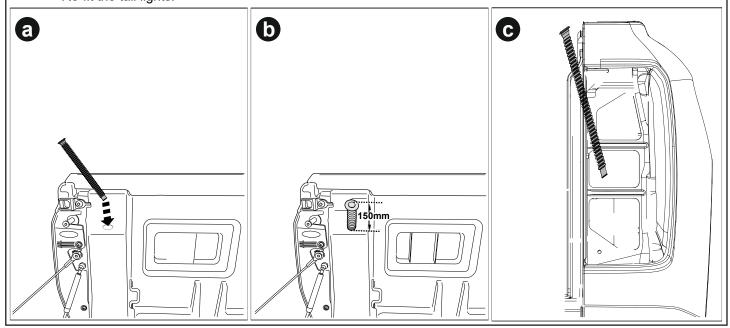


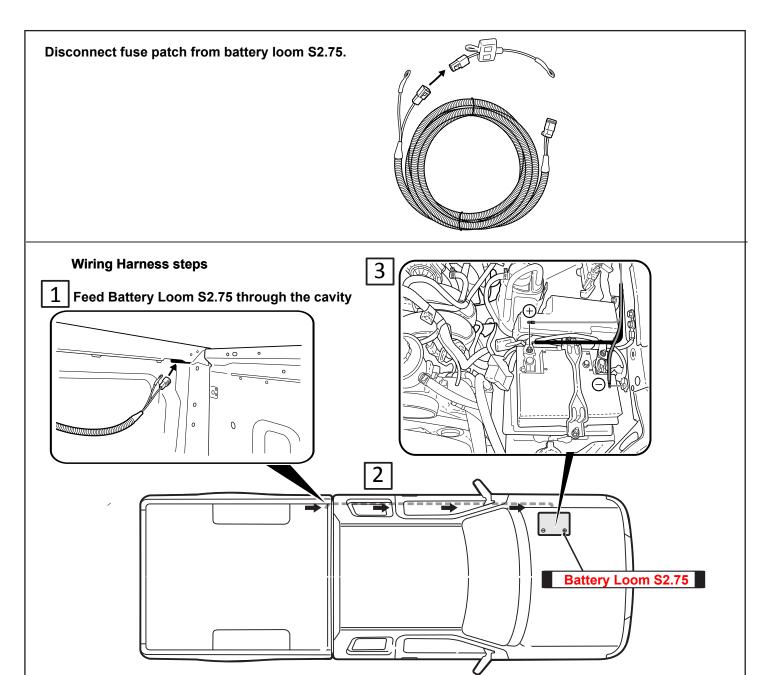


Run the wiring from the front corner cavity (leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.

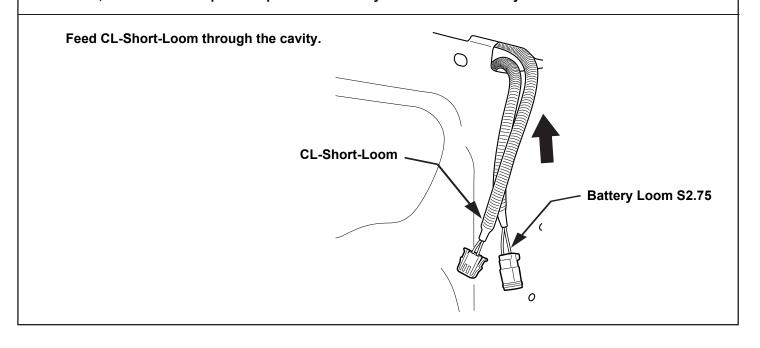

Remove required clips to gain access to wheel arch inner.

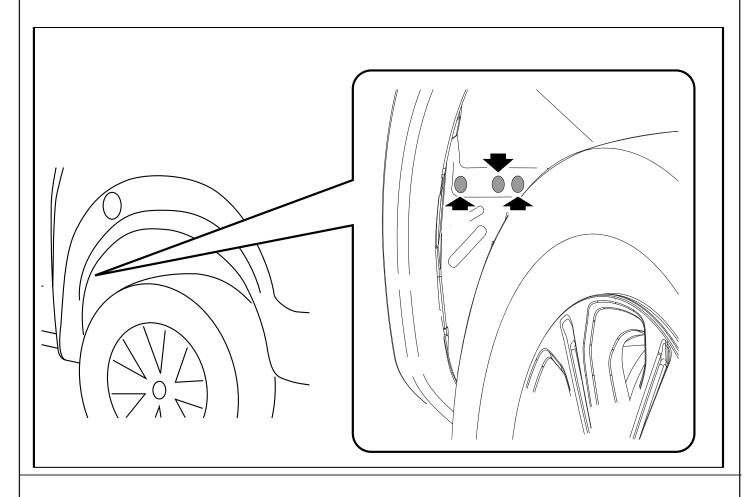

Disconnect the fuel flap connector . Patch the shorter (two grey connectors) between the two fuel flap connectors using P-Patch-K. Use one zip tie to secure the harness to the existing harness.

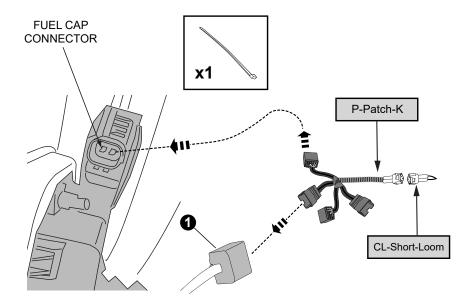



Now connect



NOTE: P-Patch-K has 2 variants connectors, one is to suit the Ranger Raptor, the other is to suit the standard Ford Ranger T6 and Mazda BT50. The un-used plugs can be connected to each other.




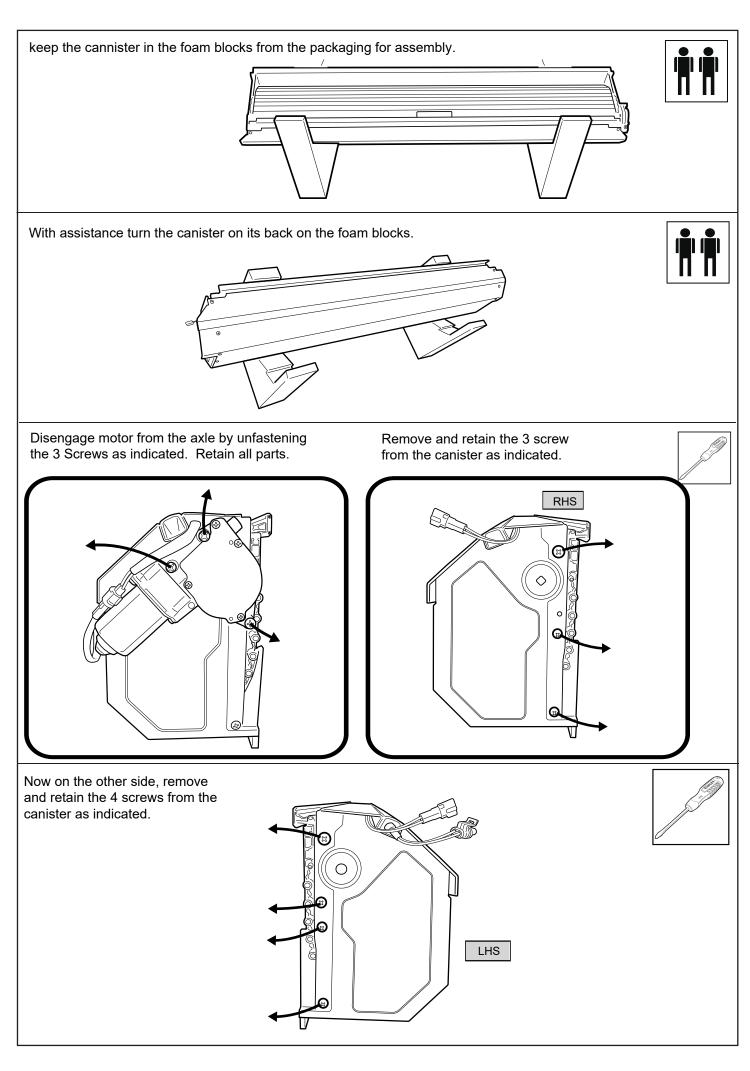


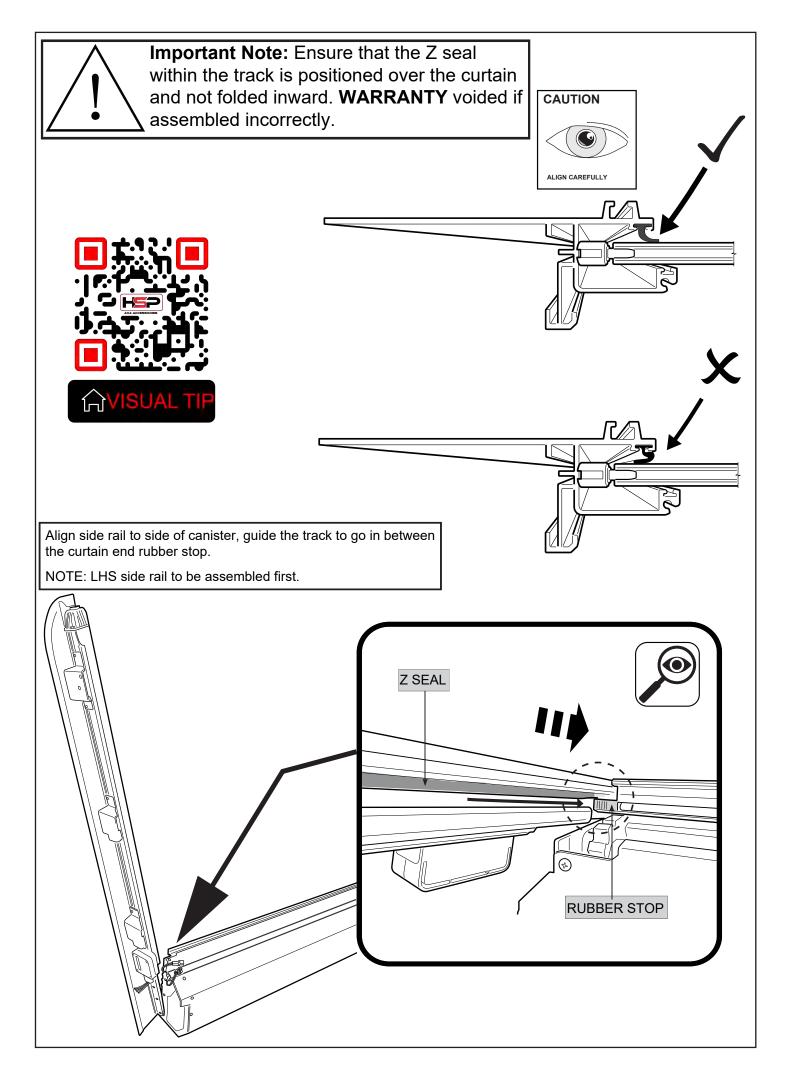



- 1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
- 2. Side rail edge must compress and meet with the canister profile as indicated below.
- 3. Fasten all screws tight.




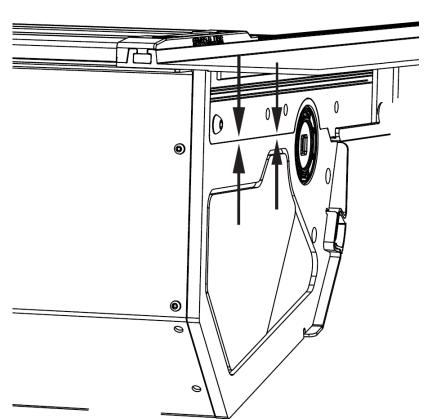

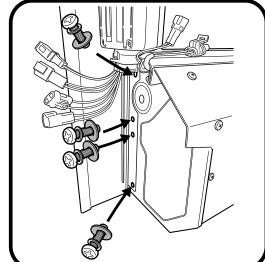


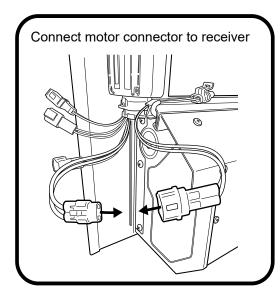


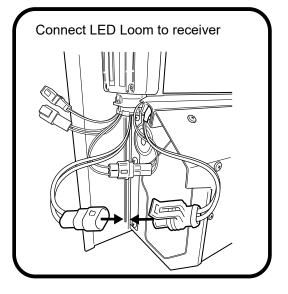

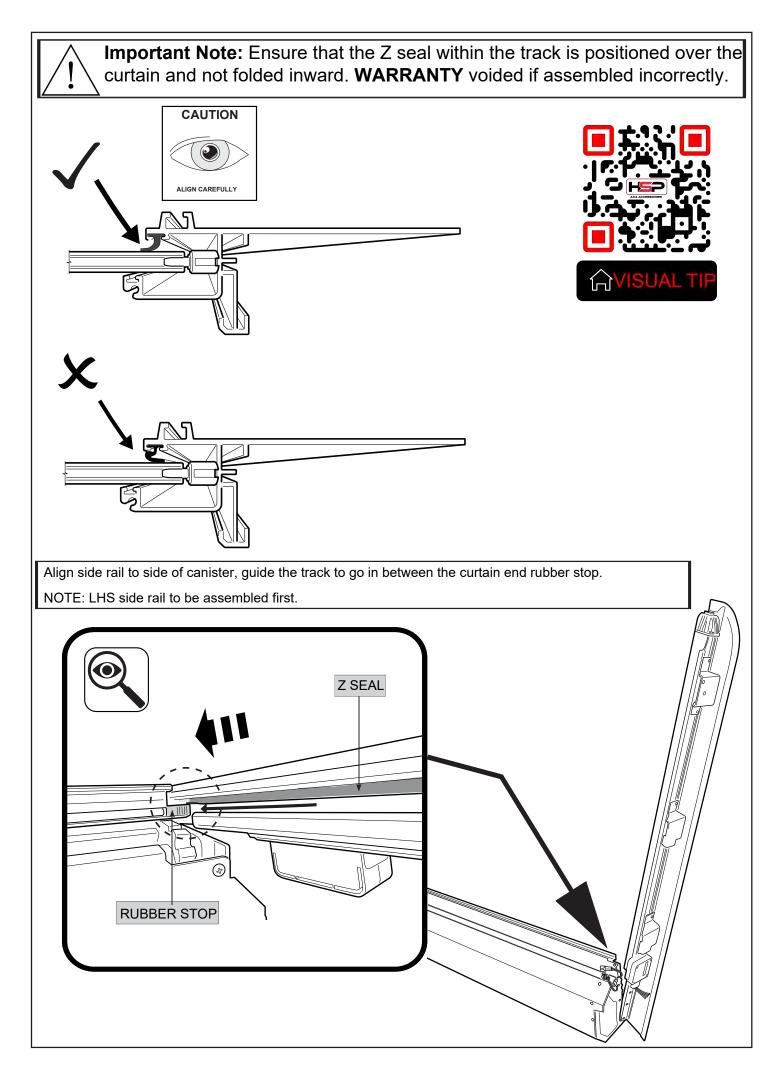

- 1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
- 2. Side rail edge must compress and meet with the canister profile as indicated below.
- 3. Fasten all screws tight.

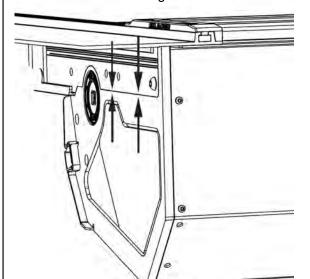

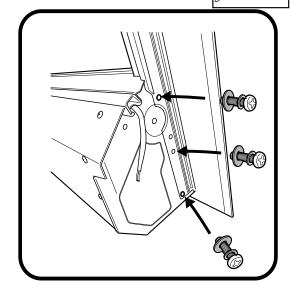


Feed M6 bolt through spring washer, motor and rubber bush.


NOTE: Rubber bush orientation has to be as per image. ( side with text on rubber, to face the motor).


M6 Spring washer

M6 Bolt


Rubber bush

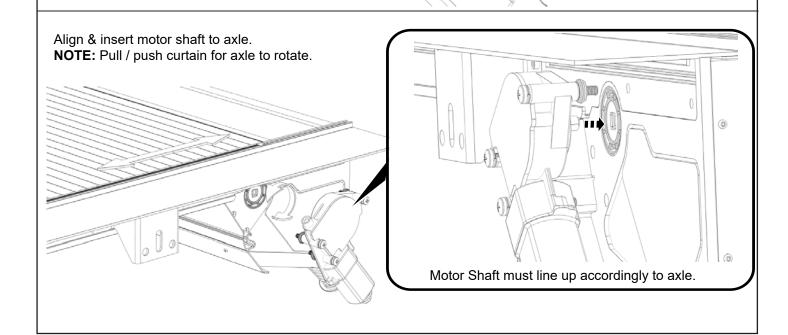

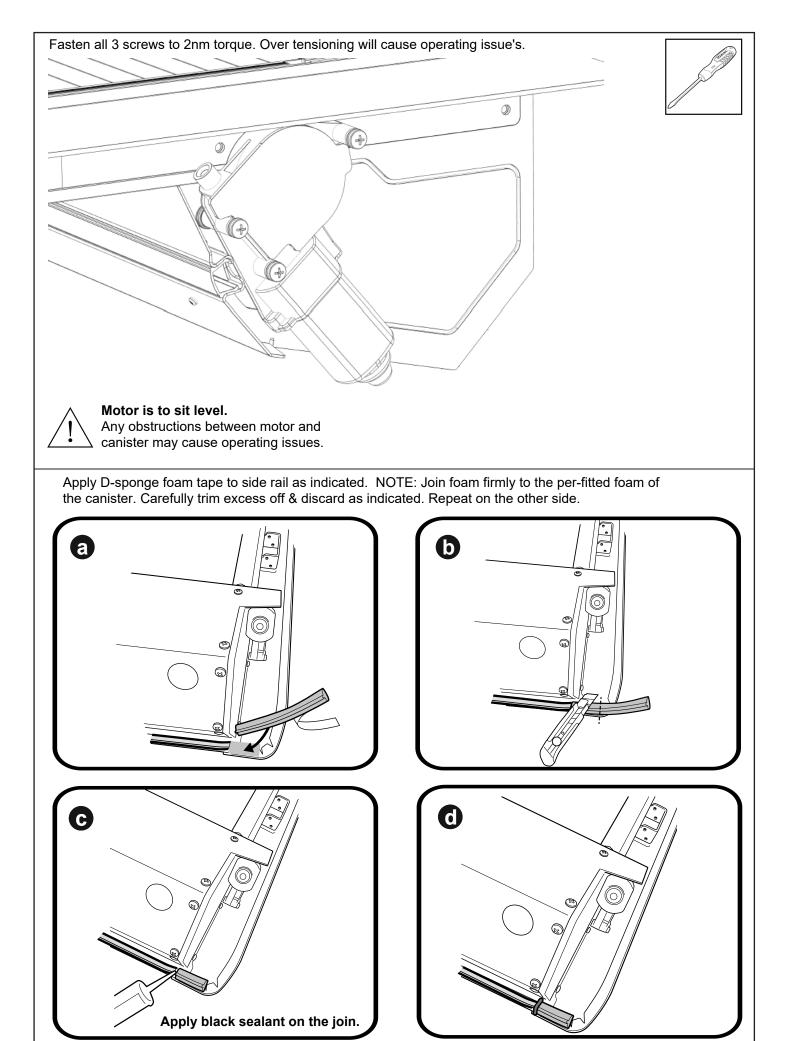


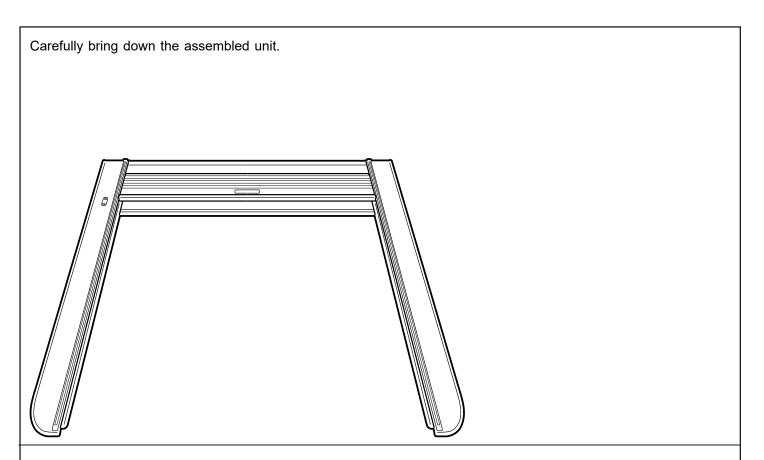

Insert side end caps to the top cover.

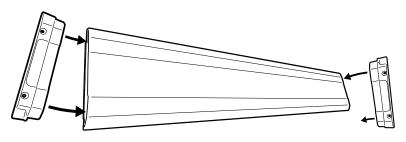



Place & Align top cover over the canister and side rails.

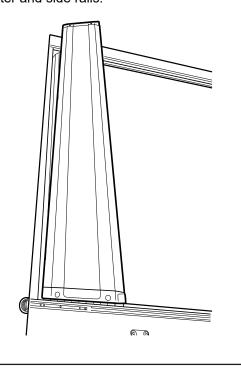



Using countersunk screws provided, line up end cap holes to the threads on the side rail.

Fasten to 3nm torque. Repeat to the other side.

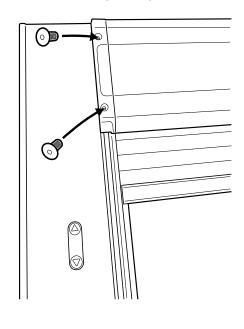


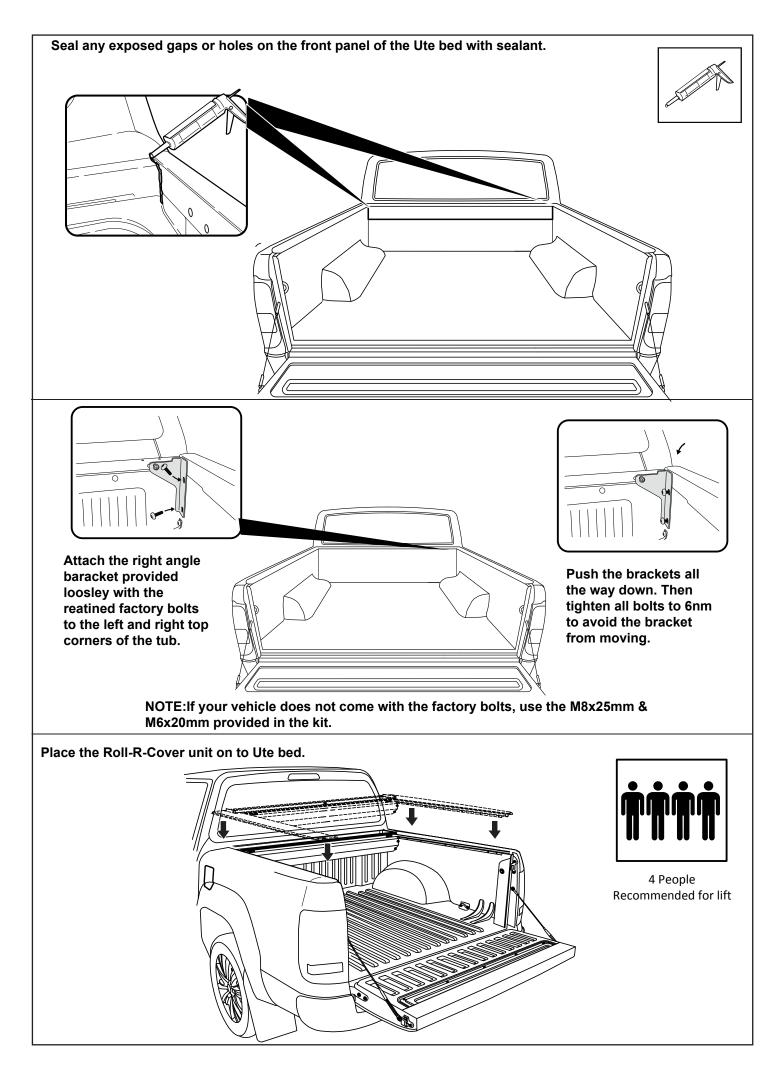

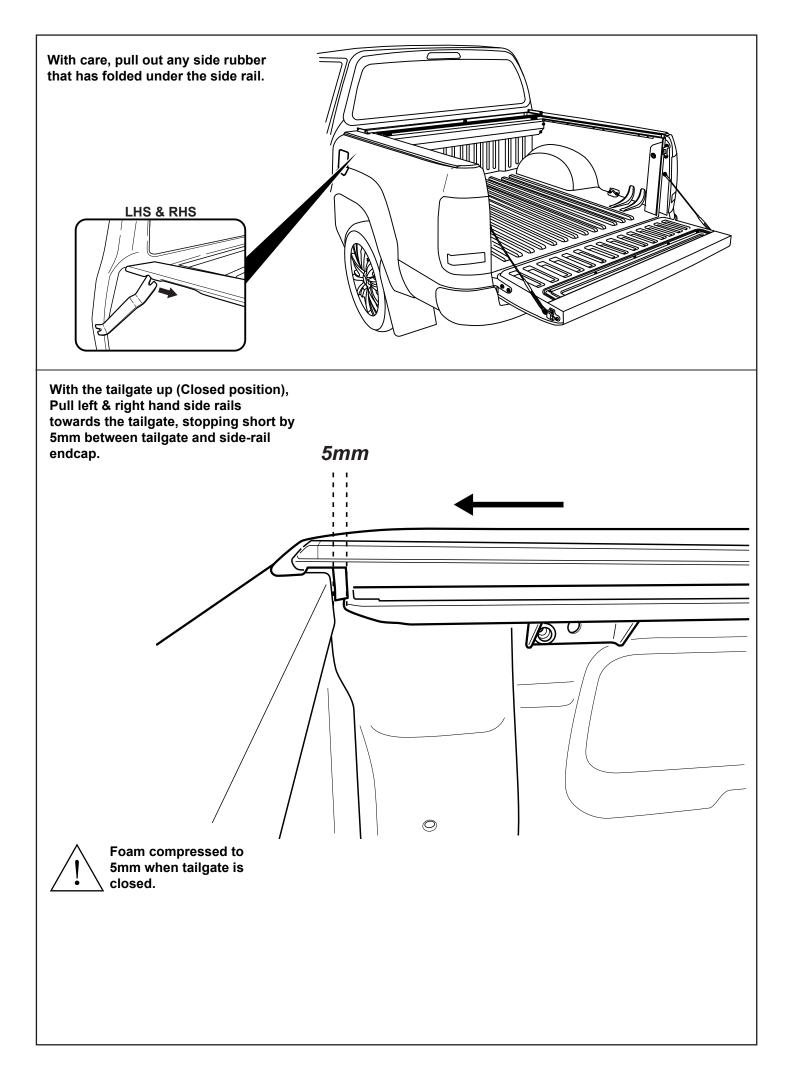

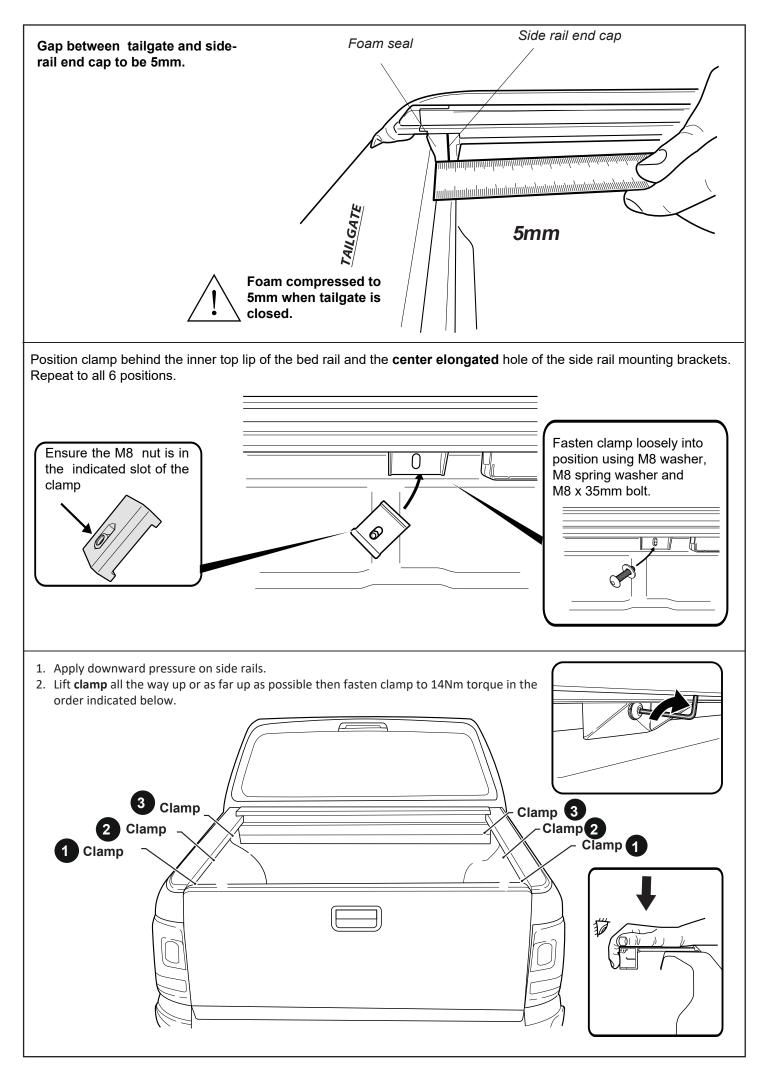


Apply flat plate behind adjusting bolt hole to the ute bed panel or to the liner if the Ute is equipped with a tub liner.

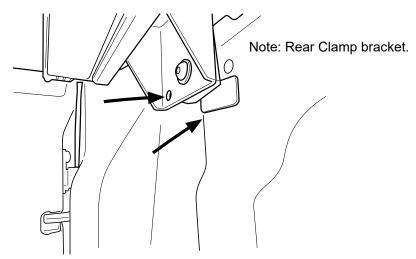





Note: Clean surface before applying flat plate.


Feed M8 nut into M8x70mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

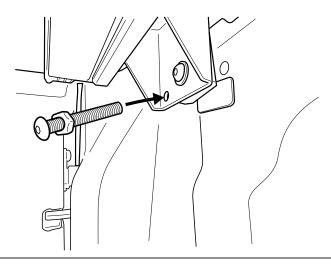


 
Side rail rubber to sit 1mm below from the top of the tailgate in the closed position.

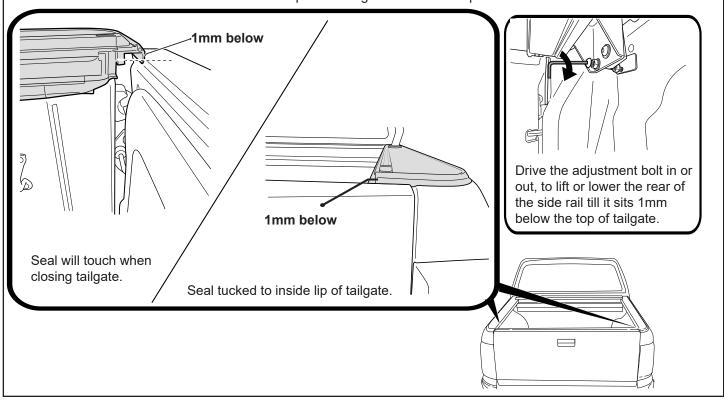

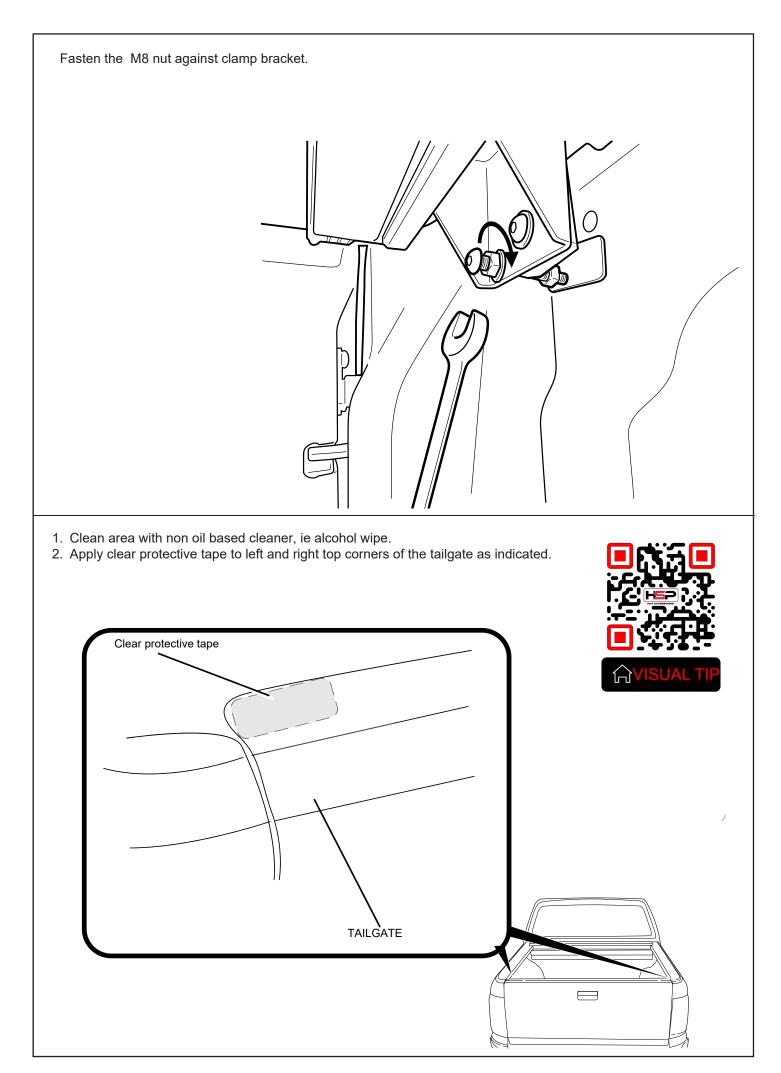

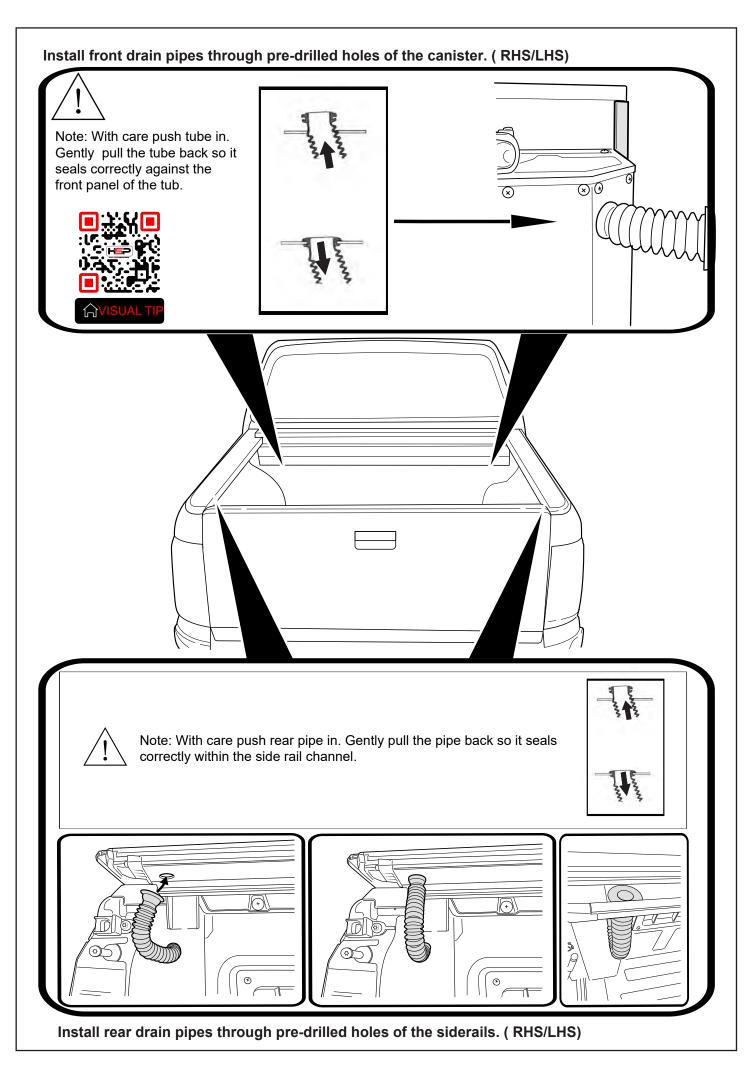



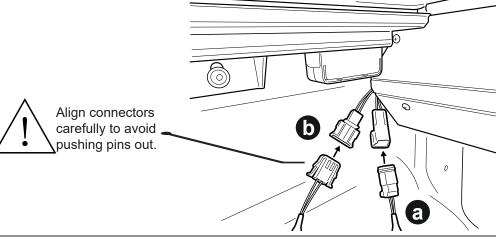


### Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

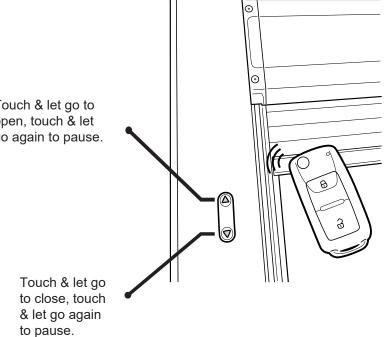

Touch & let go to open, touch & let go again to pause.



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.