

WWW.HSPUTELIDS.COM

Part No: DS4R-S3.5


INSTALLATION INSTRUCTIONS


DS RAM 1500 CREW CAB SHORT BED 5'7"





INSTALLATION TIME: 1 hours and 45 minutes (Approximately)


IMPORTANT	 Do not stand/sit or rest heavy objects on Roll R Cover Humans or animals are not to be under the closed cover at any given time Tonneau Cover is not dust or water tight If contact with volatile chemicals occur, clean Cover with mild detergent and water solution 			
Care Instructions	 Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process. 			
Maintenance	Refer to Maintenance instructions.			
Tools Required	 Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic 	 Scissors & Knife Spanner & Socket Tape measure Holesaw Filing tool 		 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool
PERSONAL PROTECTIVE EQUIPMENT:		Rubber Gloves	Goggles	Hearing Protection

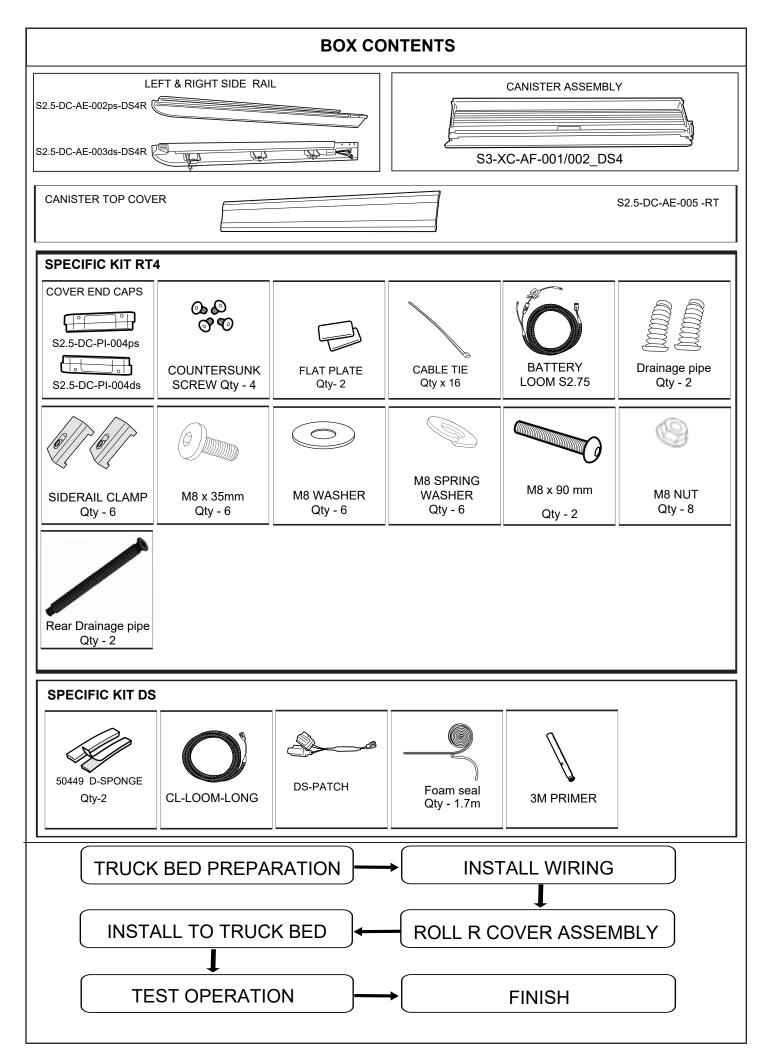


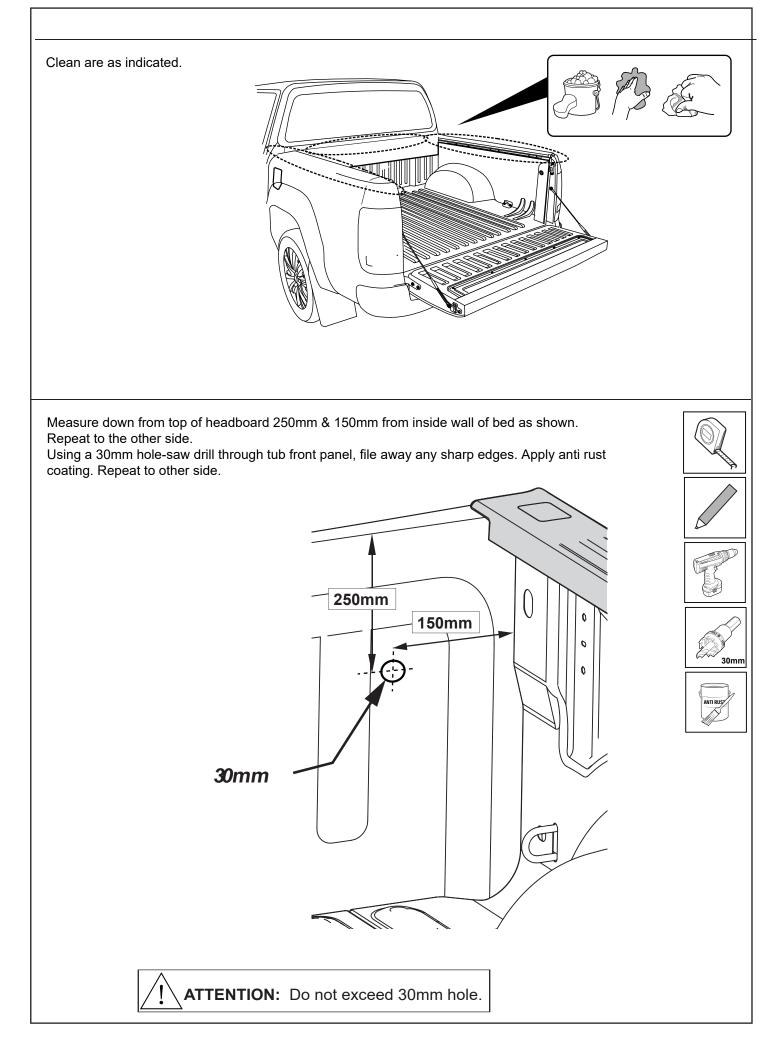


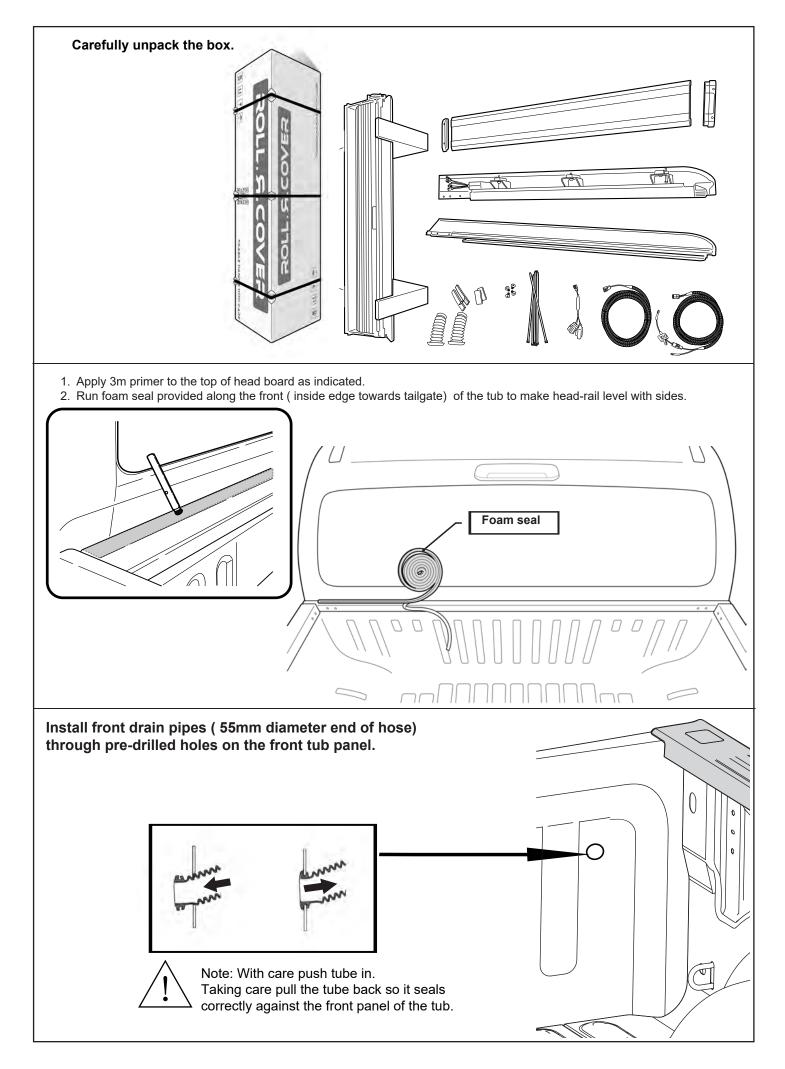


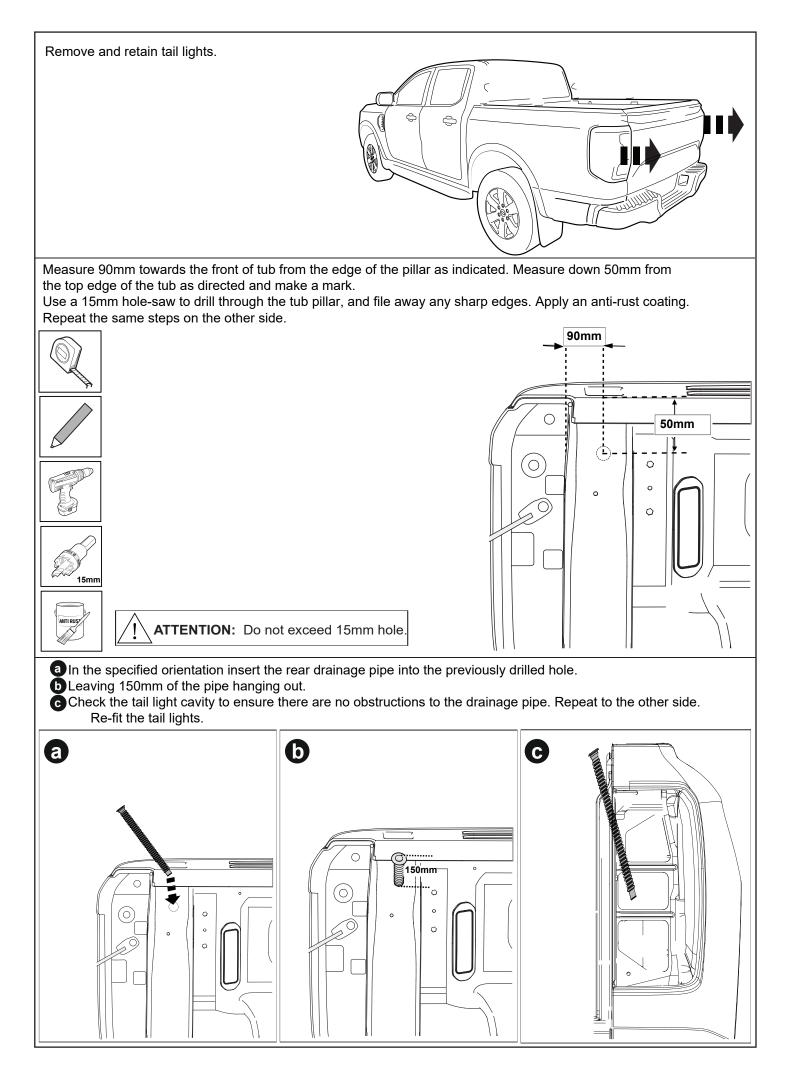


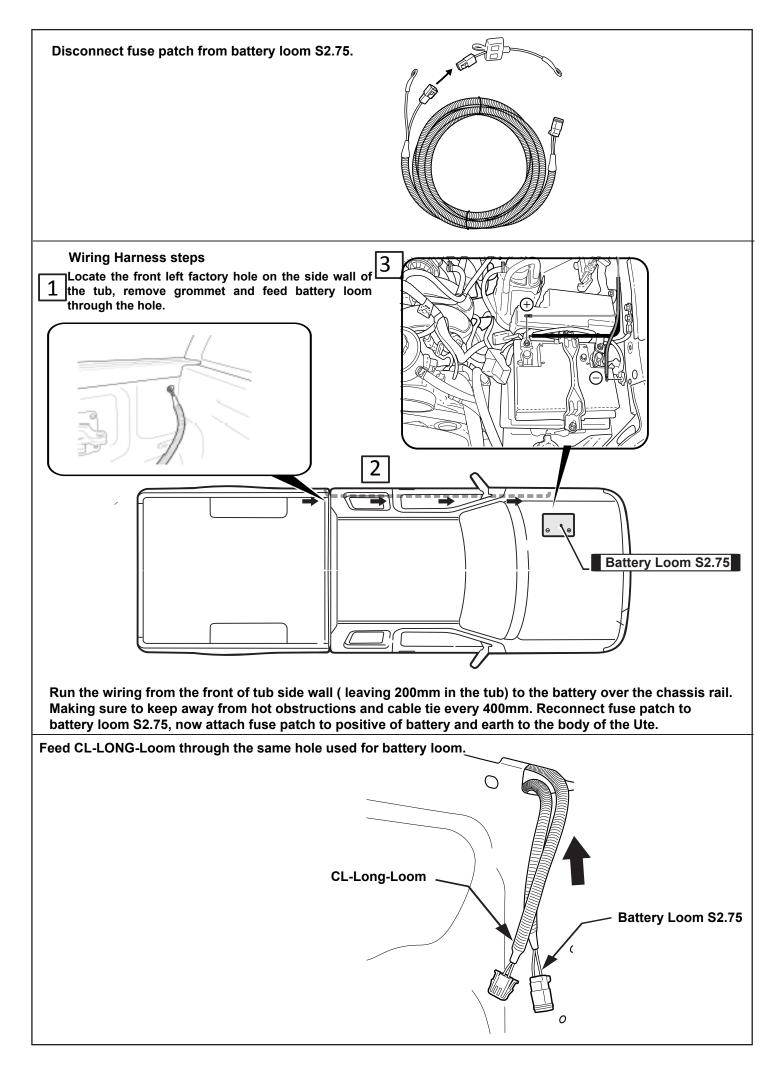

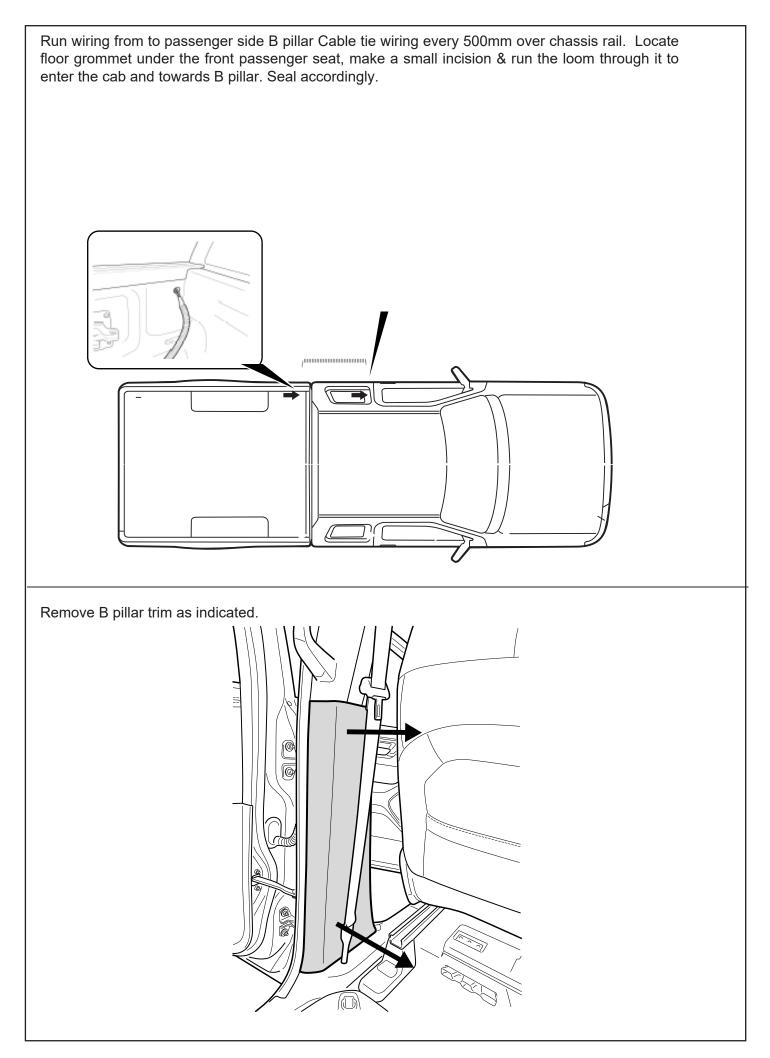


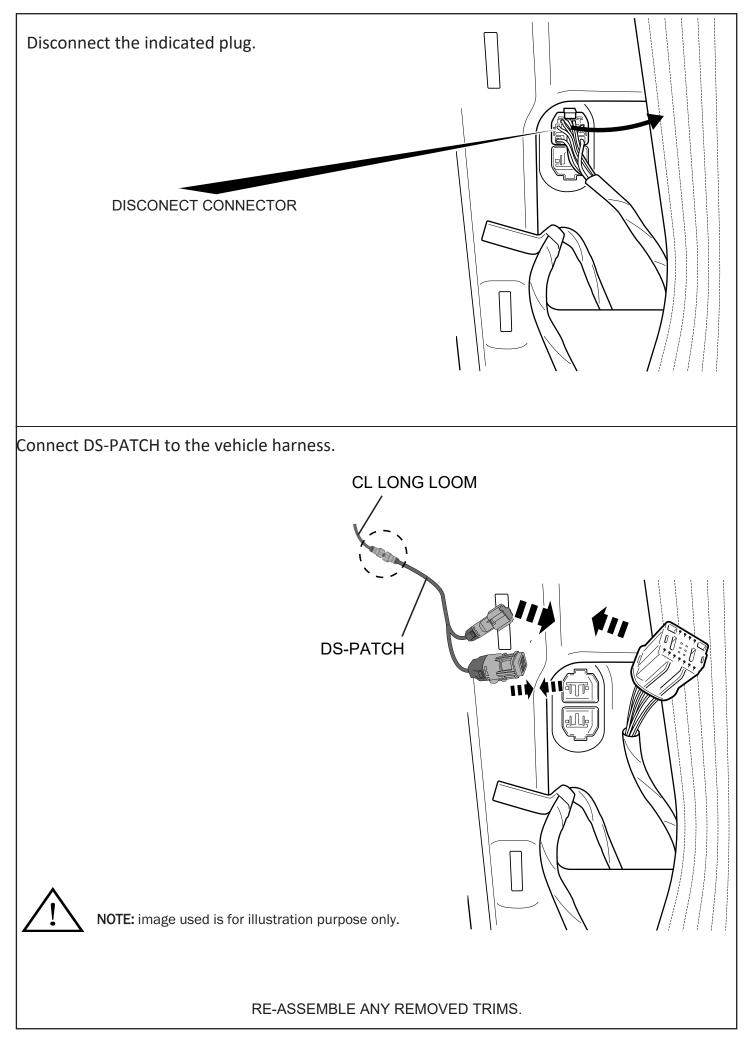


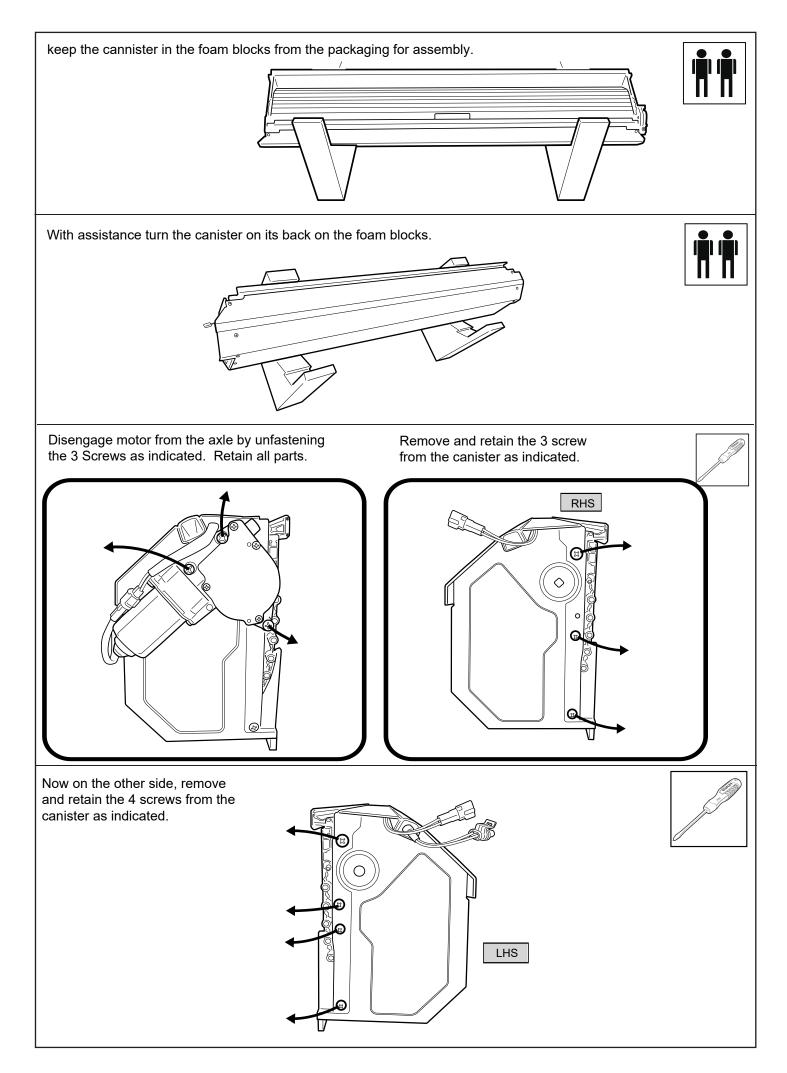


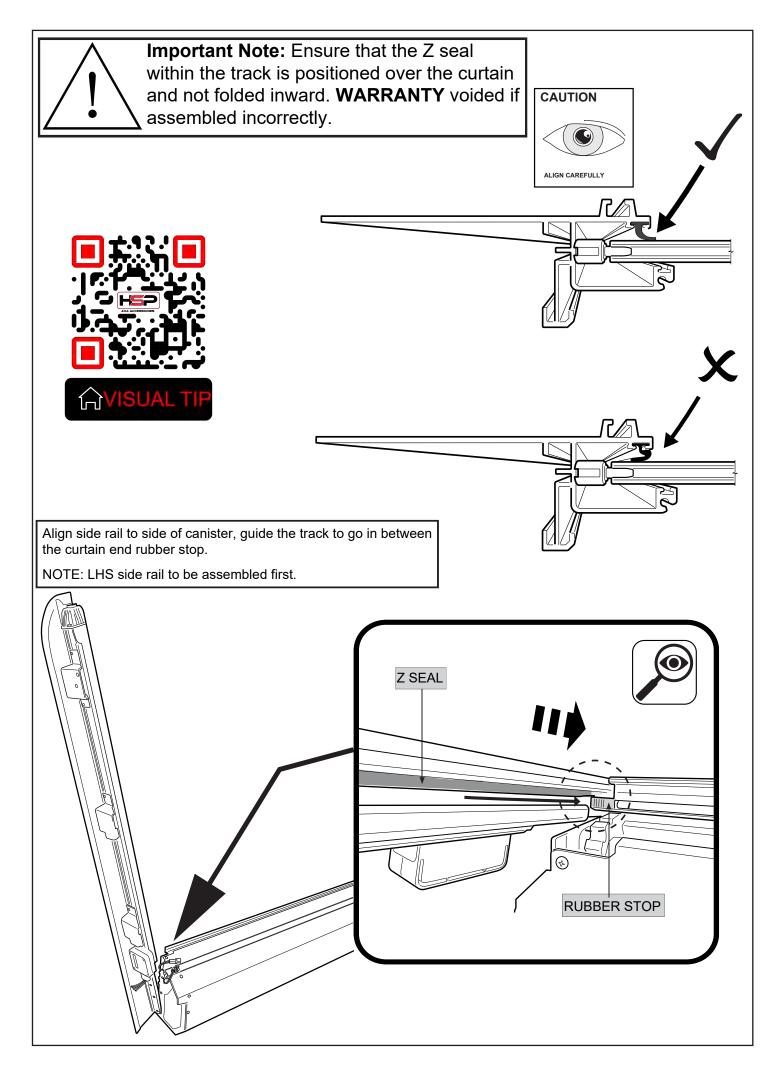



- 1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
- 2. Side rail edge must compress and meet with the canister profile as indicated below.
- 3. Fasten all screws tight.

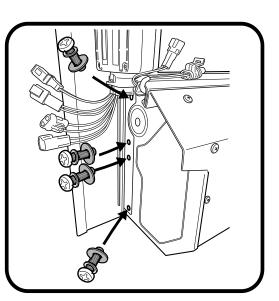


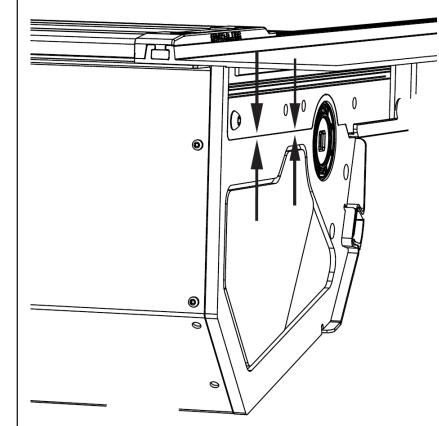


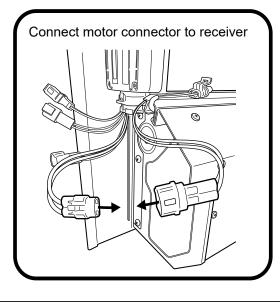


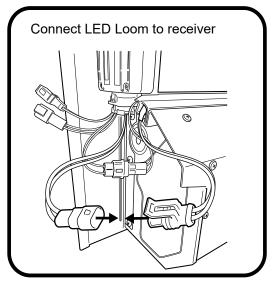


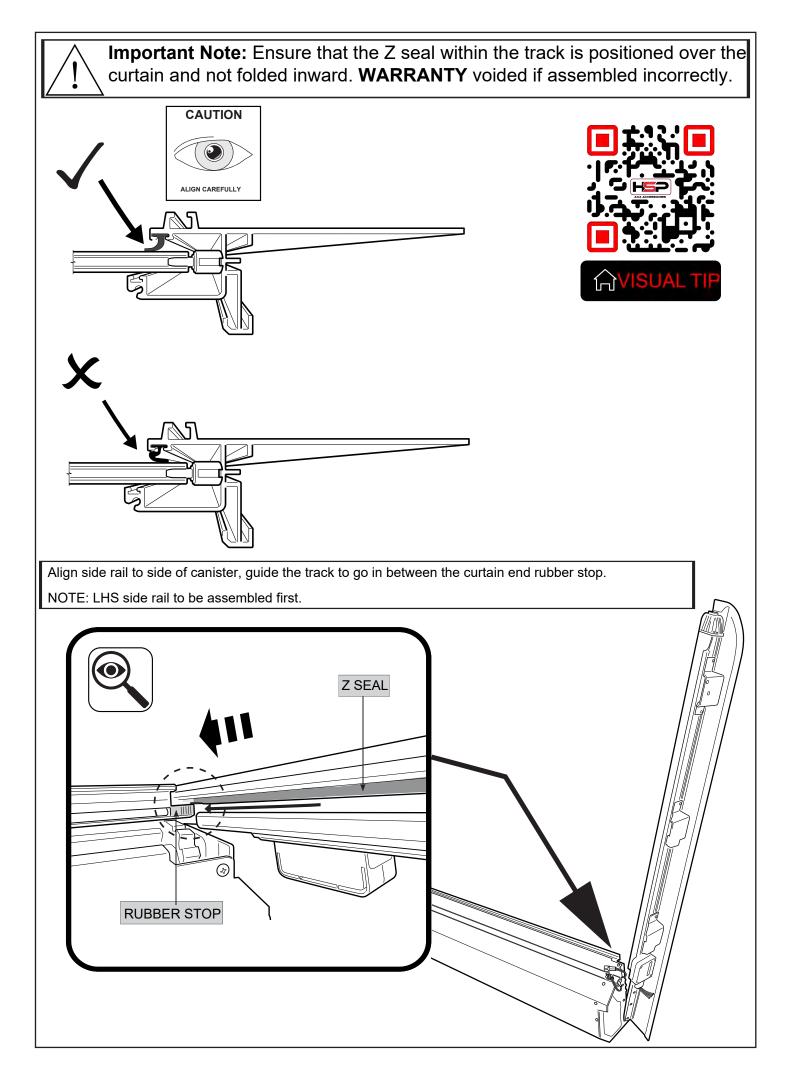


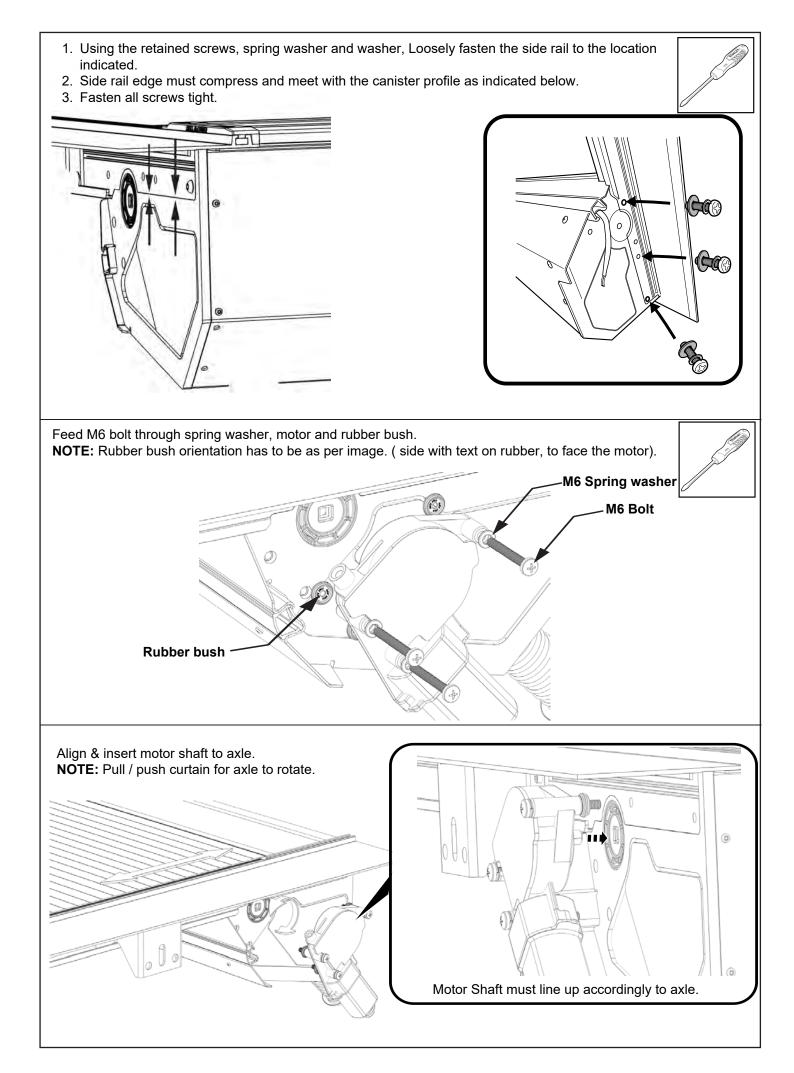


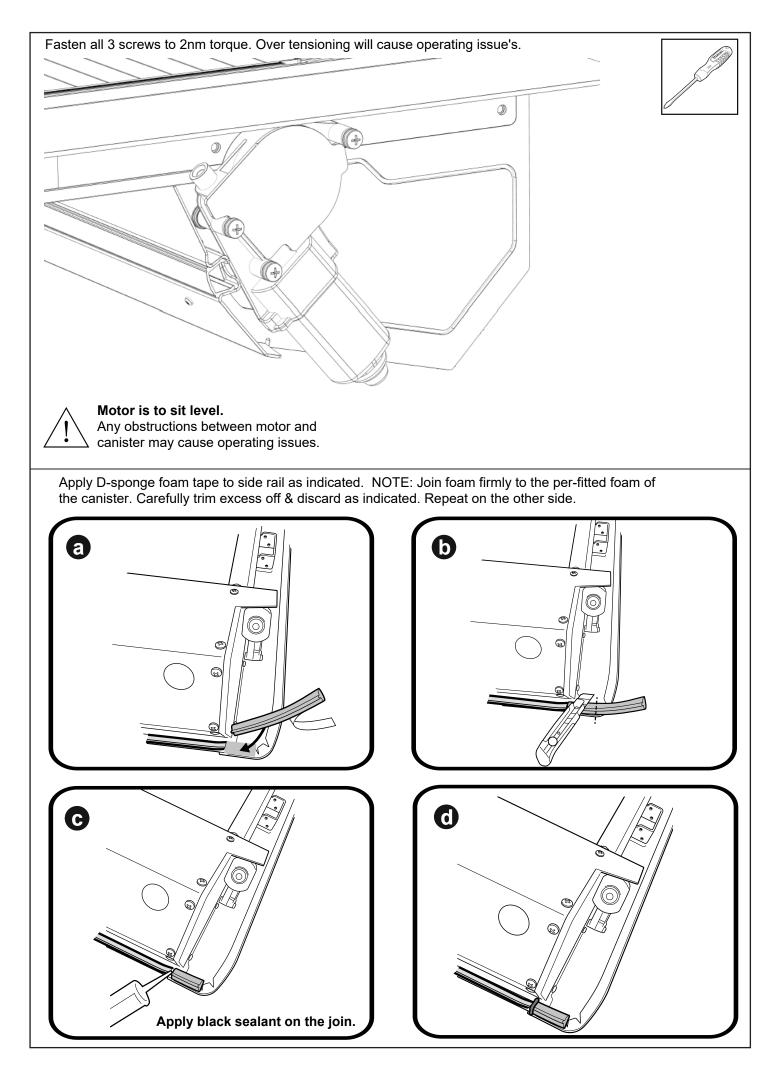


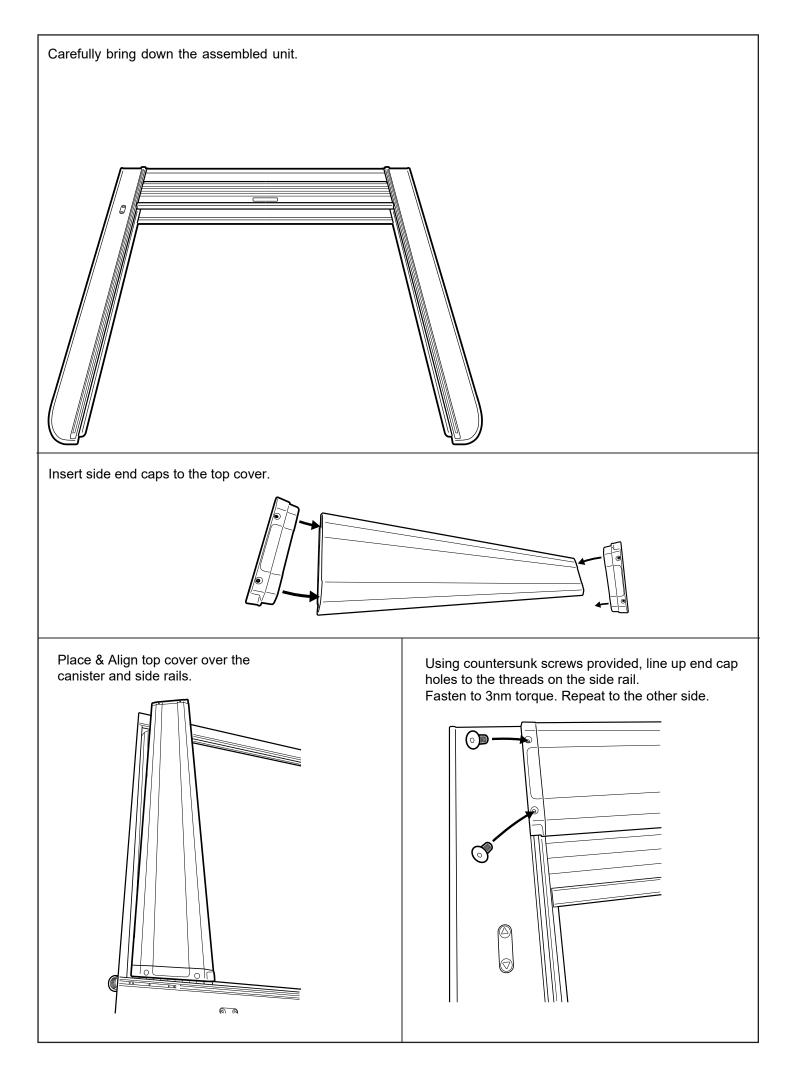


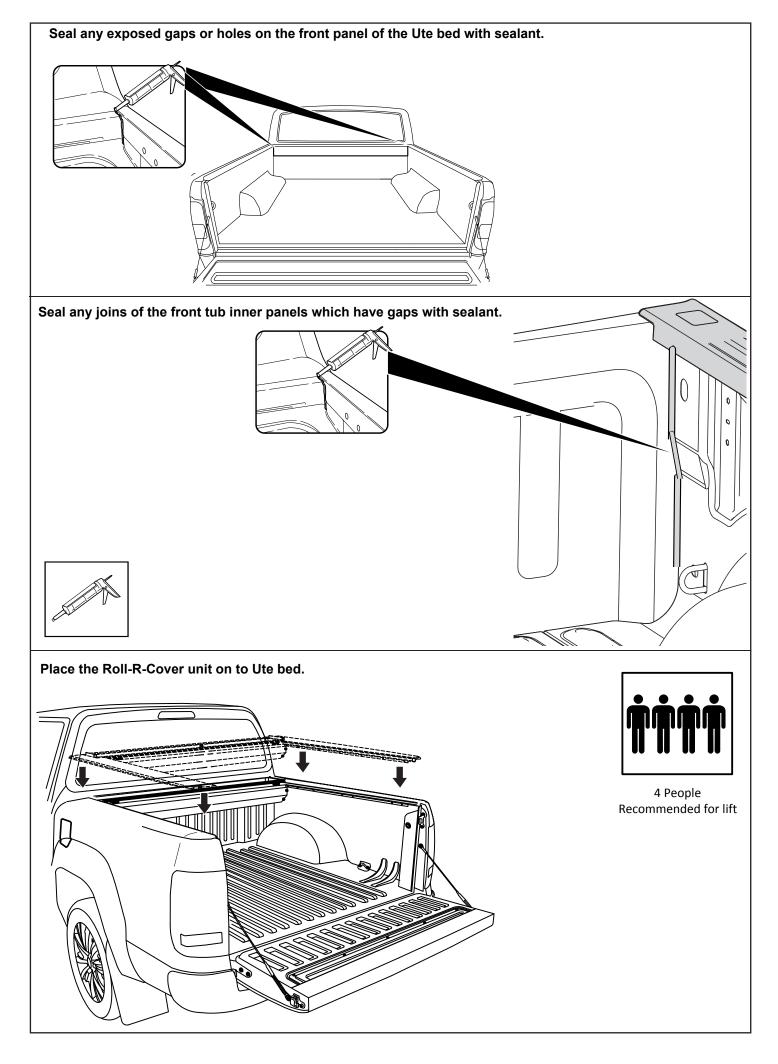

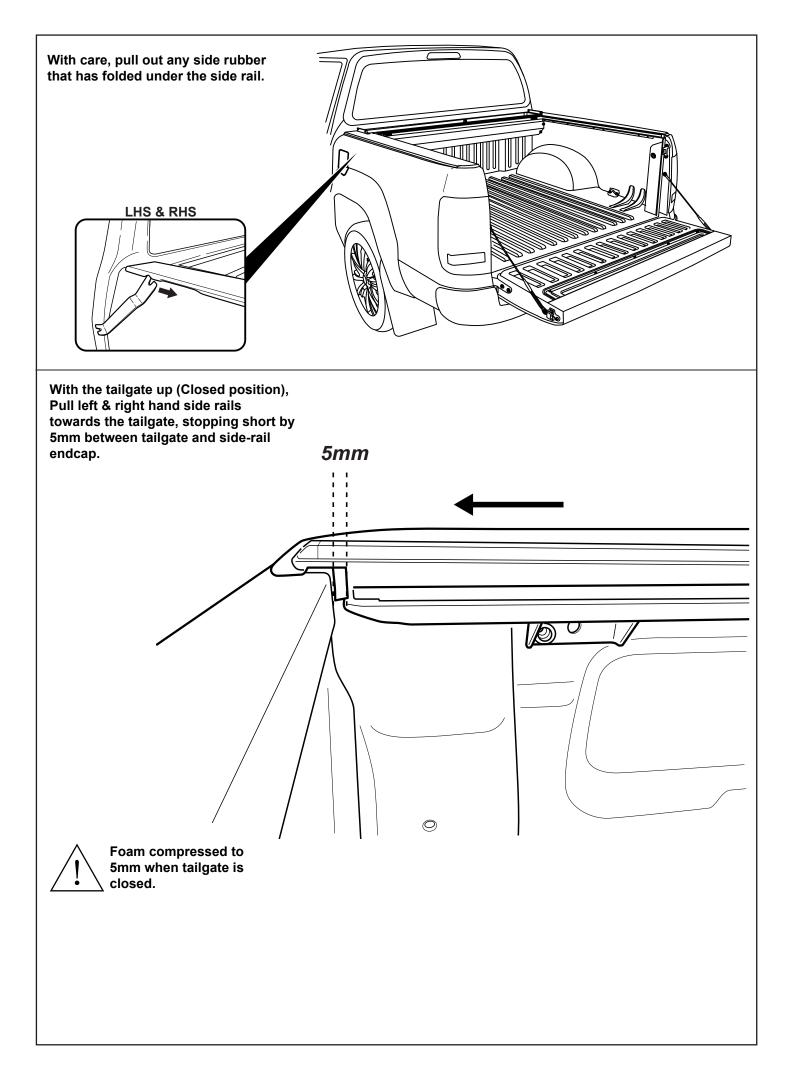


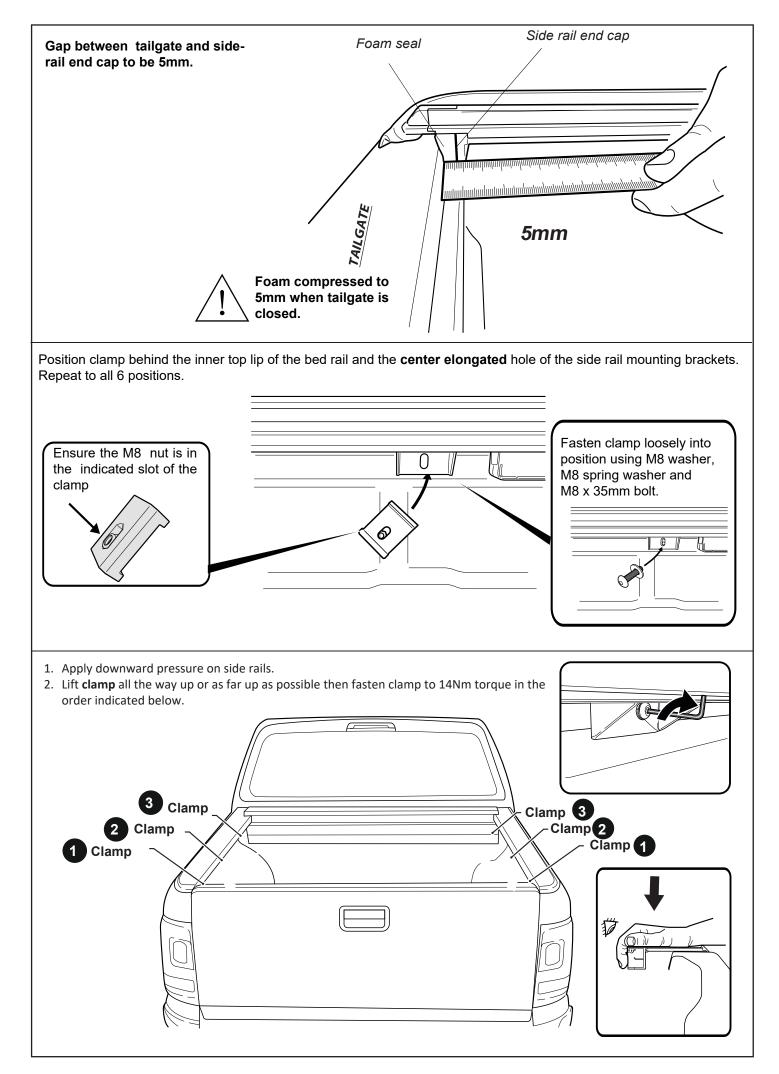

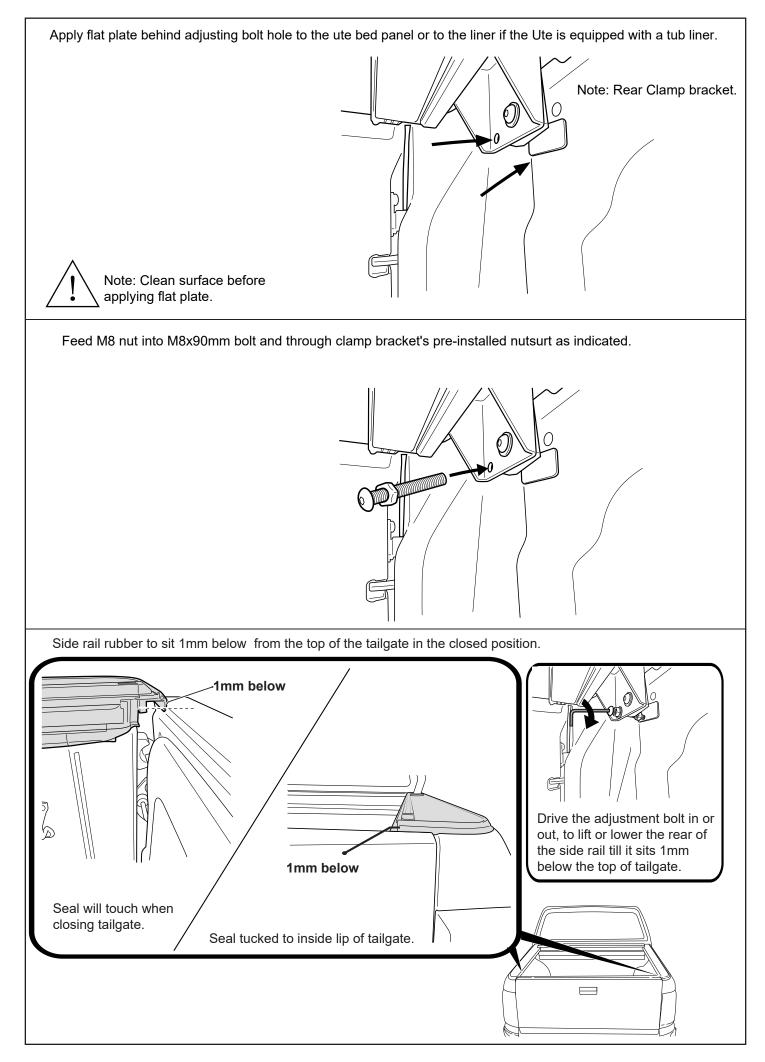


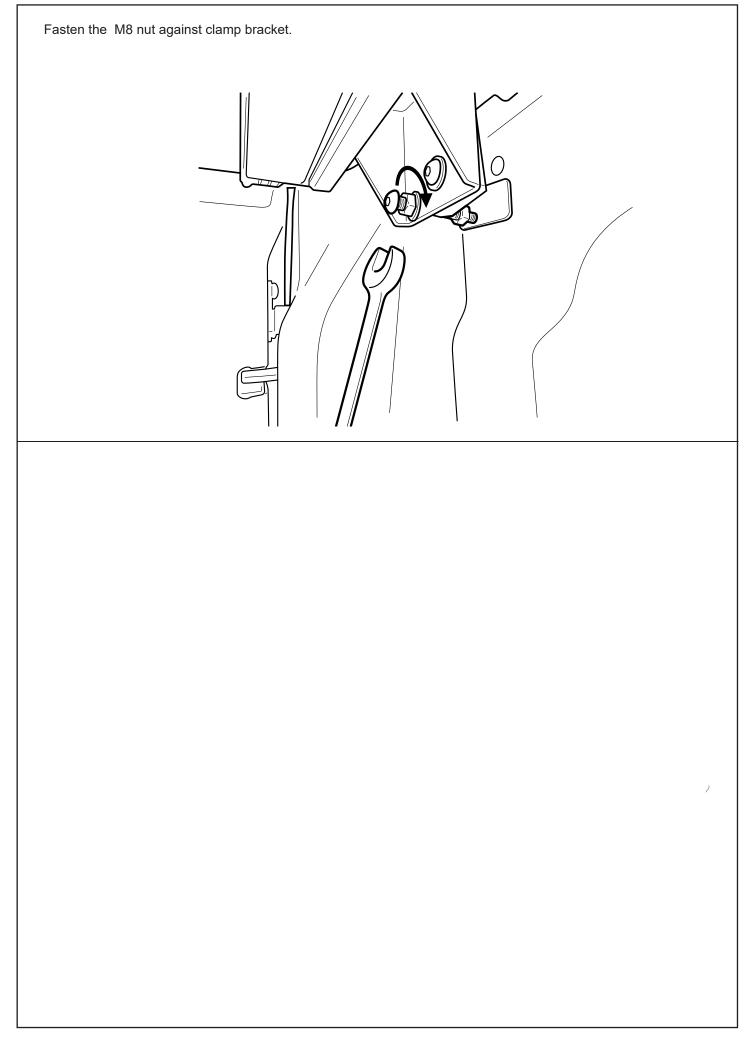

Install front drain pipes through pre-drilled holes of the canister. (RHS/LHS)

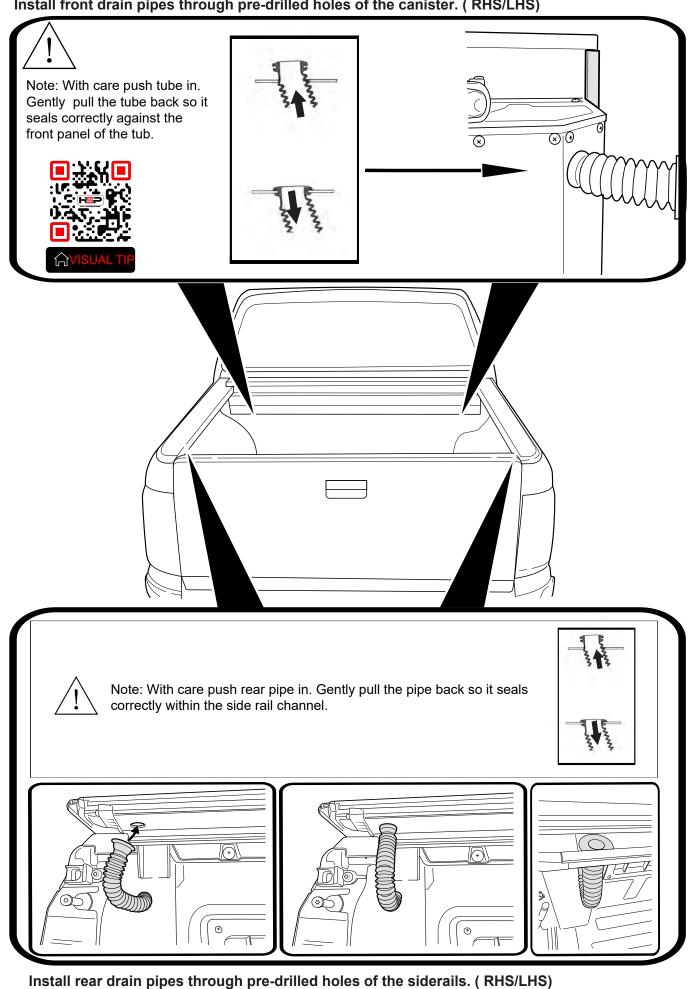

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect CI-Loom-short to Receiver loom.

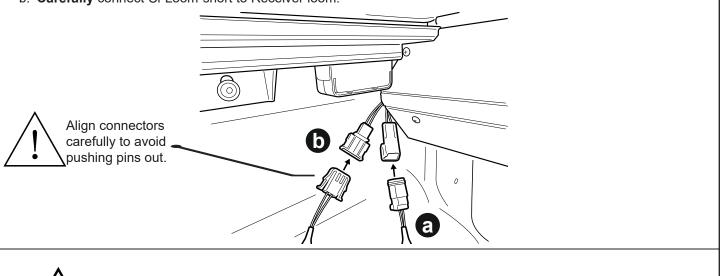



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller. When vehicle is unlocked the side rail sensor buttons will be active to control. When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.

Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

