

WWW.HSPUTELIDS.COM

Part No: H4R-S3.5

INSTALLATION INSTRUCTIONS

Vehicle Model: To suit Toyota Hilux Revo 2016+ Dual Cab





INSTALLATION TIME: 2 Hours (Approximately)

IMPORTANT	Do not stand/sit or rest heavy objects on Roll R Cover Humans or animals are not to be under the closed cover at any given time Tonneau Cover is not dust or water tight If contact with volatile chemicals occur, clean Cover with mild detergent and water solution		
Care Instructions	Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process.		
Maintenance	Refer to Maintenance instructions.		
Tools Required	Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic	Scissors & KnifeSpanner & SocketTape measureHolesawFiling tool	 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool

PERSONAL PROTECTIVE EQUIPMENT:









Rubber Gloves


Hearing Protection

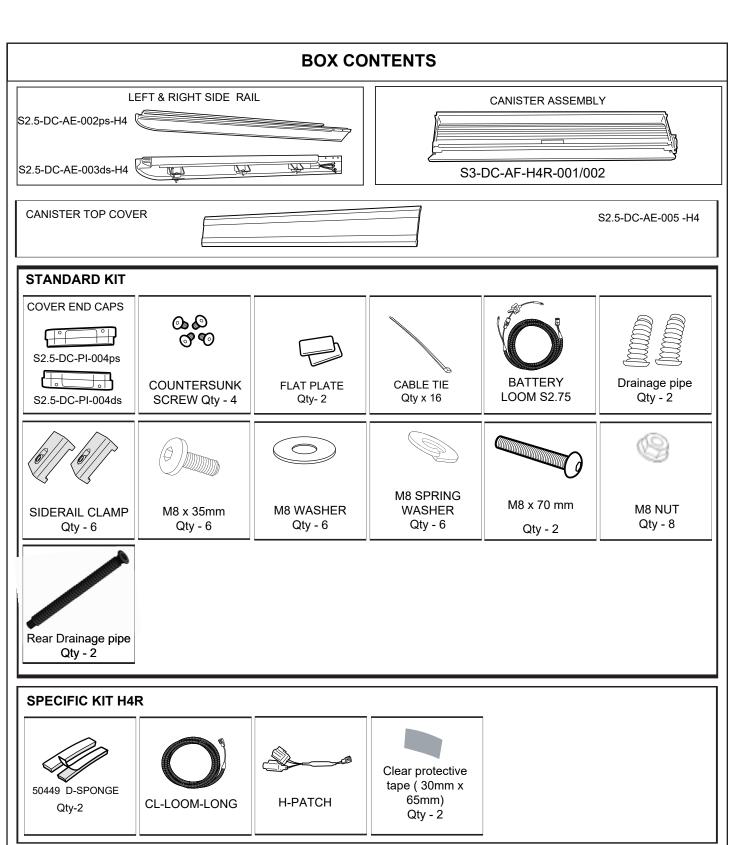

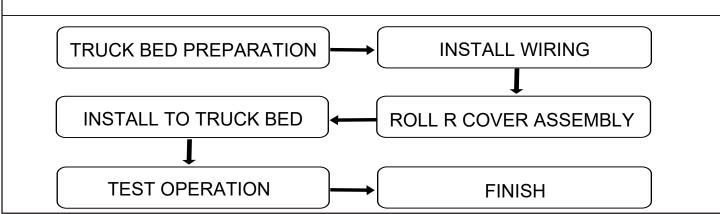



TUB PREPARATION


If the Vehicle is fitted with a cabin guard or sports styling bar, remove from Ute Tub (truck bed).

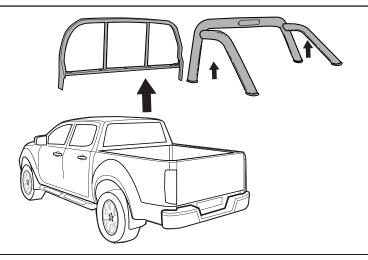


Clean are as indicated.

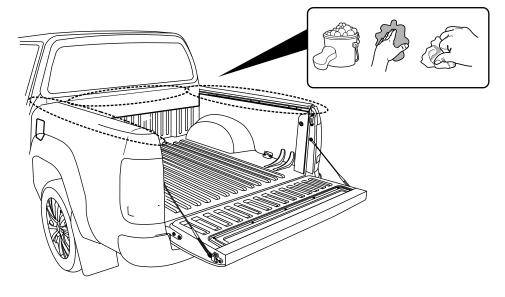

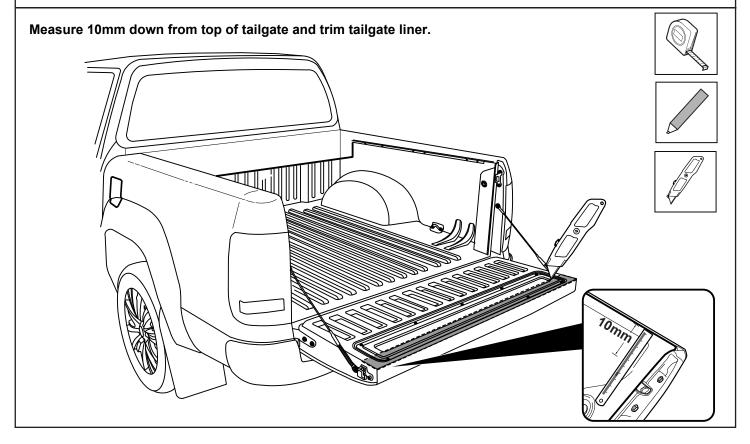

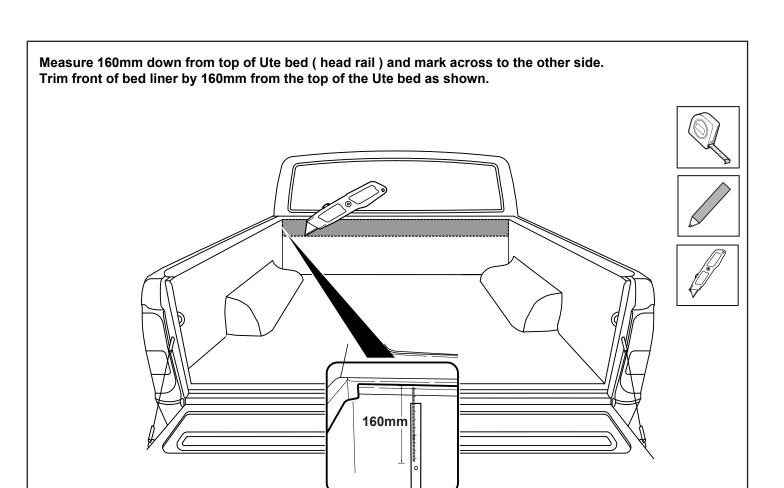

Cut a 20mm split for bed liner to flex.

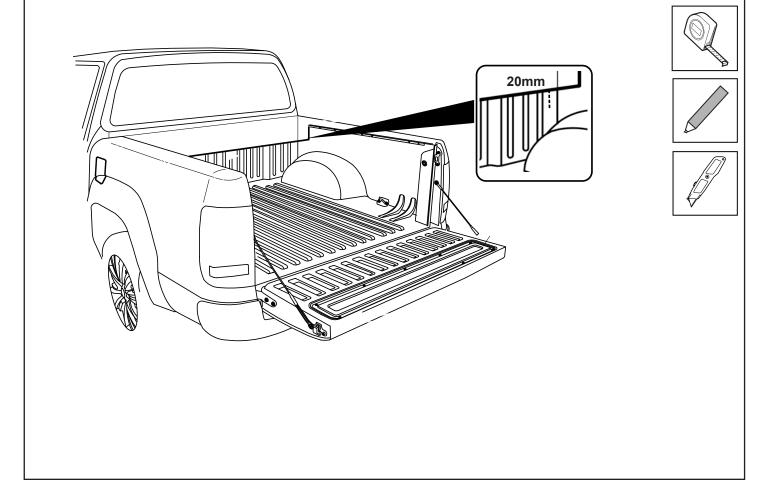


Measure down from top of assembly bar 200mm & 135 mm from inside wall of bed liner as shown. Repeat to the other side. Using a 50mm hole-saw drill the liner only as indicated.










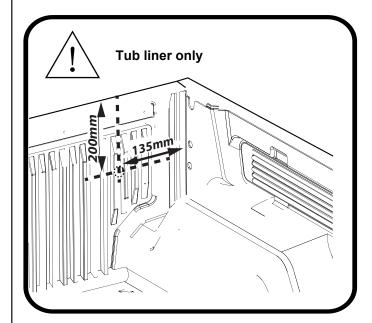

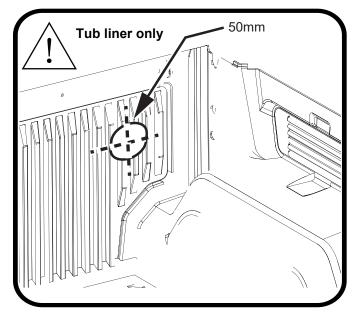

Measure down from top of headboard 200mm & 135mm from inside wall of bed as shown. (or 95mm if measuring from the side of the top rail) Repeat to the other side. Using a 30mm hole-saw drill through tub front panel, file away any sharp edges. Apply anti rust coating. Repeat to other side.




 










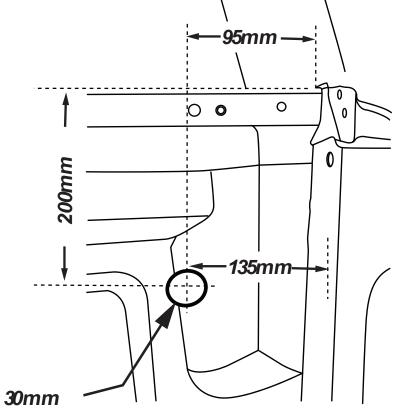



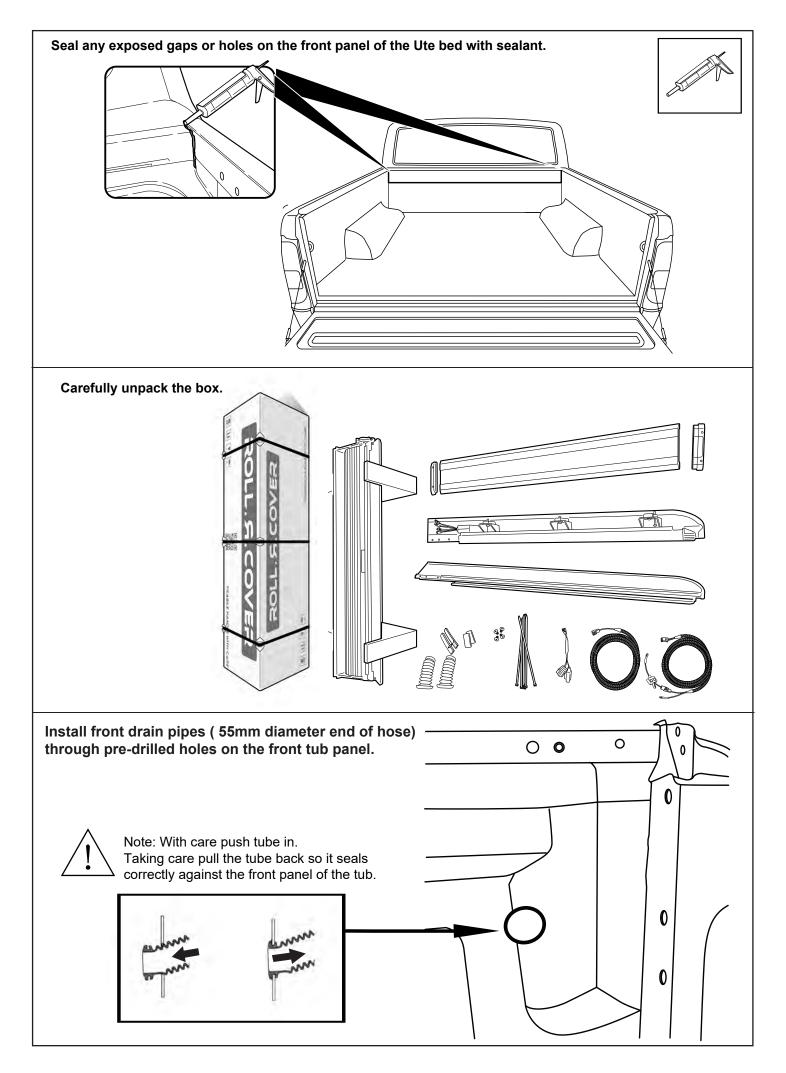


Remove and retain tail lights.

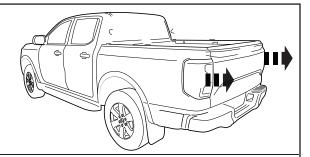



Measure 70mm towards the rear of tub from the center of the indicated factory tie down bolt. Measure up 30mm from the indicated factory tie down bolt as directed and make a mark.

Use a 15mm hole-saw to drill through the tub inner panel only, and file away any sharp edges. Apply an anti-rust coating. Repeat the same steps on the other side.

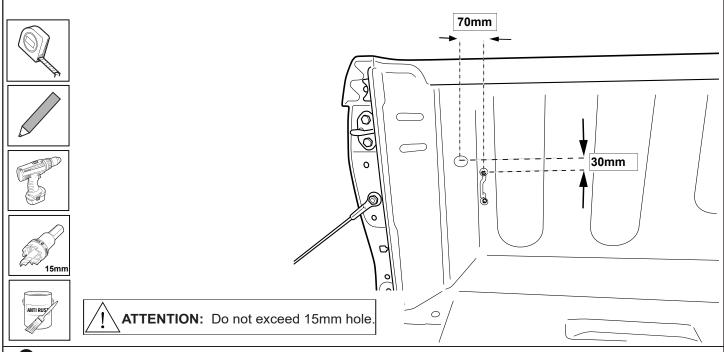


- a In the specified orientation insert the rear drainage pipe into the previously drilled hole.
- **b** Leaving 250mm of the pipe hanging out.
- Check the tail light cavity to ensure there are no obstructions to the drainage pipe. Repeat to the other side. Re-fit the tail lights.

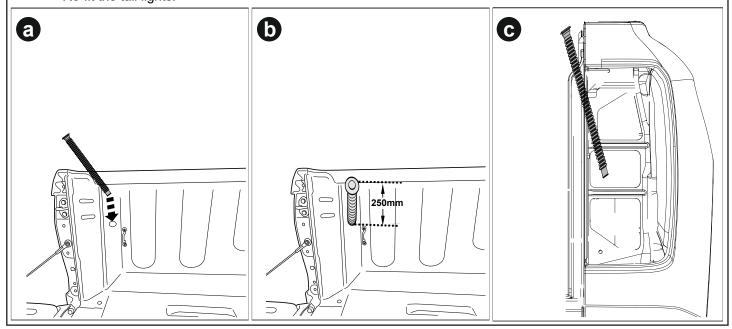


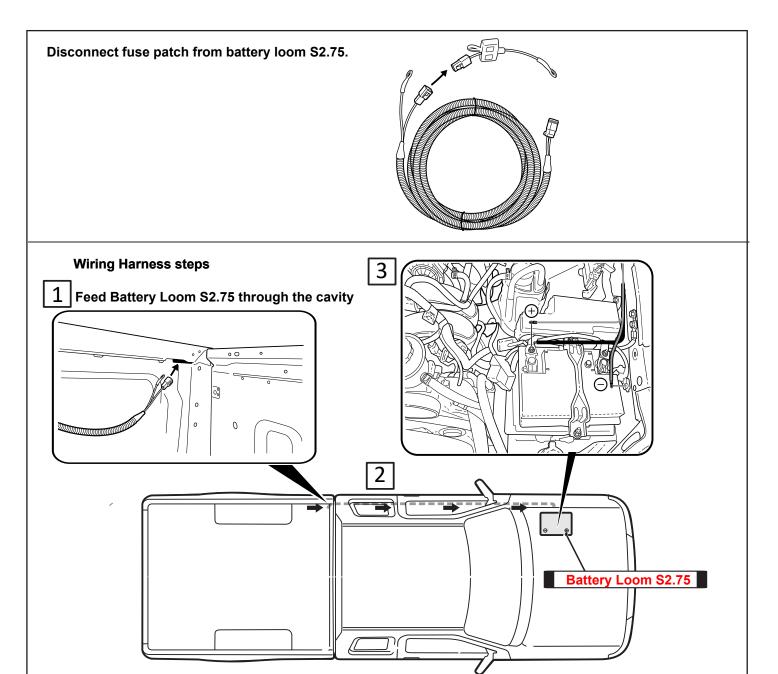

Run the wiring from the front corner cavity (leaving 200mm in the tub) to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm. Reconnect fuse patch to battery loom S2.75, now attach fuse patch to positive of battery and earth to the body of the Ute.

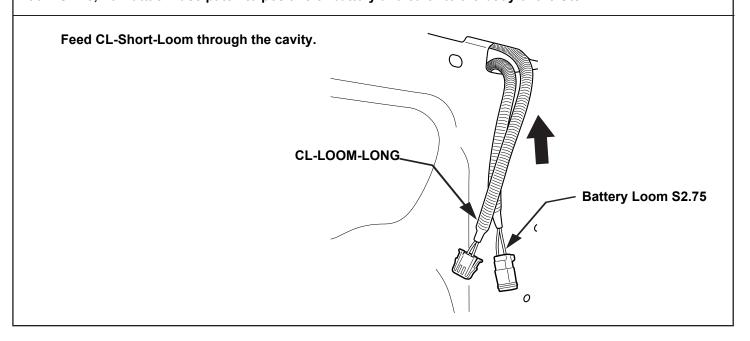


Run wiring from front tub corner cavity to passenger side kick panel. Cable tie wiring every 500mm over chassis rail. Find the large grommet on the firewall, make a small incision & run the loom through it to enter the cab and towards the kick panel. Seal accordingly.

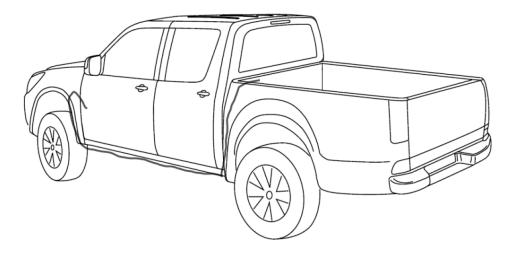


At the front passenger side foot well area:


- Remove front passenger scuff plate (1)
- Remove the kick panel trim nut (2)
- Remove the kick panel (3)

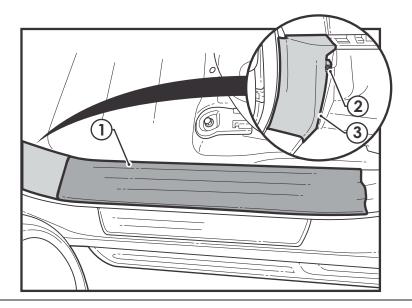


Disconnect 20 way connector as indicated.

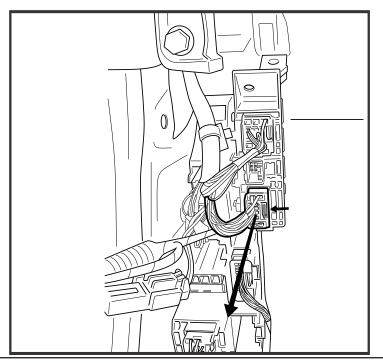



- Connect H-patch 20 way male connector to vehicle's female housing.
 Connect vehicles 20 way connector to H-patch female housing.

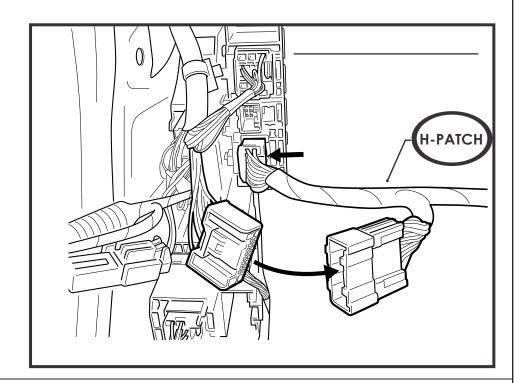

Connect H-PATCH loom to CL-LOOM-LONG

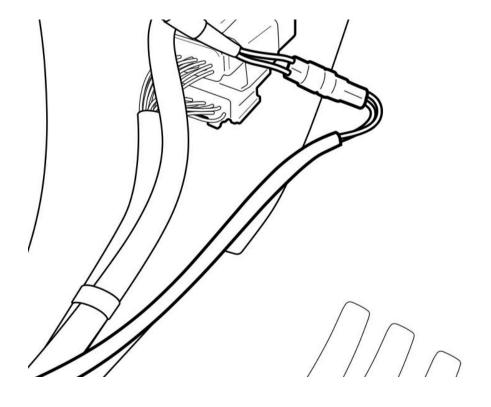


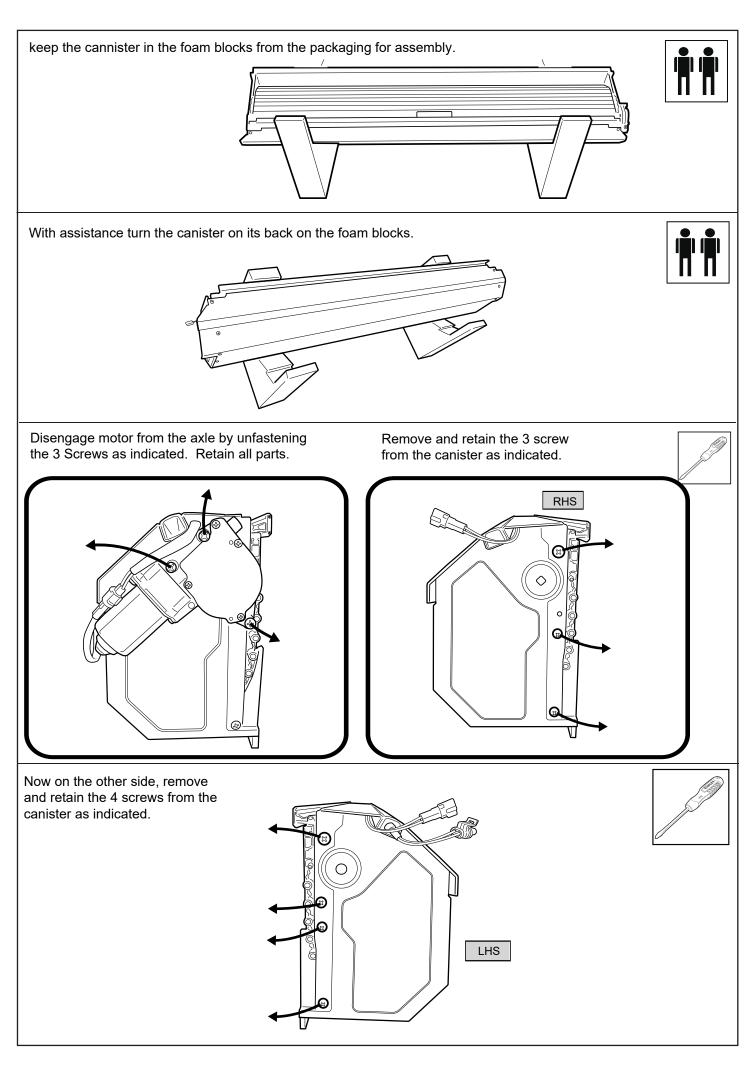


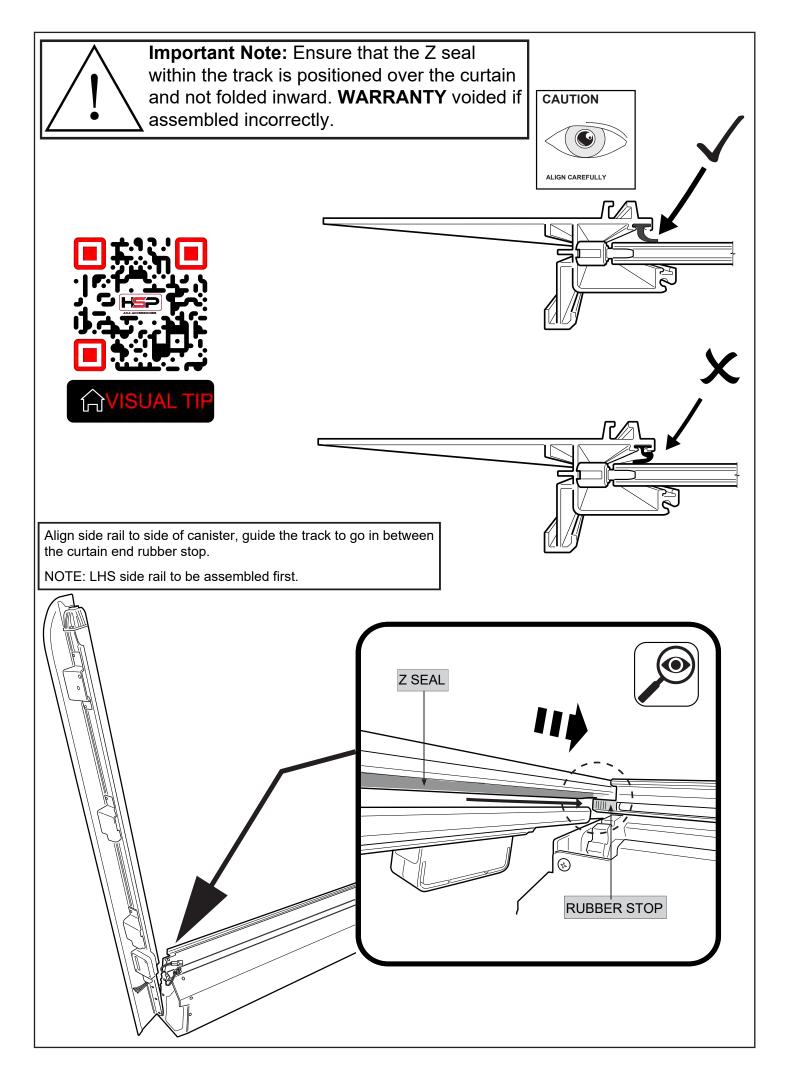



- 1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
- 2. Side rail edge must compress and meet with the canister profile as indicated below.
- 3. Fasten all screws tight.




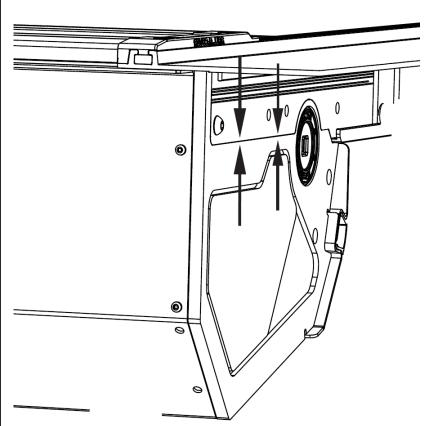

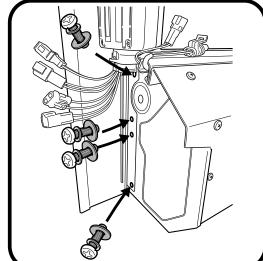


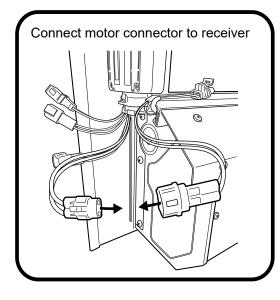


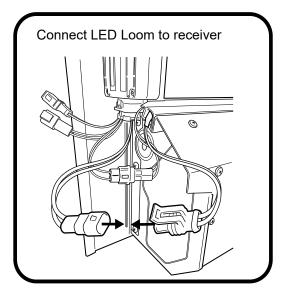

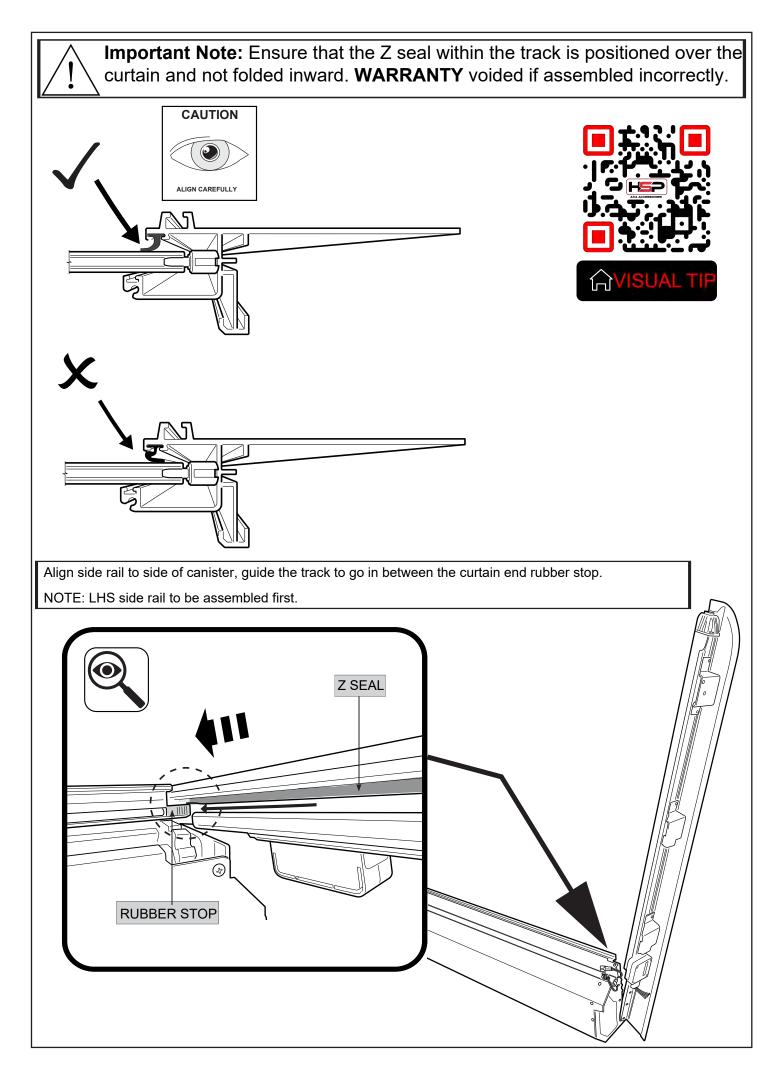

- 1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
- 2. Side rail edge must compress and meet with the canister profile as indicated below.
- 3. Fasten all screws tight.

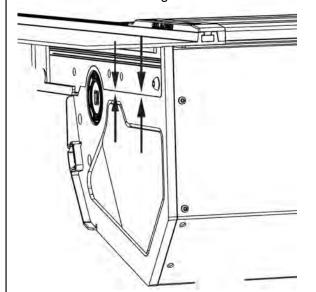

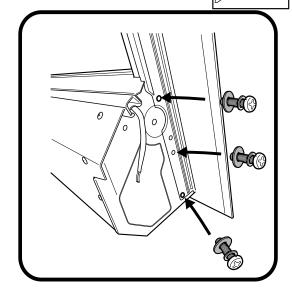



Feed M6 bolt through spring washer, motor and rubber bush.


NOTE: Rubber bush orientation has to be as per image. (side with text on rubber, to face the motor).

M6 Spring washer


M6 Bolt

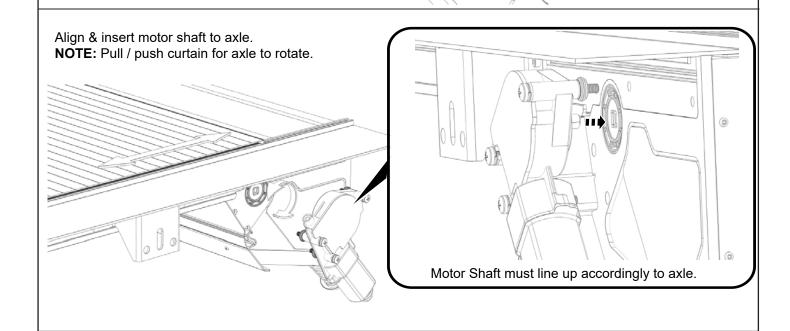

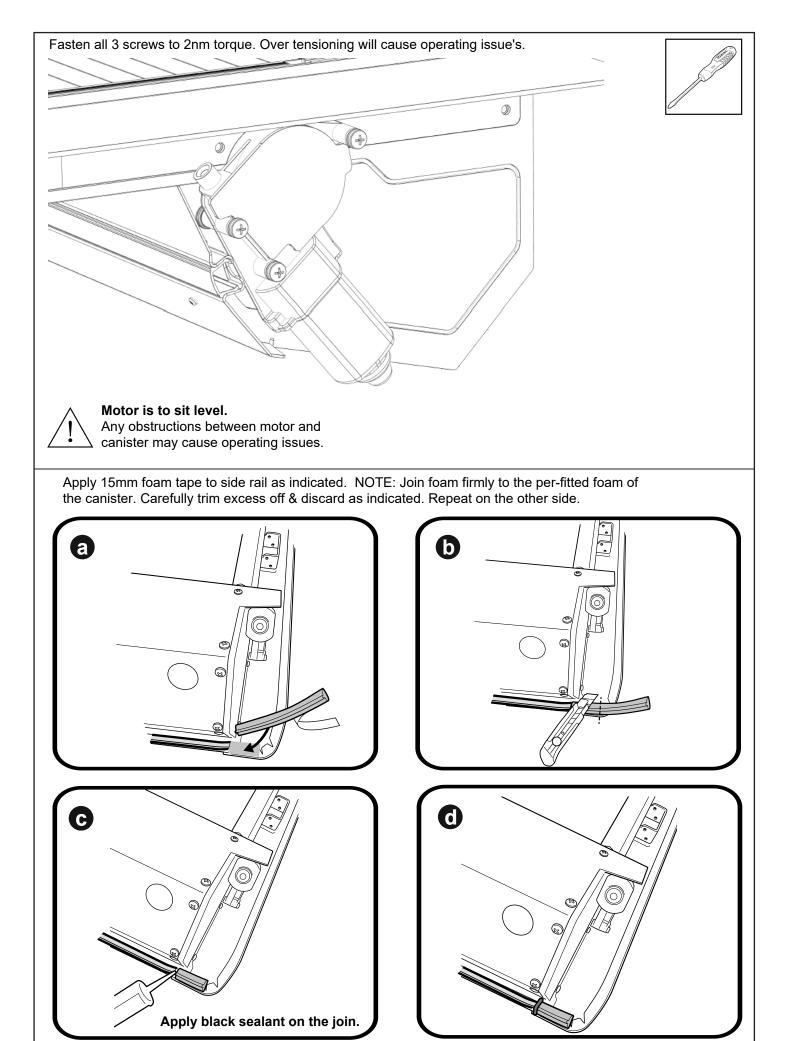


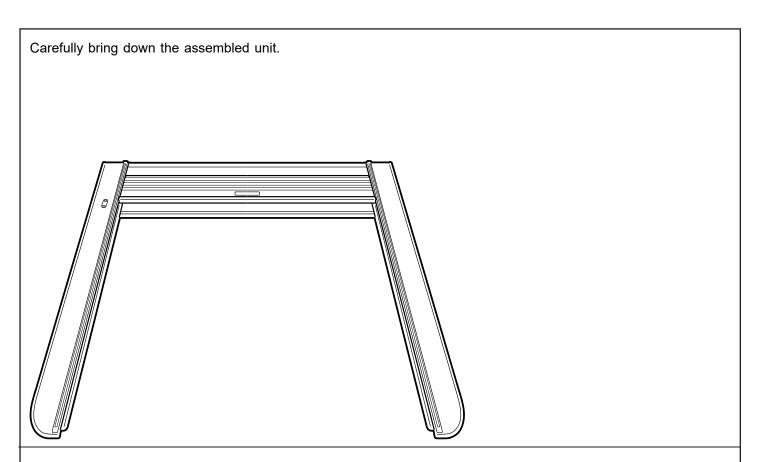

Insert side end caps to the top cover.

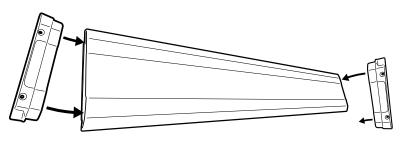



Place & Align top cover over the canister and side rails.

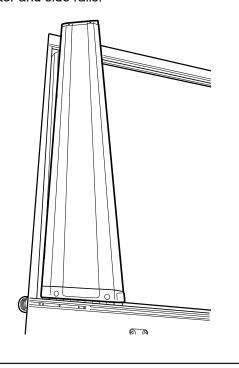


Using countersunk screws provided, line up end cap holes to the threads on the side rail.


Fasten to 3nm torque. Repeat to the other side.

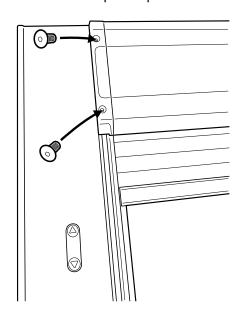

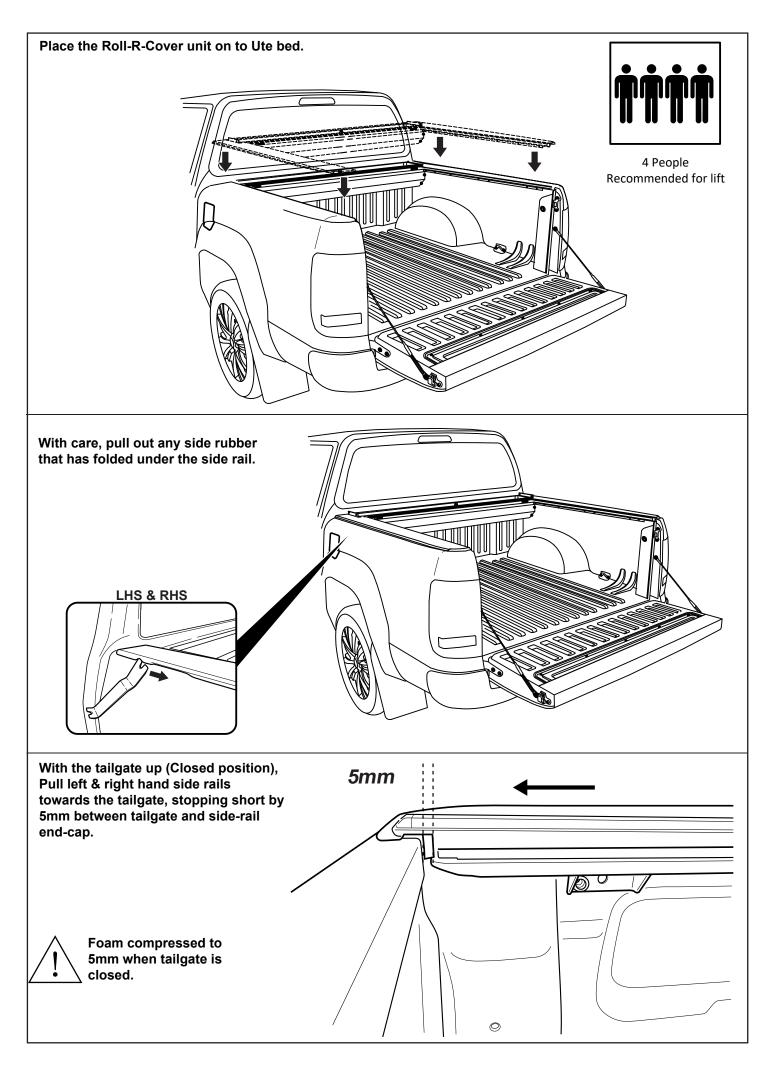

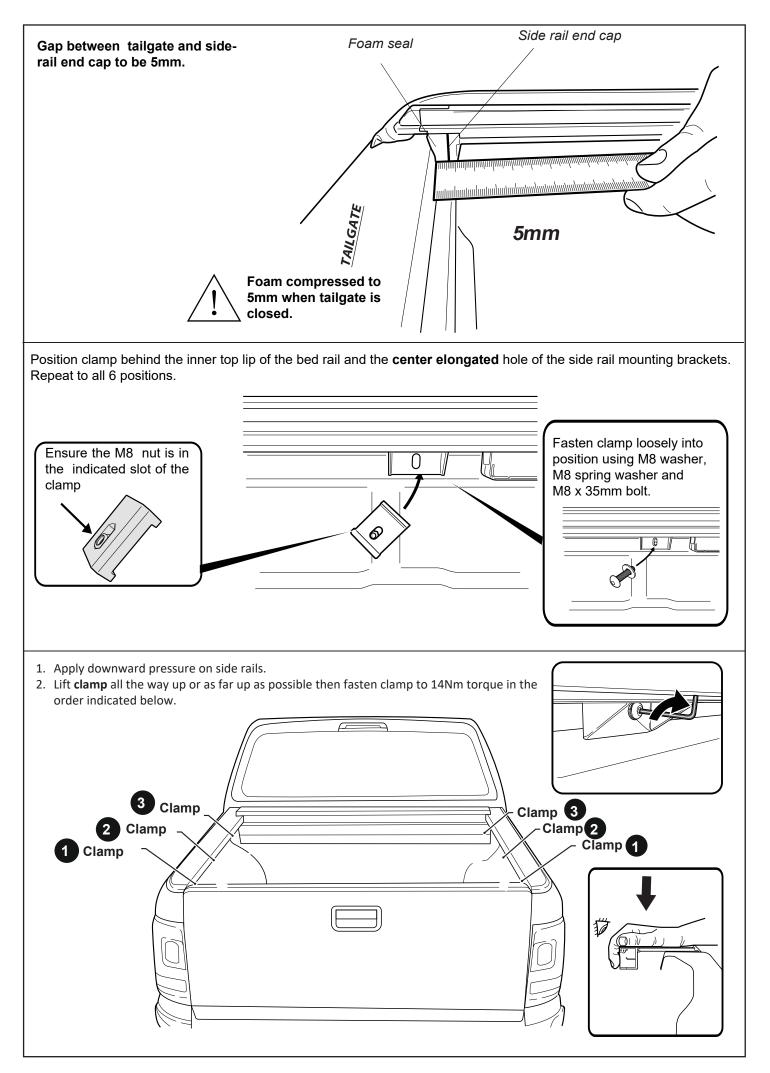


Apply flat plate behind adjusting bolt hole to the ute bed panel or to the liner if the Ute is equipped with a tub liner.

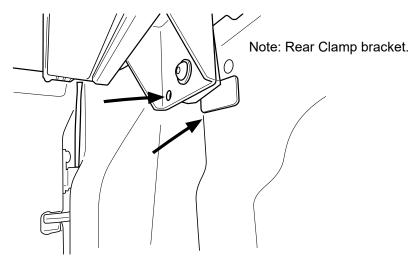





Note: Clean surface before applying flat plate.


Feed M8 nut into M8x70mm bolt and through clamp bracket's pre-installed nutsurt as indicated.

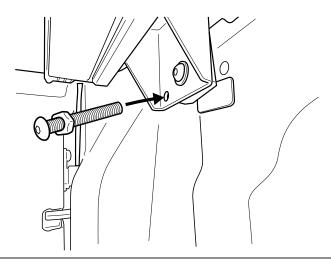


Side rail rubber to sit 1mm below from the top of the tailgate in the closed position.

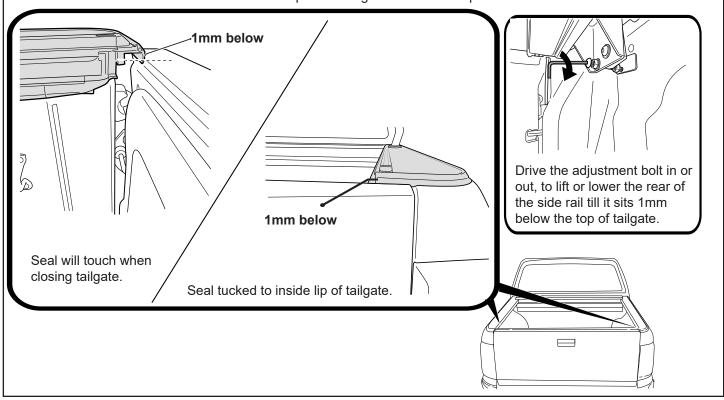

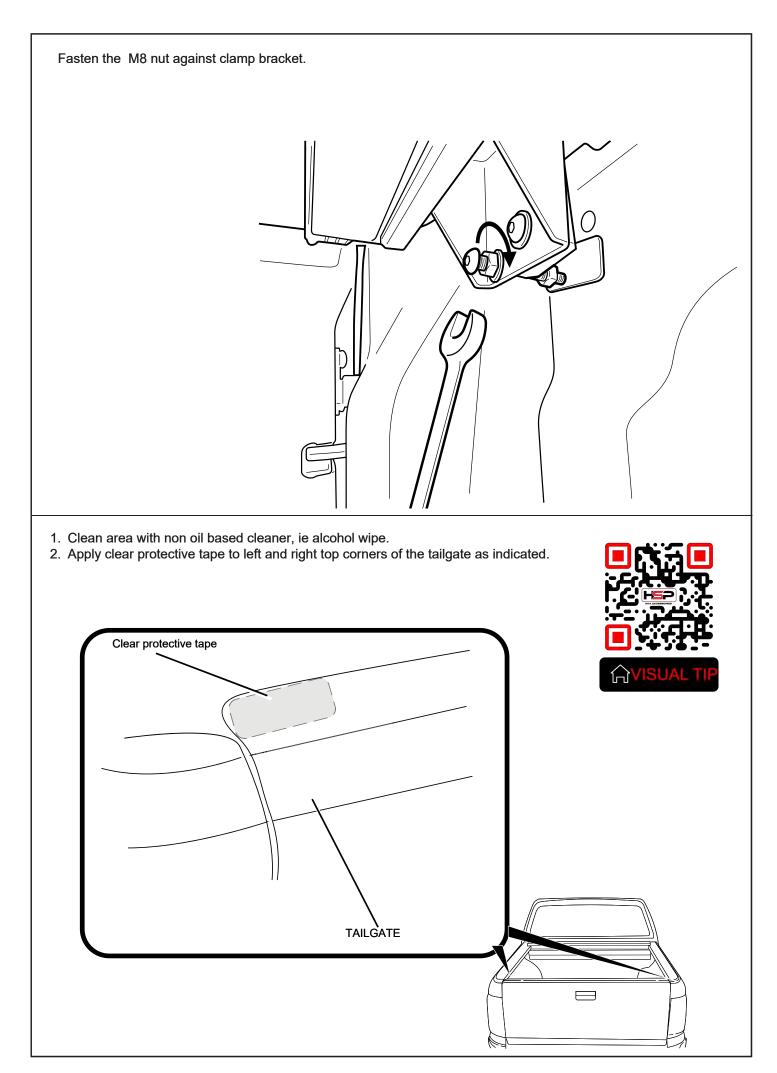

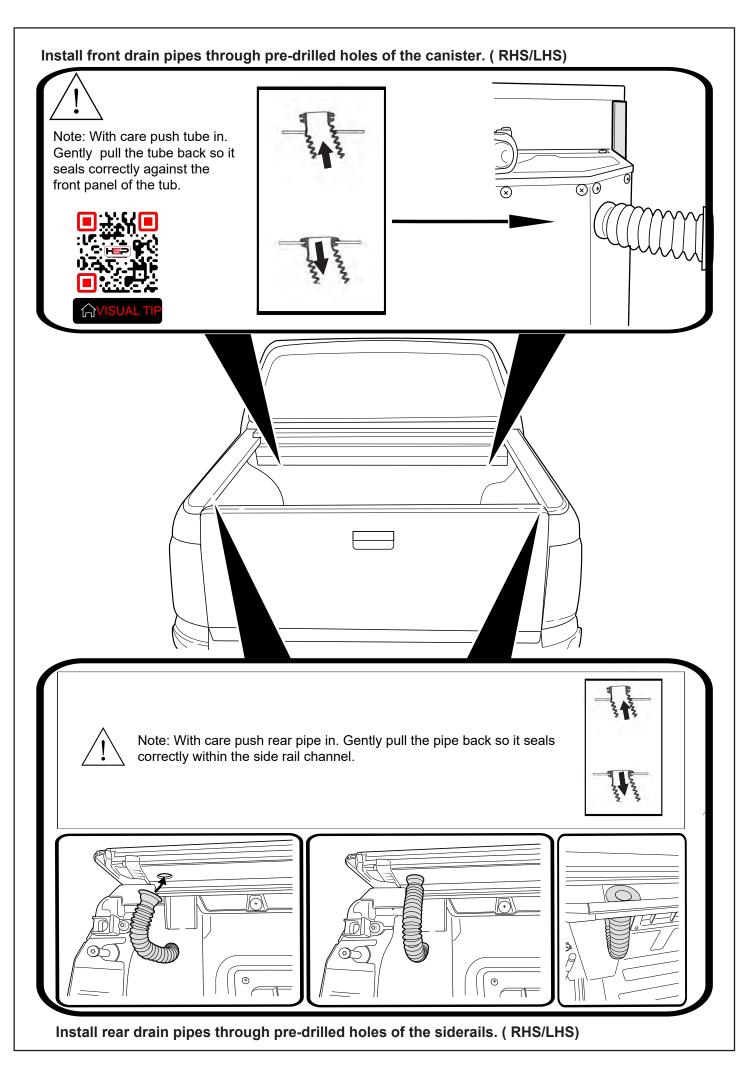

- a. Connect Battery loom S2.75 to Receiver loom.
- b. Carefully connect Cl-Loom-short to Receiver loom.

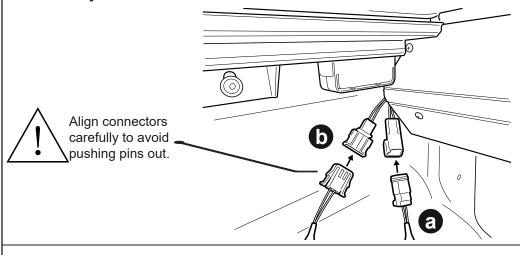



NOTE: 1. To wear in the Roll R Cover please fully open & close the cover approximately 15 times after install is complete.

2. Set your vehicle locking system to unlock all doors with one press of the factory remote unlock button. This setting can be found in your vehicle settings.

Operating instructions:

Press unlock on vehicle key fob to activate controller.

When vehicle is unlocked the side rail sensor buttons will be active to control.

When vehicle is locked the side rail sensor buttons will be inactive.

Using factory key fob to operate:

Pressing unlock twice on the factory key fob within 4 seconds, will activate the roll r cover to open. Pressing lock twice on the factory key fob within 4 seconds, will activate the roll r cover to close.



Vehicle proximity:

Tapping the proximity twice to open or lock the car door will act exactly the same way as the key fob being pressed twice.

