WWW.HSPUTELIDS.COM

RHINO RACK

Fitting Time: 180 minutes

ROLL.R.COVER

Rhino Rack Track Installation

Roll-R-Cover

Fitting Instructions

© Roll Я Cover

General Notes

- Read through the fitting instructions before installation of accessory.
- Always install the Roll Я Cover Wiring Kit following the workshop manual and fitting instructions provided. Failure to do so may cause damage to the vehicle or the accessory.
- Ensure all recyclable components and packaging are discarded and recycled following local recycling regulations.
- It is always recommended that the Roll Я Cover Wiring Kit is fitted by a qualified automotive technician.
- Safely store and protect any removed vehicle components.

Safety Notes

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.

Fitting Time

180 minutes

Parts Supplied

RRRB	Rhino Rack		
PART DESCRIPTION	PART NUMBER	QUANTITY/LENGTH	CHECK
TRACK MOUNTS	RTV168	1	
RACKS	VA165B	2	
LEGS	RLT600		

© Roll Я Cover

The following steps are for vehicles with no sports-bar. Proceed to step 11 if your vehicle has a sports-bar.

Step 1

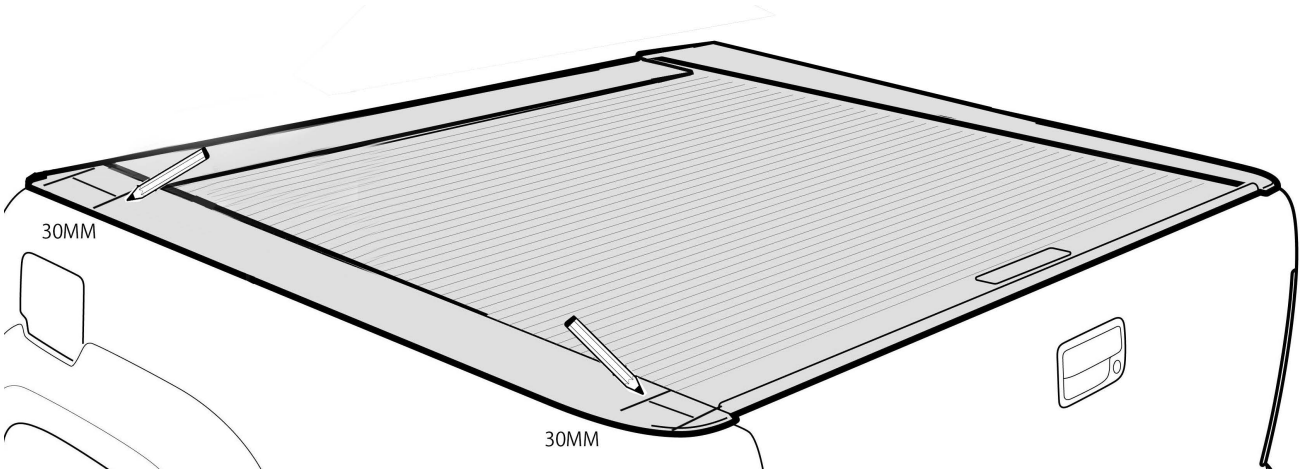

Measure and mark line on the Roll R Cover Siderail as shown.

30MM

30MM

Step 2

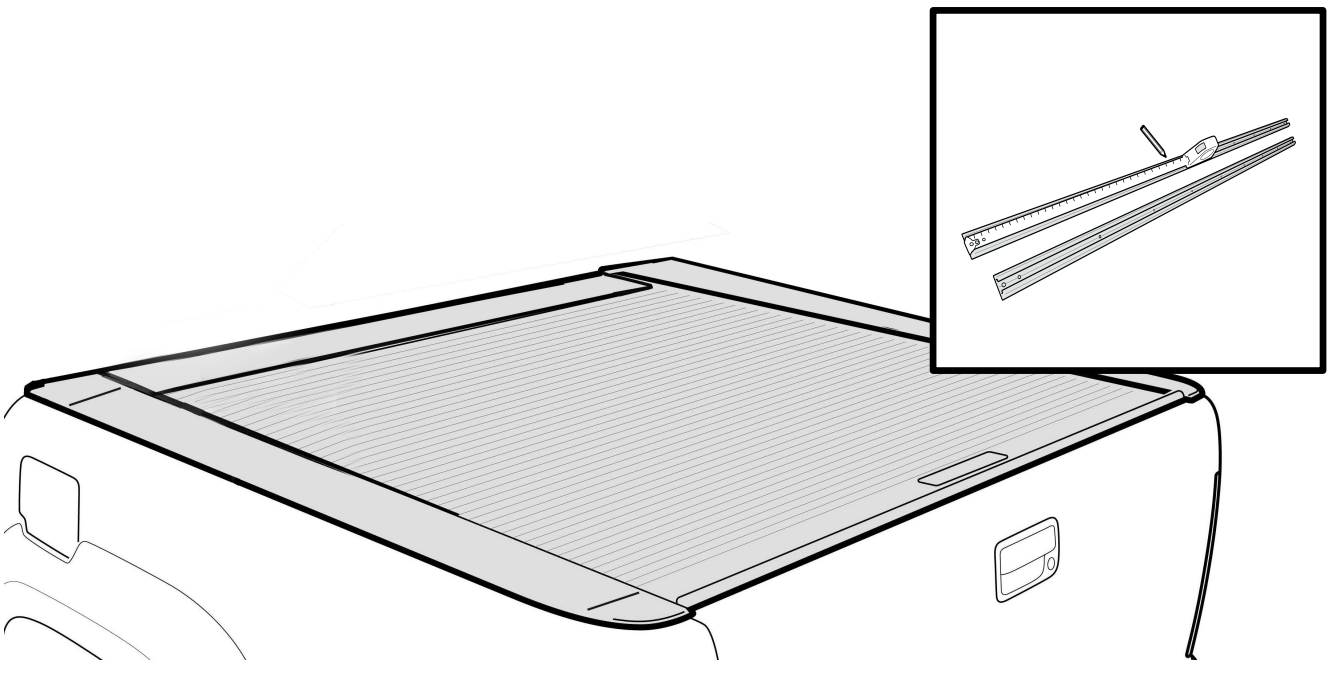

Measure between marked lines and cut rhino rack tracks accordingly.

© Roll Я Cover

Step 3

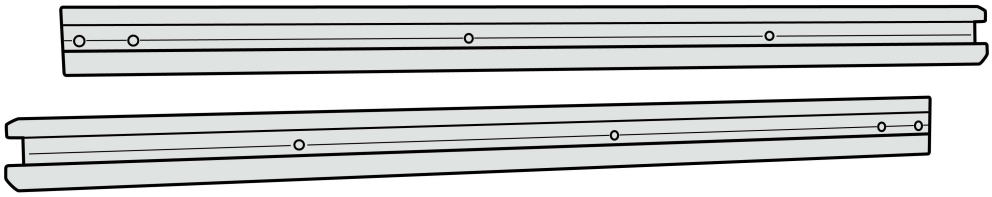

Now you will have 2 tracks to assemble on the Roll R Cover.

Step 4

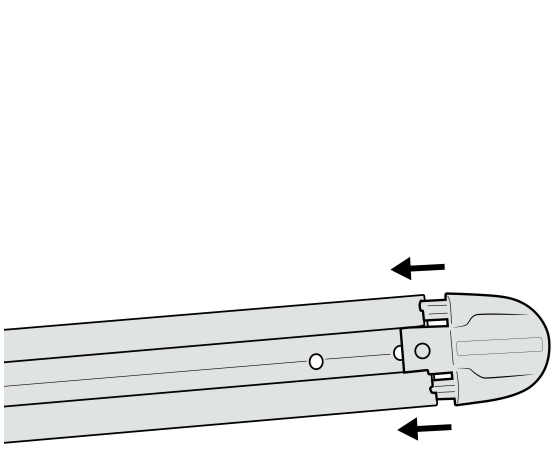

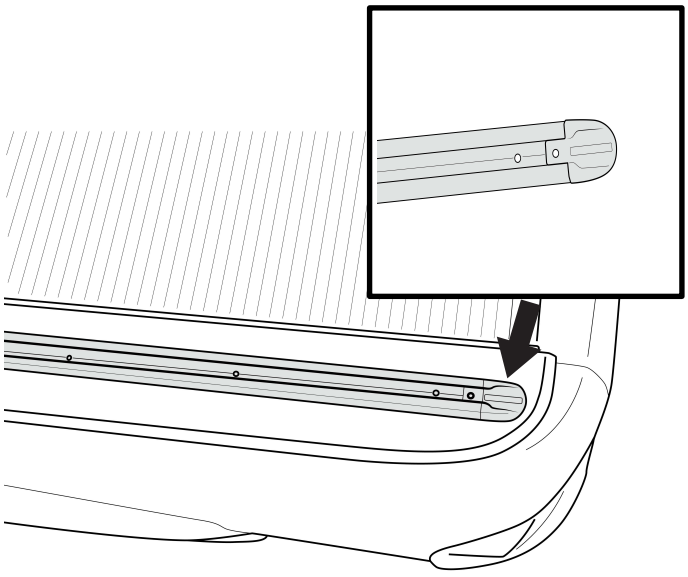

Insert end caps to the rear of the track closest to the end of the Roll R Cover rails.

© Roll Я Cover

Step 5

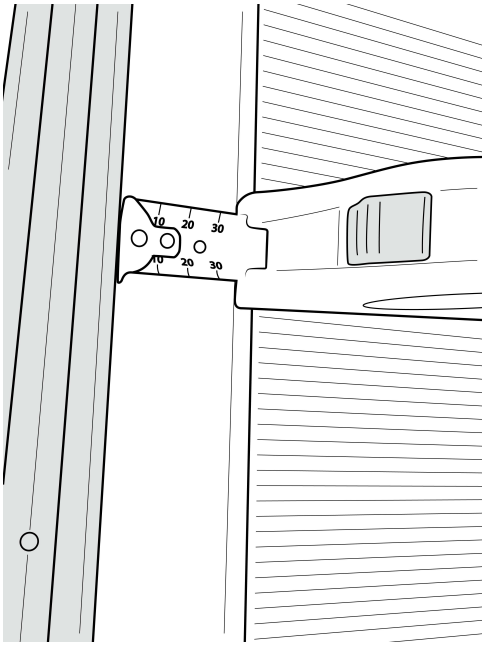

Place tracks 40MM from the inside of Siderail of Roll R Cover.

Step 6

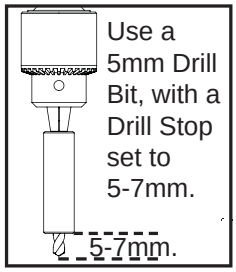

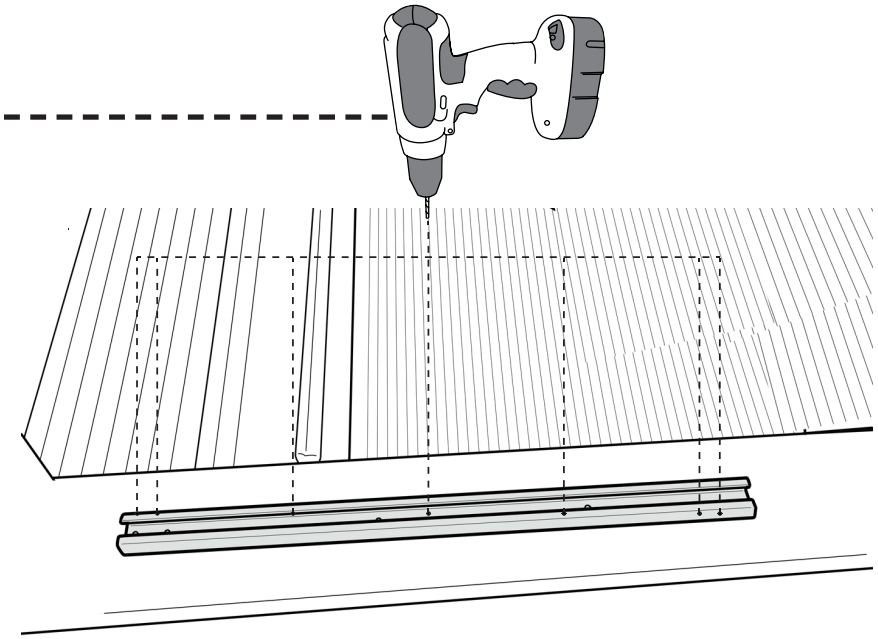

Use a Marker and create a reference point on the Siderail at all Rivet holes in the Track. Remove the Track and drill through the rails at these points as shown.

© Roll Я Cover

Step 7

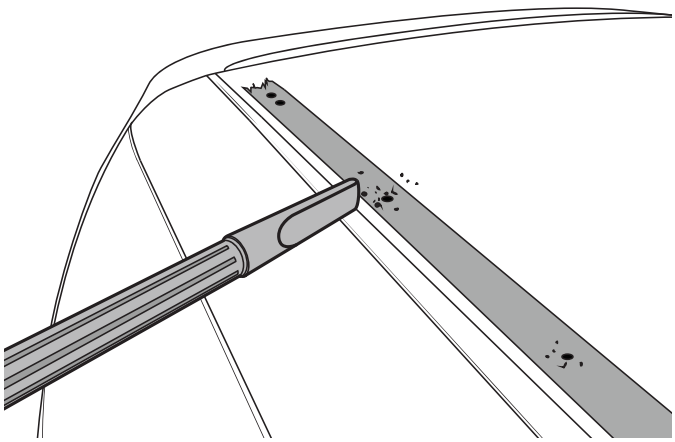

Vacuum any swarf from the area.

Step 8

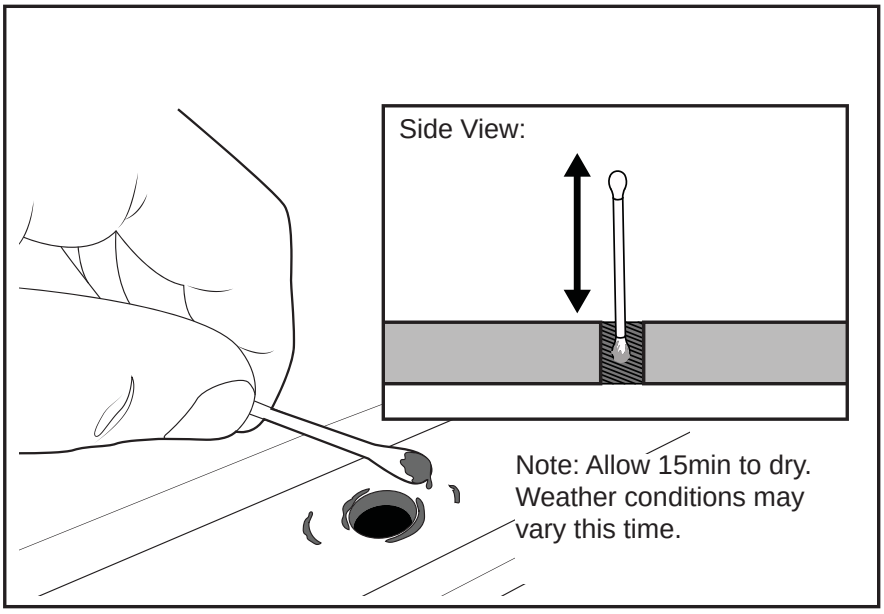

Using Cold Galvanising Paint, cover all drilled areas and any exposed body work.

© Roll Я Cover

Step 9

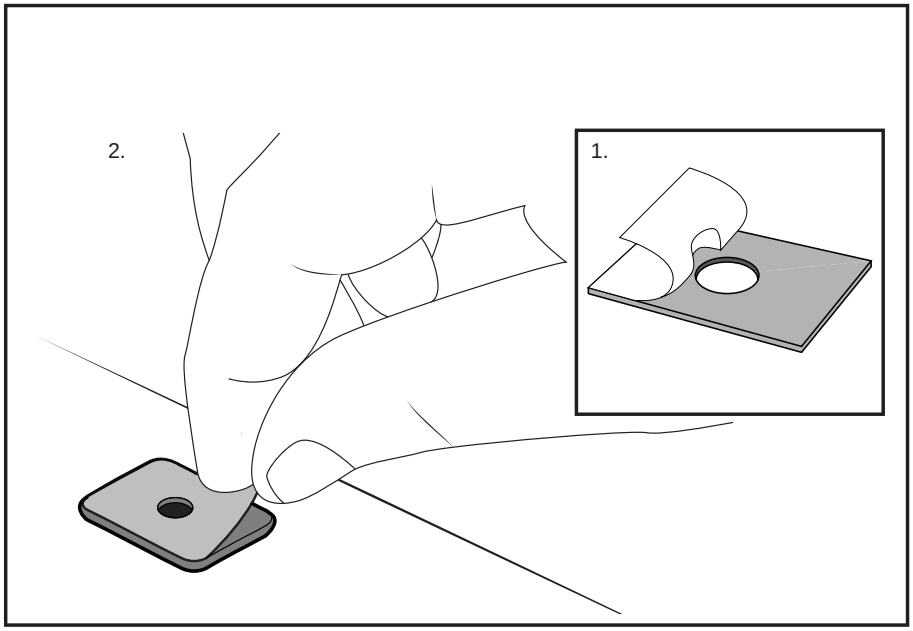

Peel off the one side of backing tape on the Butyl Patches provided. Place these carefully over all holes drilled. Remove the top layer of backing tape as shown.

Step 10

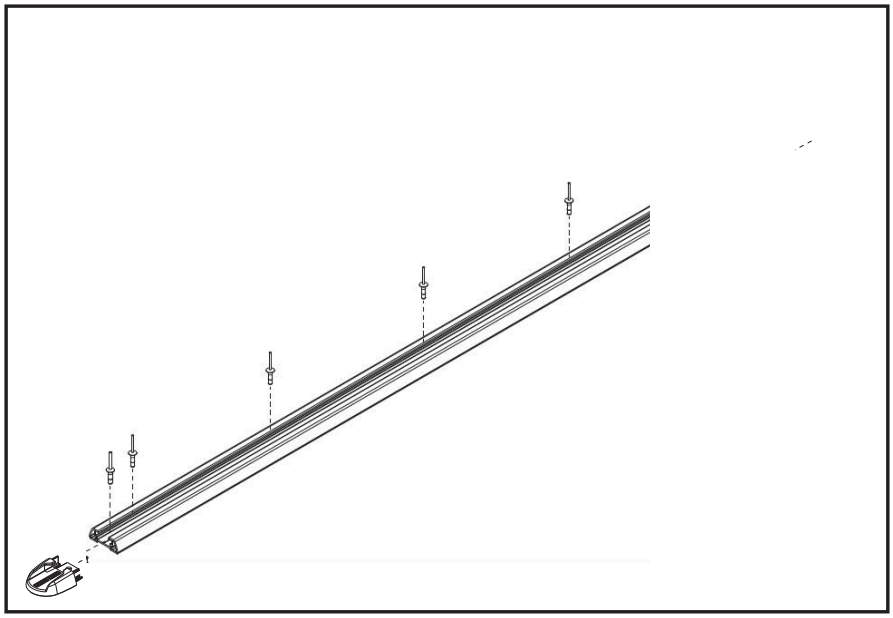

Insert the End Caps and hold in place with Rivets. Place a Rivet in each of the holes along the Track.

© Roll Я Cover

The following steps are for vehicles with sports-bars.

Step 11

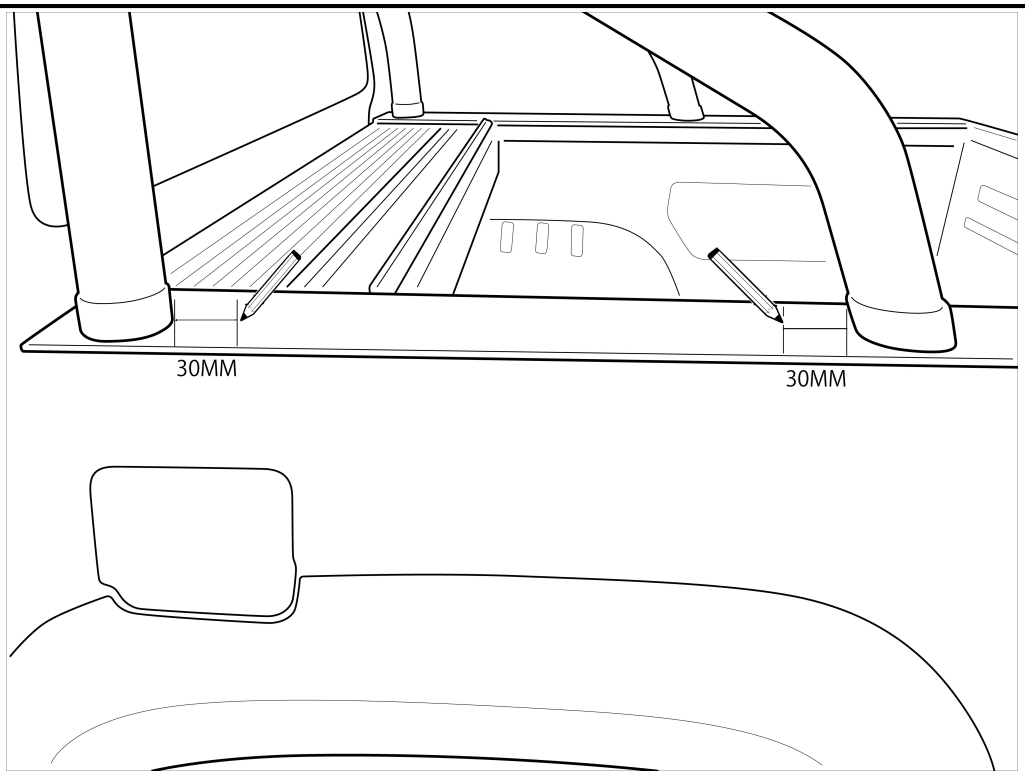

Measure between sportsbars and mark line on the Roll R Cover Siderail as shown.

30MM

30MM

Step 12

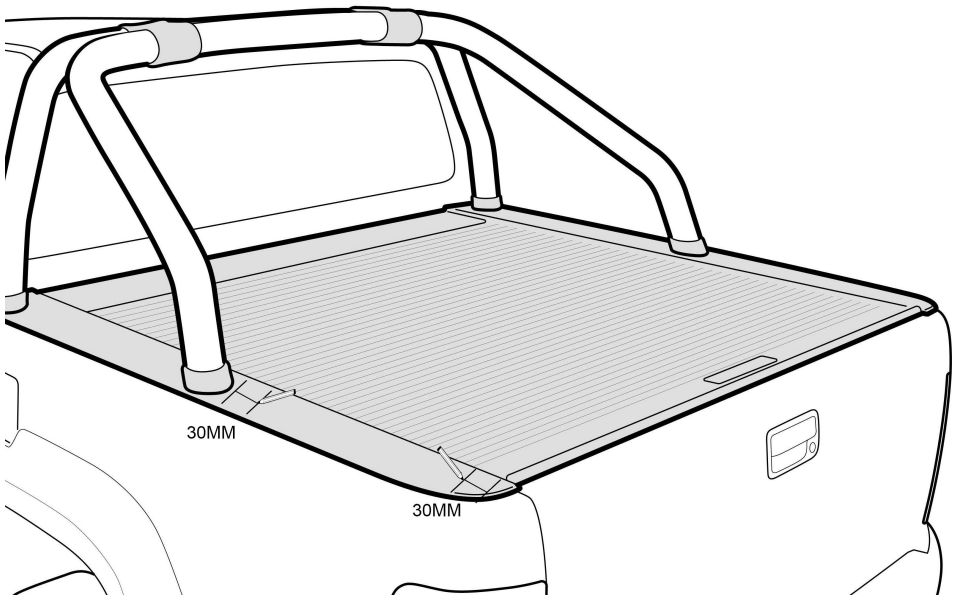

Measure between sportsbar and rear of siderail and mark line as shown.

© Roll Я Cover

Step 13

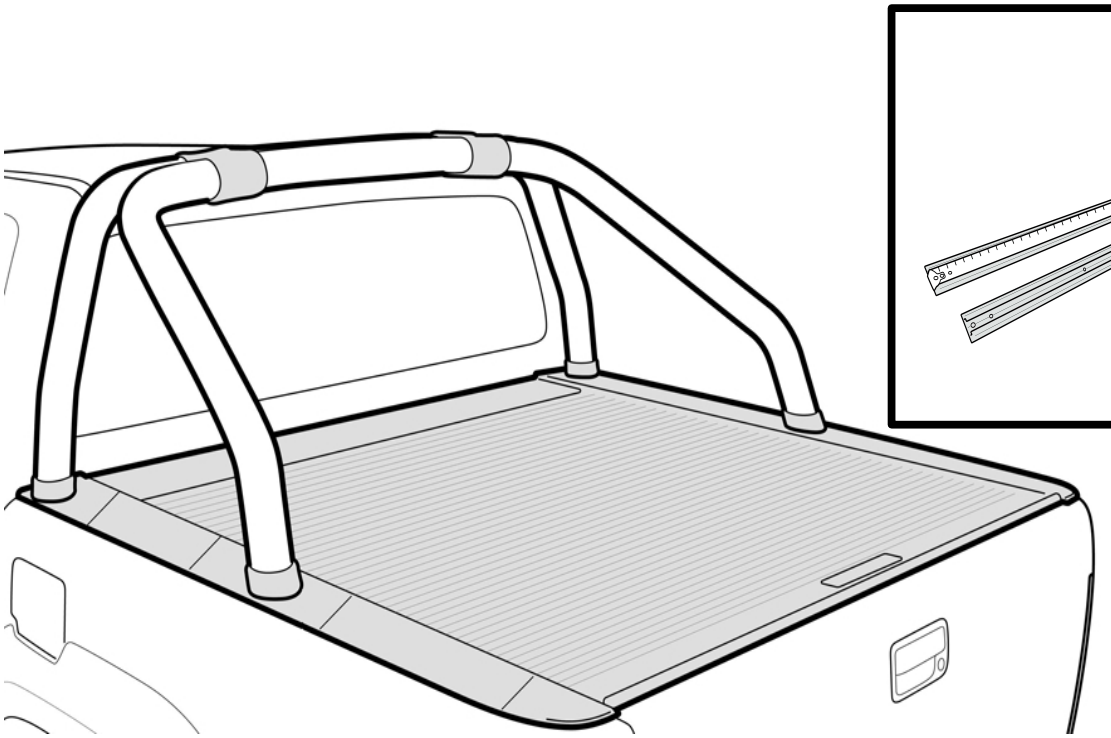

Measure between marked lines and cut rhino rack tracks accordingly.

Step 14

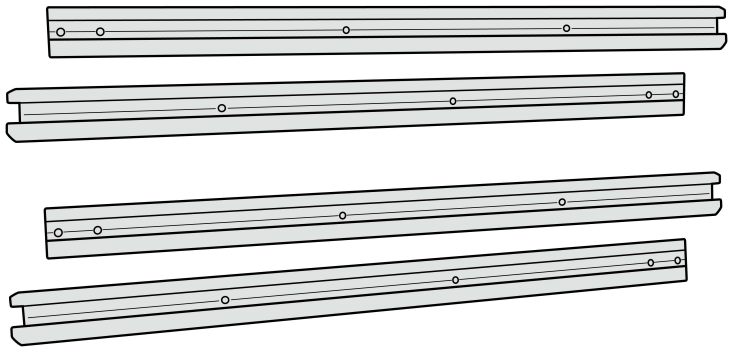

Now you will have 4 tracks to assemble on the Roll R Cover.

© Roll Я Cover

Step 15

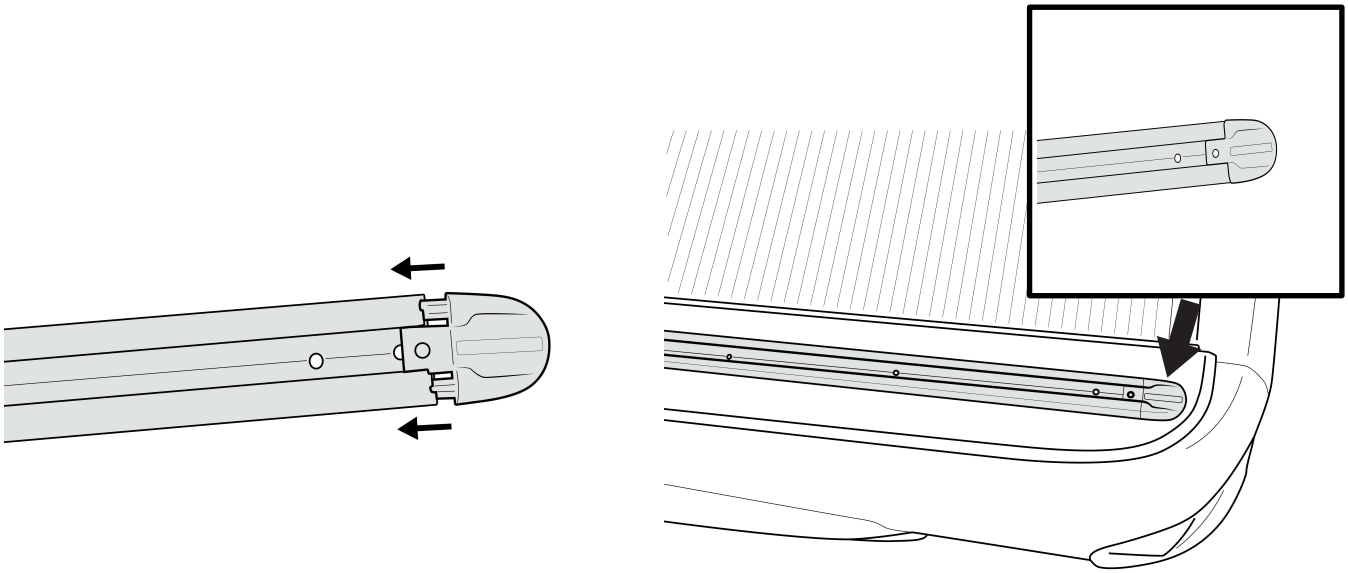

Insert end caps to the rear of the track closest to the end of the Roll R Cover rails.

Step 16

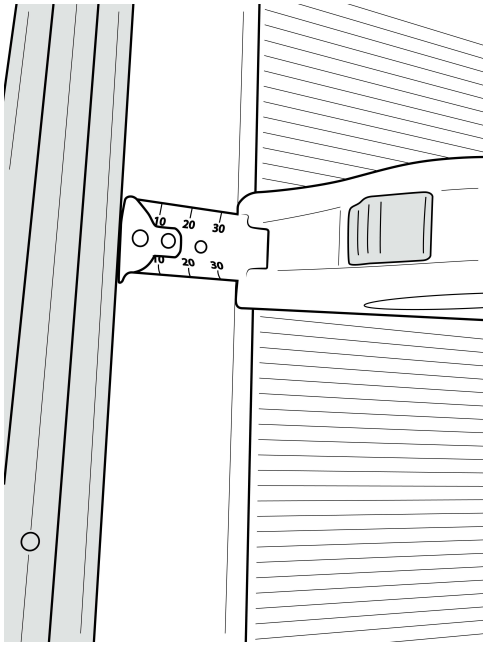

Place tracks 40MM from the inside of Siderail of Roll R Cover.

© Roll Я Cover

Step 17

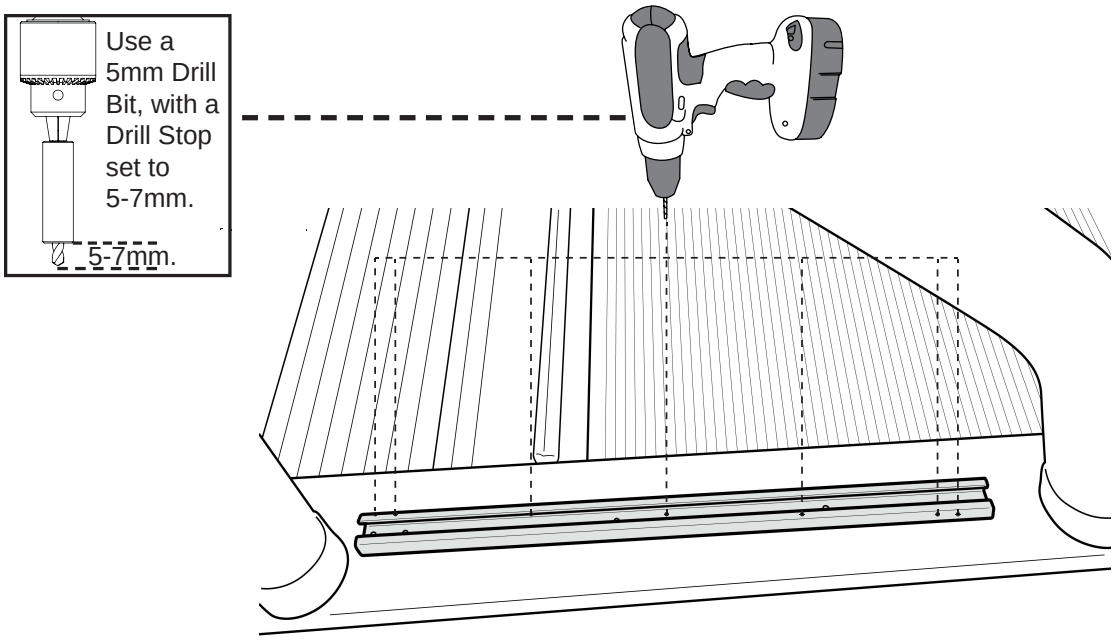

Use a Marker and create a reference point on the Siderail at all Rivet holes in the Track. Remove the Track and drill through the rails at these points as shown.

Step 18

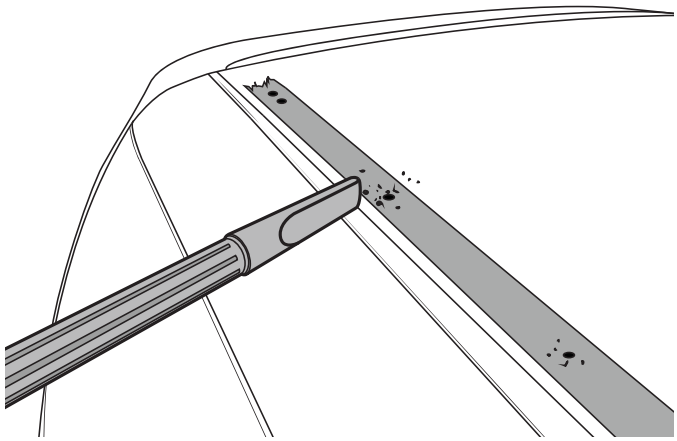

Vacuum any swarf from the area.

© Roll Я Cover

Step 19

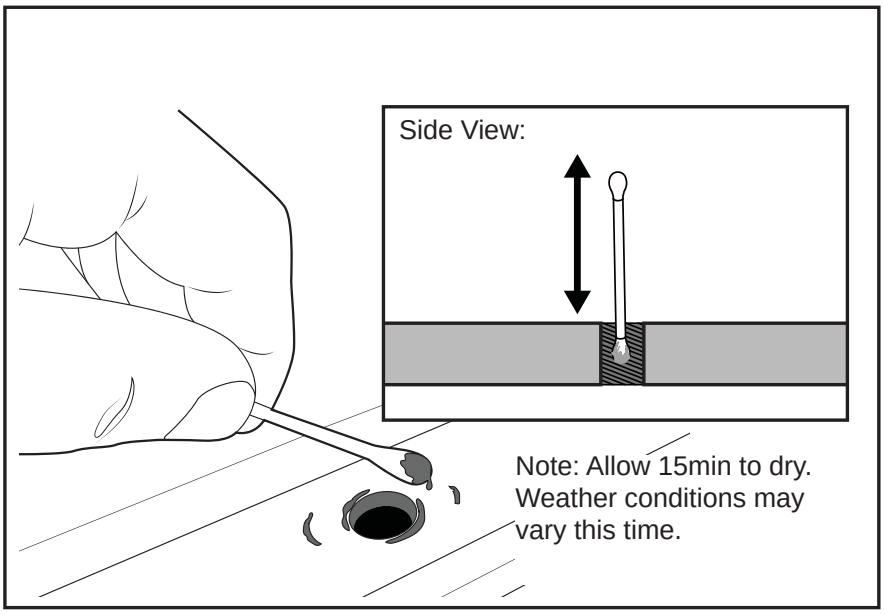

Using Cold Galvanising Paint, cover all drilled areas and any exposed body work.

Step 20

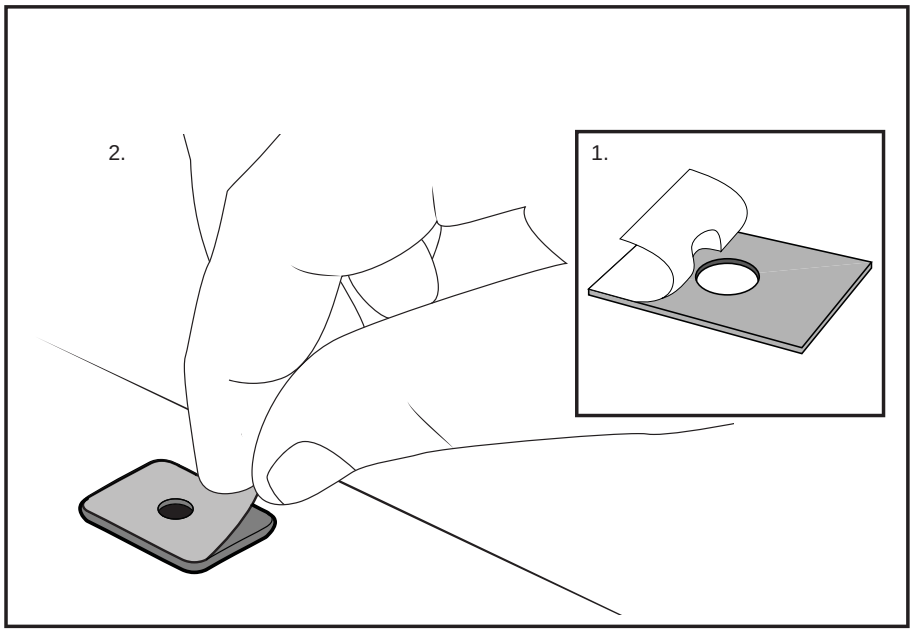

Peel off the one side of backing tape on the Butyl Patches provided. Place these carefully over all holes drilled. Remove the top layer of backing tape as shown.

© Roll Я Cover

Step 21

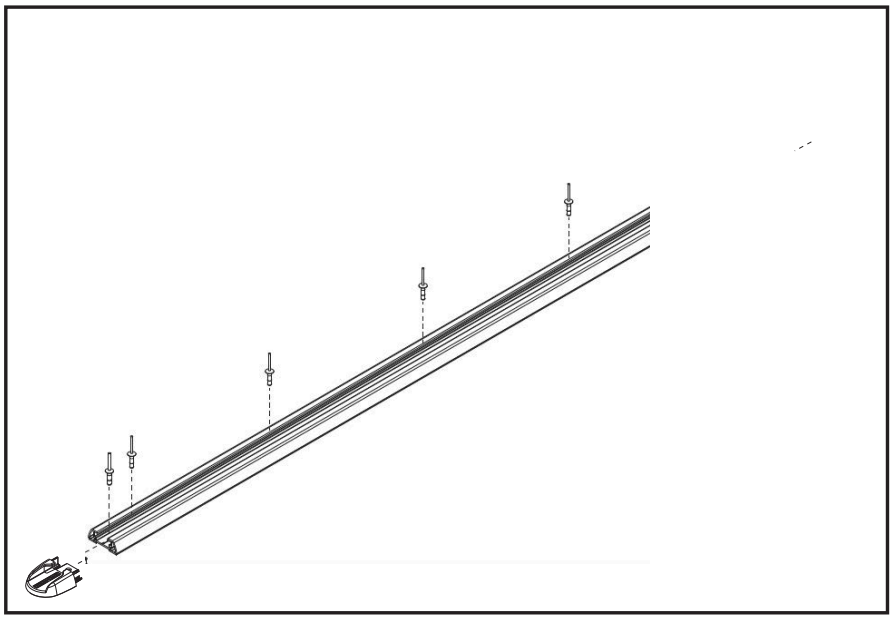

Insert the End Caps and hold in place with Rivets. Place a Rivet in each of the holes along the Track.

© Roll Я Cover