WWW.HSPUTELIDS.COM

Part No: NP52R

Fitting Time: 180 minutes

ROLL.R.COVER

To suit Nissan NP300 Navara Space Cab with sports bars

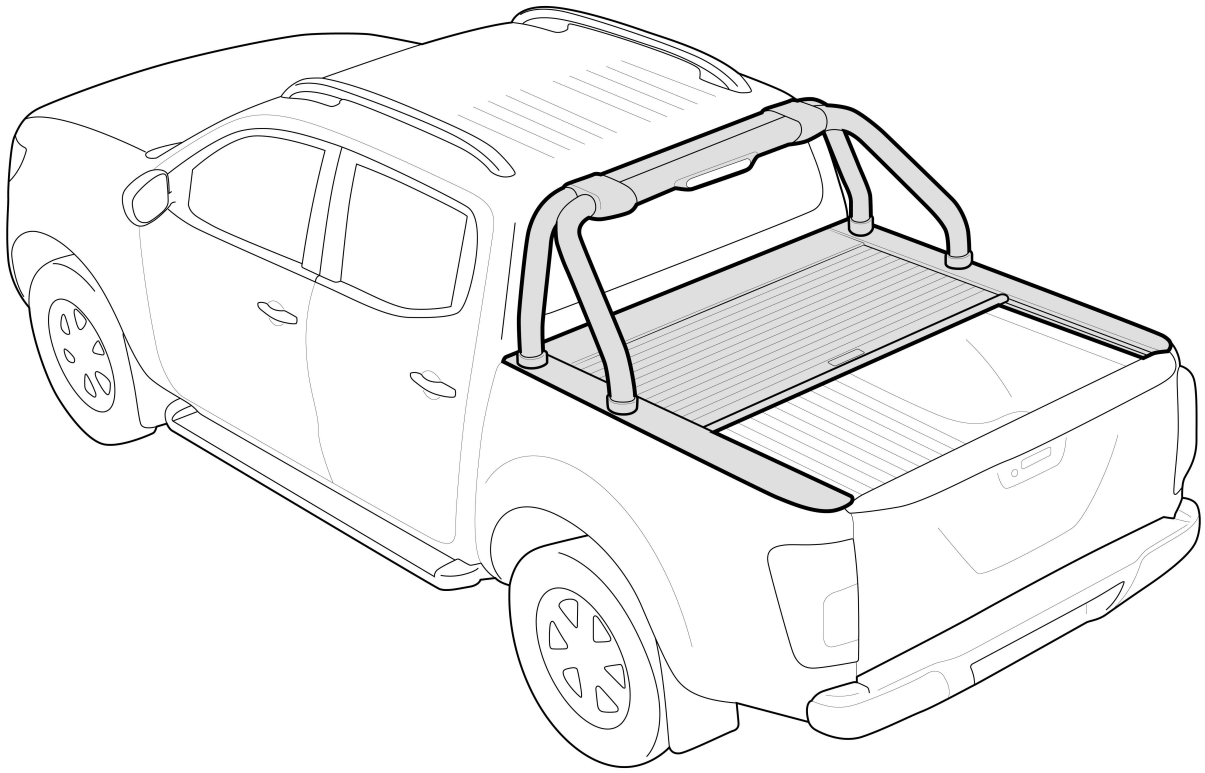

Roll-R-Cover

Fitting Instructions

© Roll Я Cover

General Notes

- Read through the fitting instructions before installation of accessory.
- Always install the Roll Я Cover Wiring Kit following the workshop manual and fitting instructions provided. Failure to do so may cause damage to the vehicle or the accessory.
- Ensure all recyclable components and packaging are discarded and recycled following local recycling regulations.
- It is always recommended that the Roll Я Cover Wiring Kit is fitted by a qualified automotive technician.
- Safely store and protect any removed vehicle components.

Safety Notes

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.

Fitting Time

180 minutes

Parts Supplied

NP52R	EXTRA CAB NISSAN NAVARA D23 NP300 - ROLL R COVER WITH SPORTS BAR MOUNTING KIT		
PART DESCRIPTION	**PART NUMBER**	**QUANTITY/LENGTH**	**CHECK**
NP52R FITTING INSTRUCTIONS	378*	1	
LUBRICANT PUMP SPRAY	47*	1	
REMOTE	215*	2	
PRIMER STICK	44*	1	
CABLE TIE 4.8X300	217*	10	
ROLL R LOOM	216*	1	
NP5R CANISTER AND CURTAIN	275*	1	
NP5R RAIL RIGHTHAND	325*	1	
NP5R RAIL LEFTHAND	326*	1	
NP(1) GASKET	79	2	
NP(2) GASKET	231	2	
M8 GRUB SCREW	27*	2	
M8 NYLOC NUT	28*	2	
M8 FLAT WASHER	34	2	
M8 FLANGE NUT	29*	2	
THREAD BOLT 8.8	30*	1	
ADJUSTMENT PLATES	31*	2	
HOSE 600MM	11*	4	
COMPLETE CANISTER COVER	402	1	
OPERATION LEAFLET	66	1	
MAINTENANCE LEAFLET	67	1	
BLACK PUTTY	3*	8	

© Roll Я Cover

The following steps are for vehicles fitted with a Sportsbar (kit will only work with OE Sportsbar).

Step 1

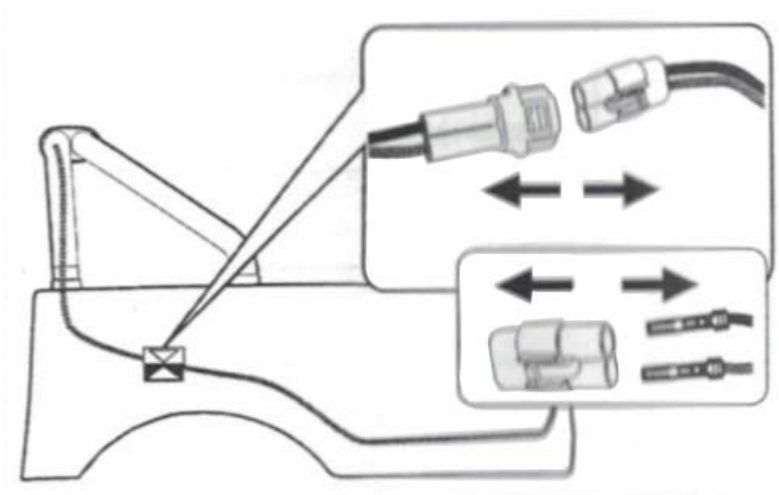

Locate brake light wiring loom from rear passenger side wheel arch.
Disconnect and remove plug from connectors.

Step 2

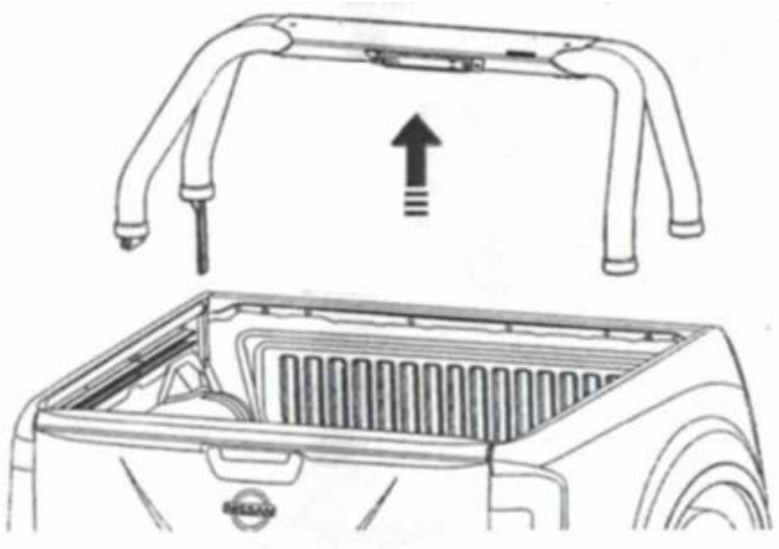

Remove Sports Bars from vehicle.

© Roll Я Cover

The following steps are for vehicles with bed liners. If there are no bed liners installed move to Step 4

Step 3

Trim front of bed liner by 180mm from the top of the ute bed as shown.

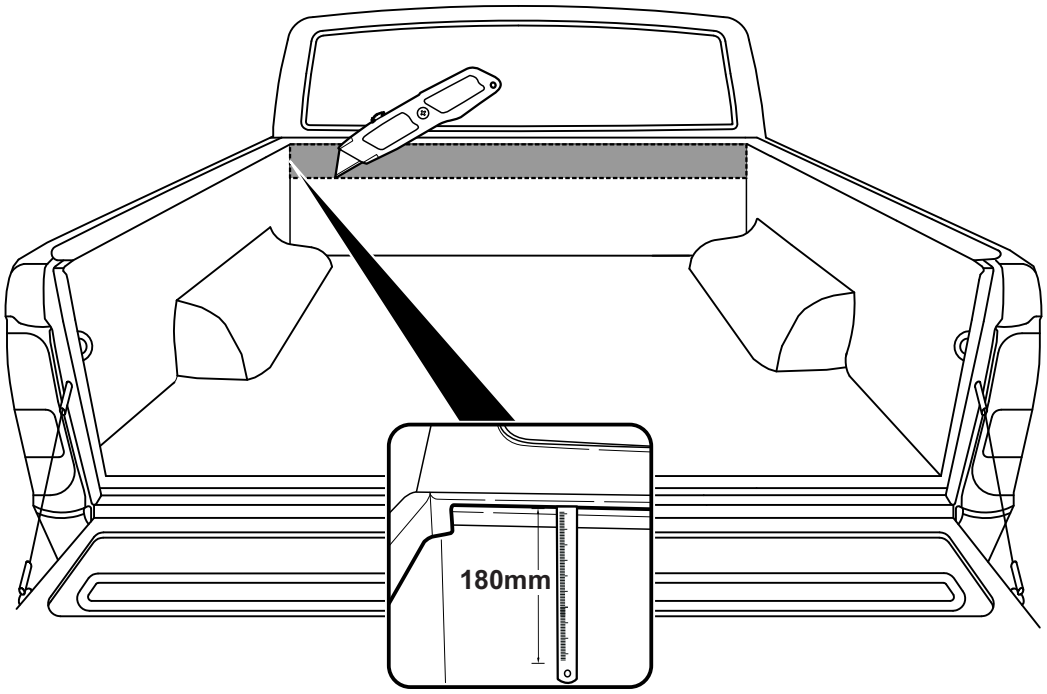

Step 4

Cut a 20mm split for bed liner to flex.

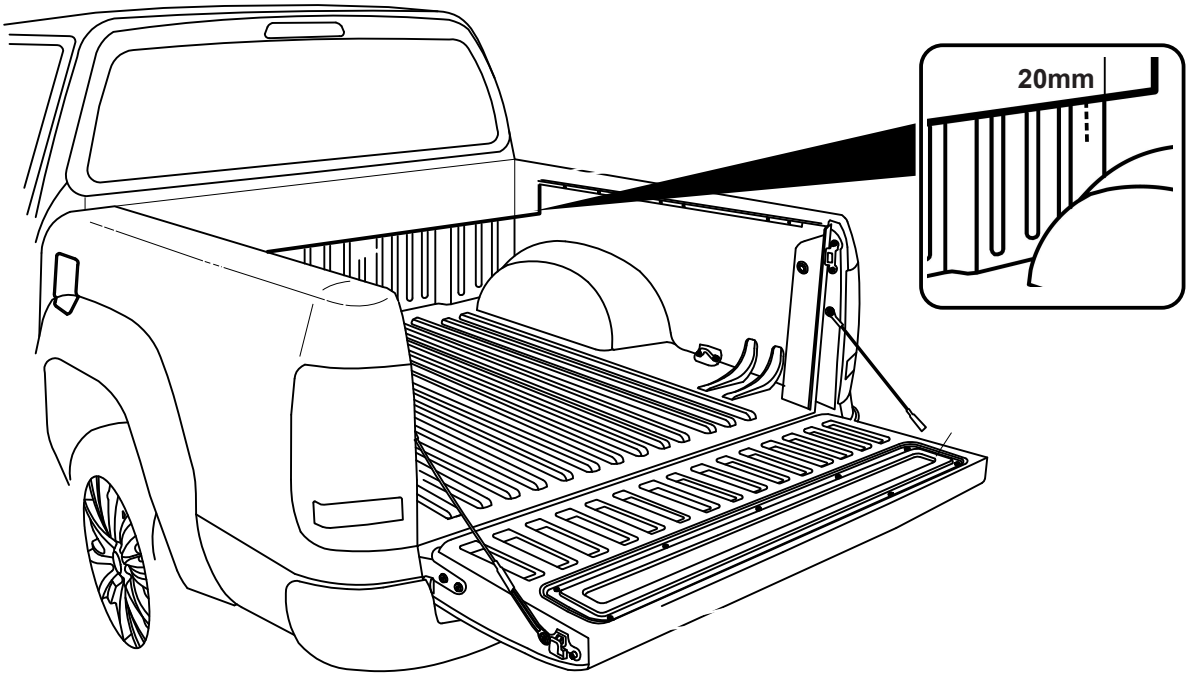

© Roll Я Cover

Step 5

Measure 60mm from top of tub and trim liner.

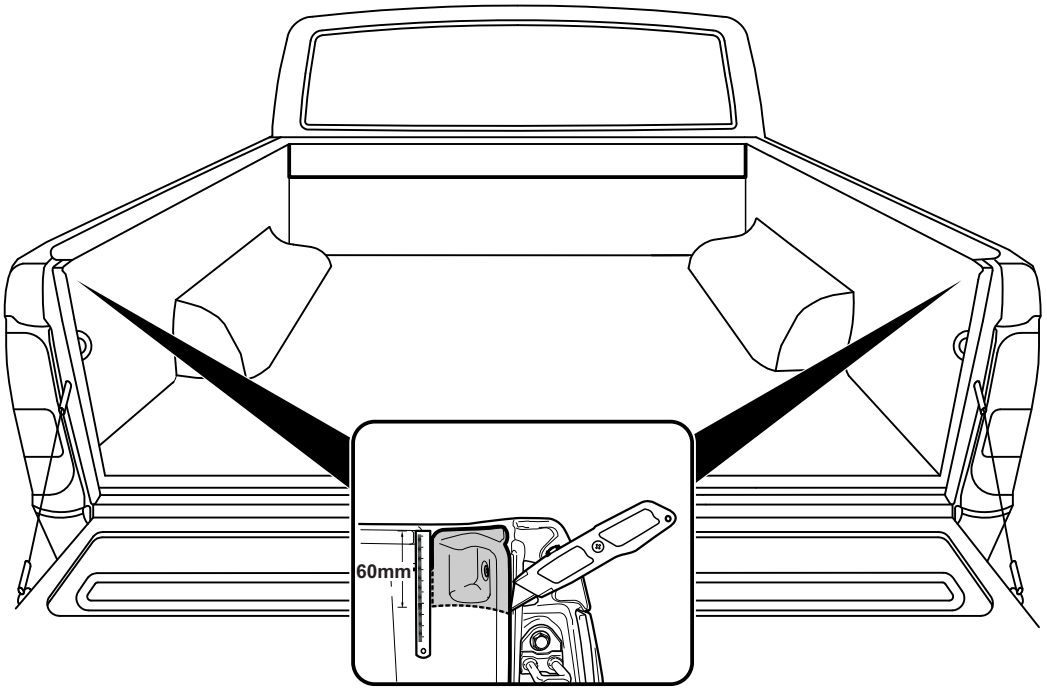

Step 6

Measure 20mm down from top of tailgate and trim tailgate liner.

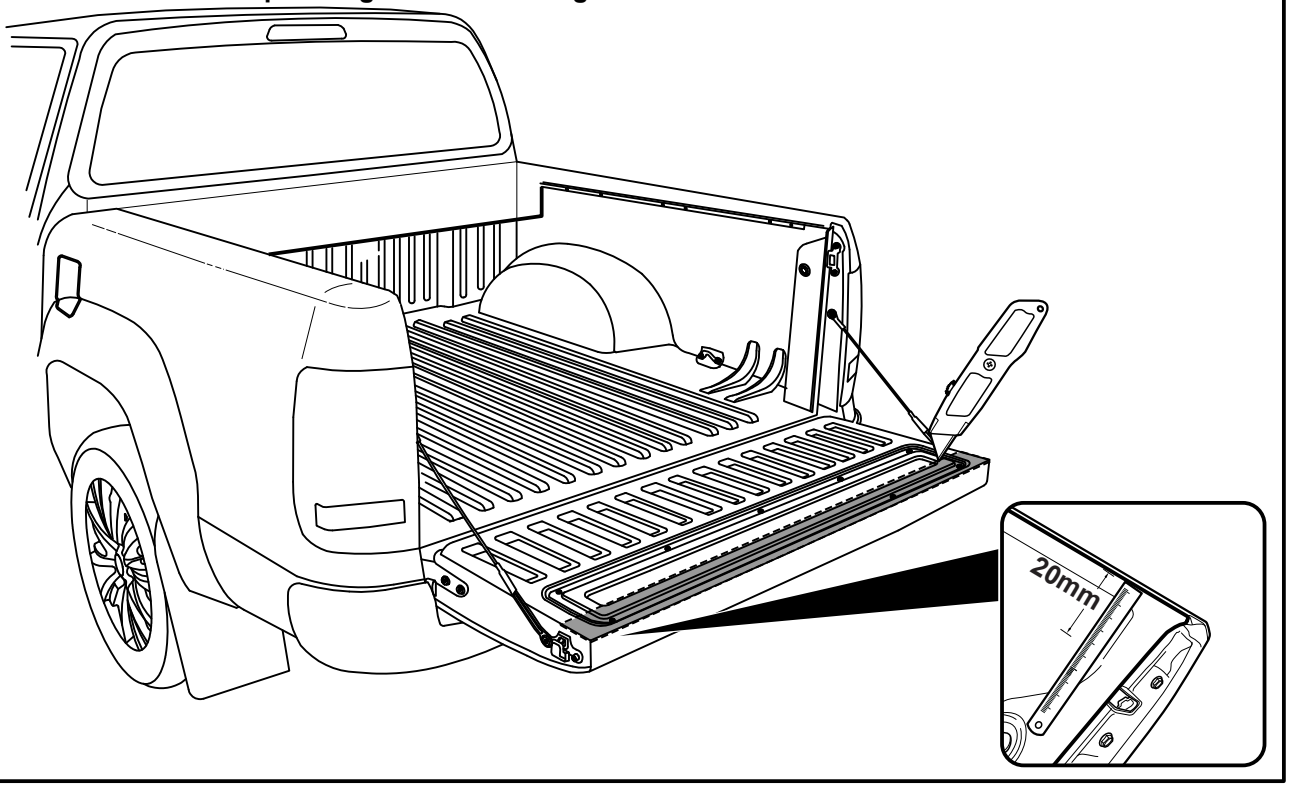

© Roll Я Cover

Step 7

Roll-R-Cover preparation steps

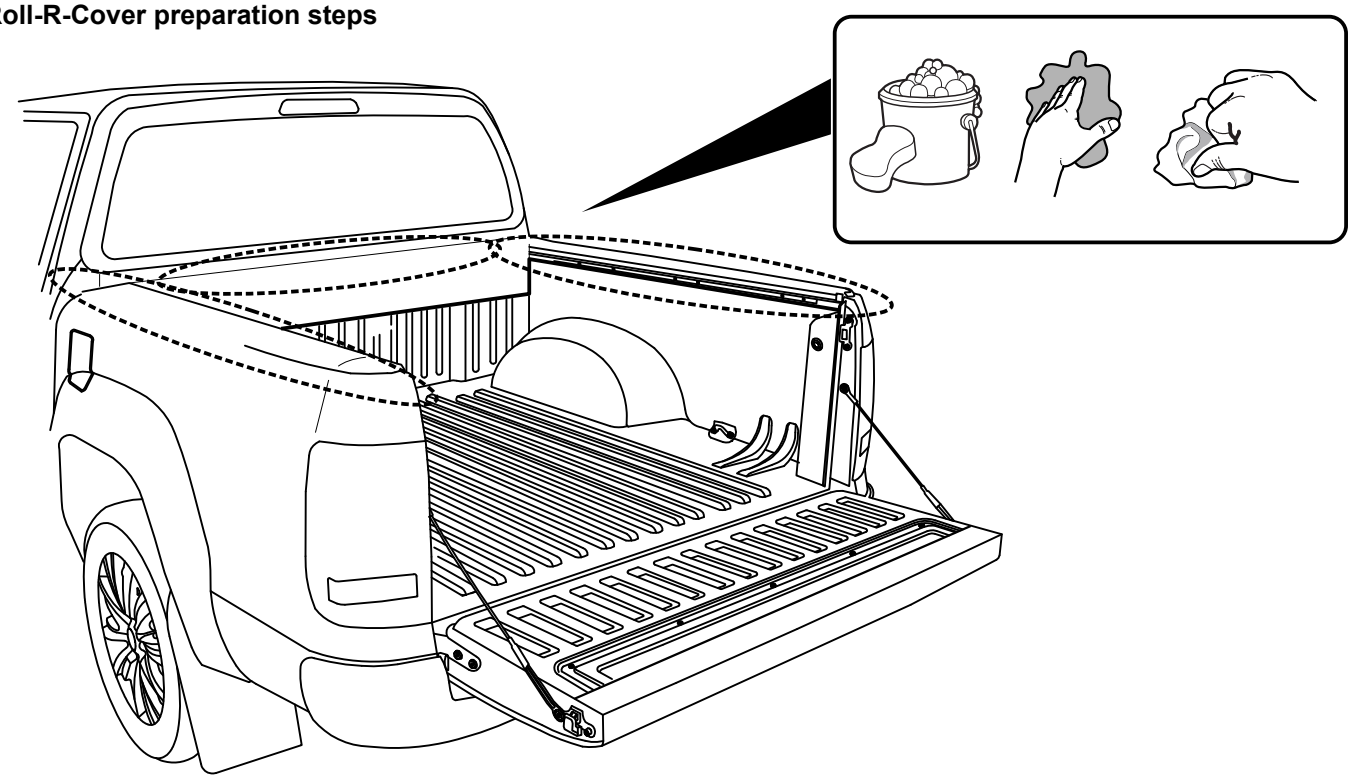

Step 8

Carefully unpack the box.

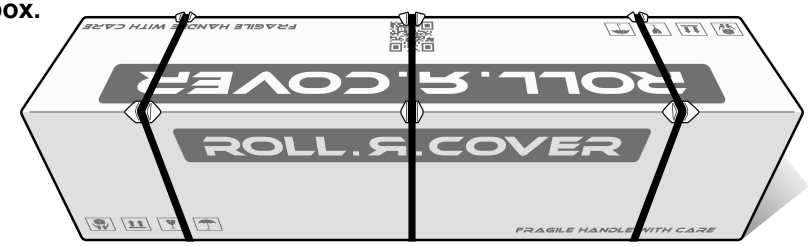

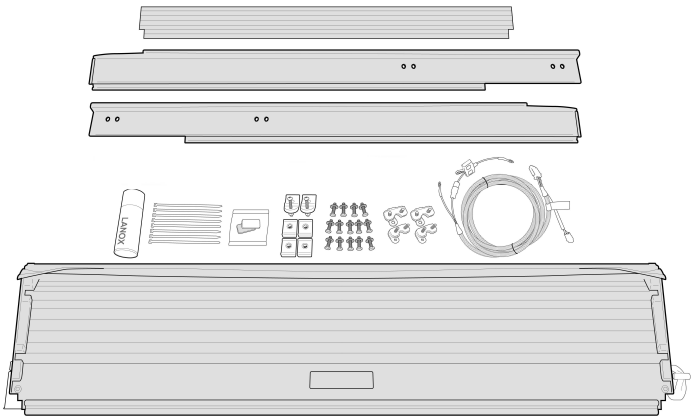

© Roll Я Cover

Step 9

Wiring Harness steps

1 **Feed through the cavity**

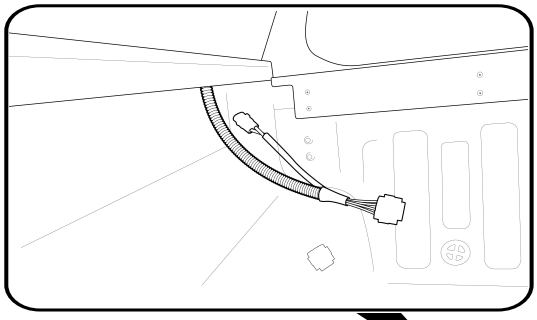

3

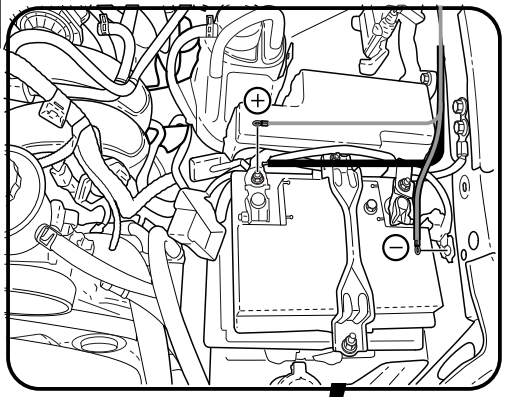

2

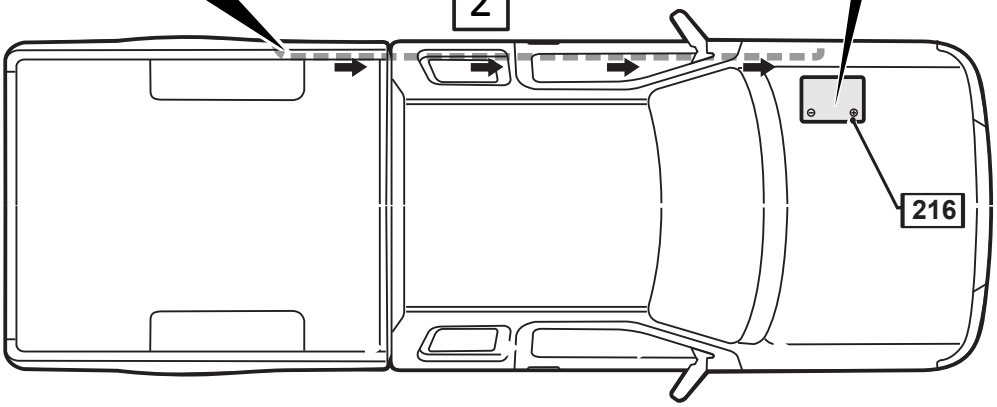

Run the wiring from the front corner cavity to the battery over the chassis rail. Making sure to keep away from hot obstructions and cable tie every 400mm.

Step 10

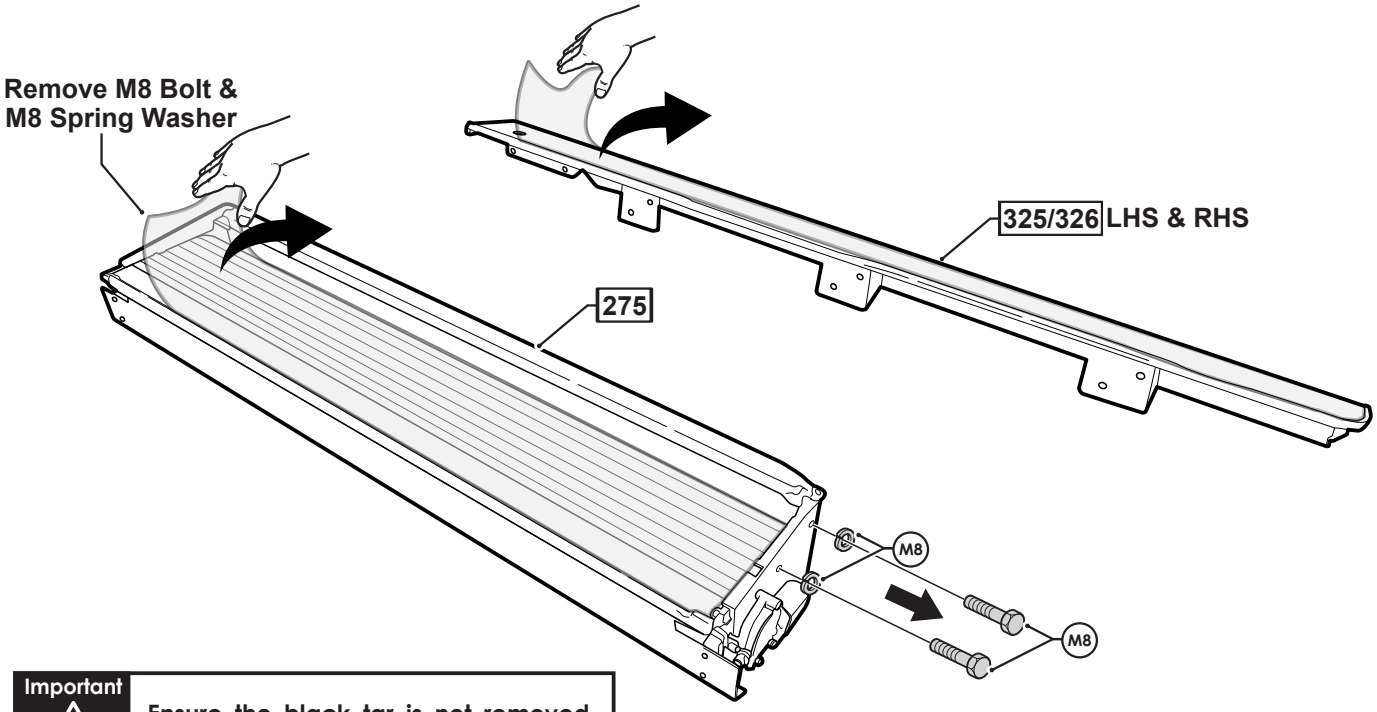

Important

Ensure the black tar is not removed with the film.

© Roll Я Cover

Step 11

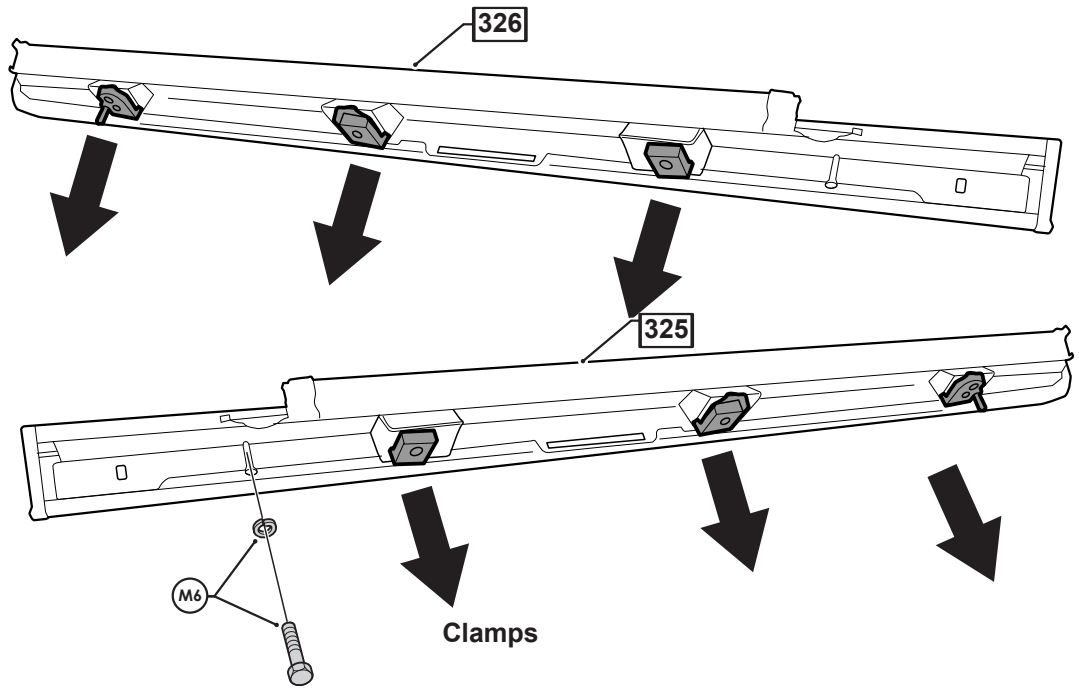

M6 Bolt and M6 Spring Washer is only on the RHS Side Rail

Step 12

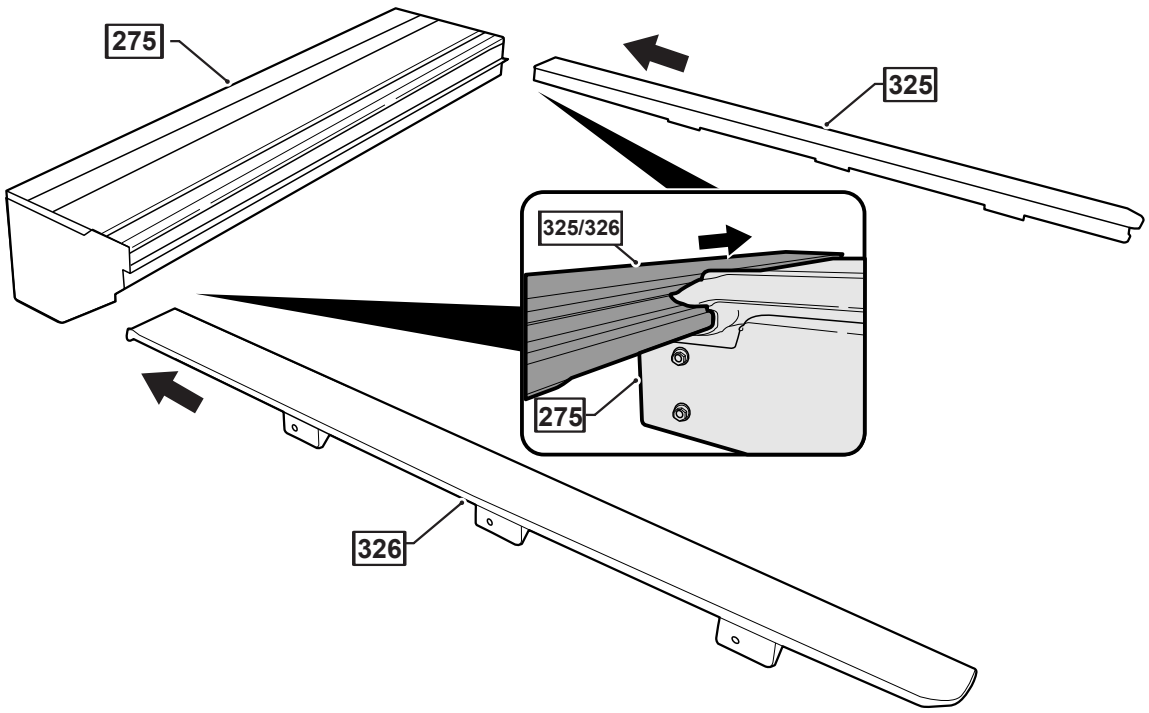

© Roll Я Cover

Step 13

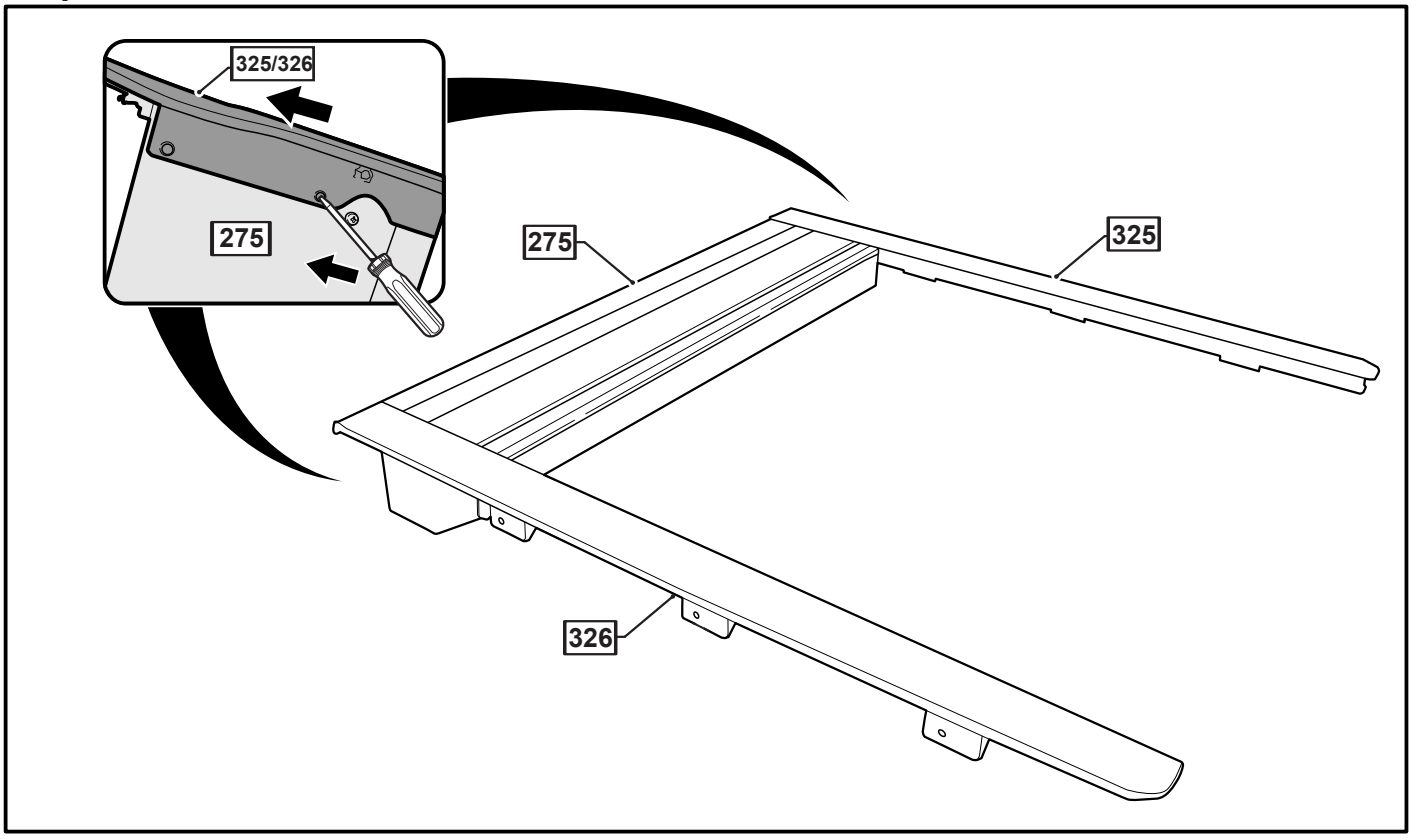

Step 14

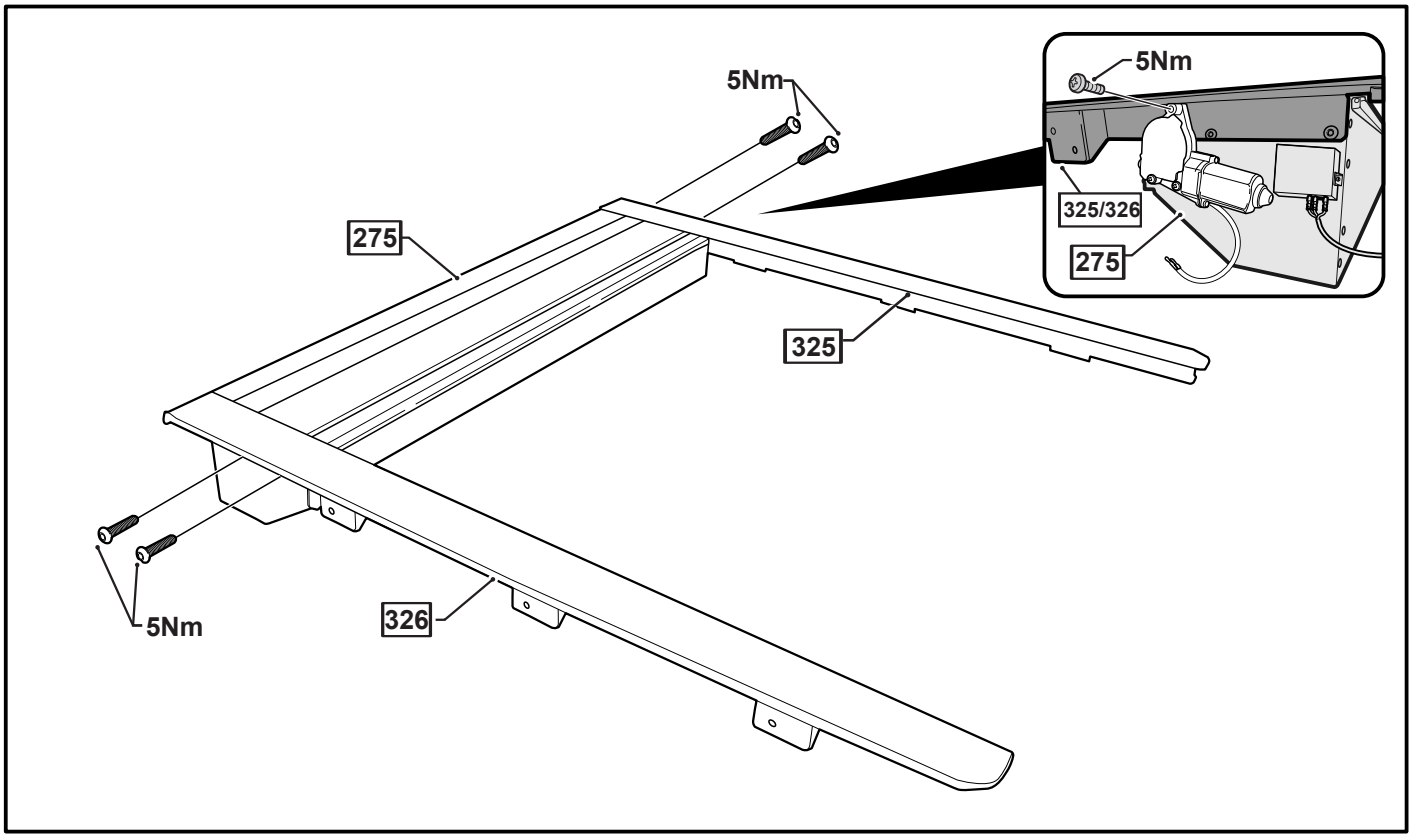

© Roll Я Cover

Step 15

Apply tar sealant to the gap under water channel.

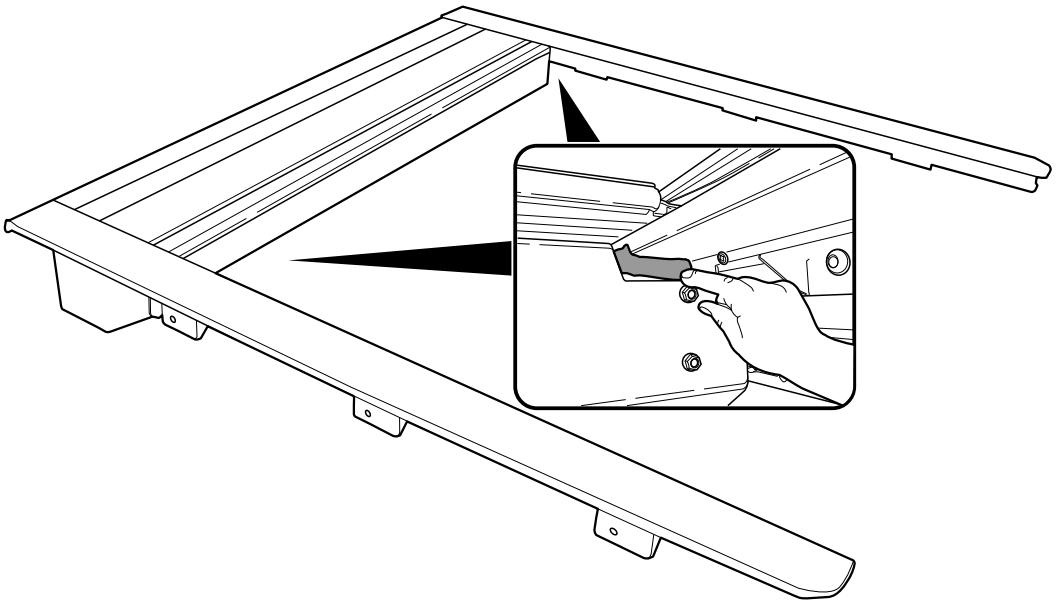

Step 16

Apply tar sealant to both sides of the canister as shown (where accessible).

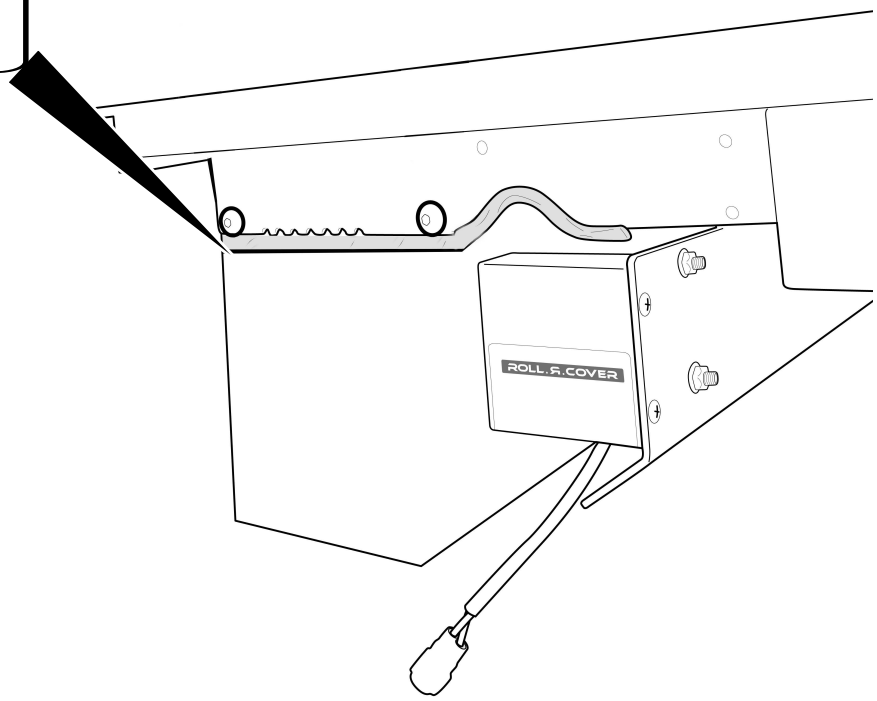

© Roll Я Cover

Step 17

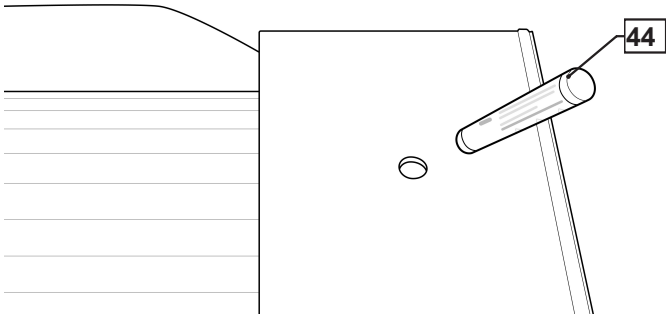

Apply 3M primer provided around side rail holes.

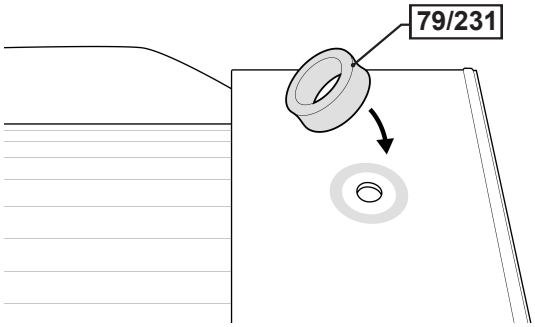

Peal away backing from foam sealant and stick to side rail. Front and rear gaskets are not identical.

Step 18

Repeat on all holes.

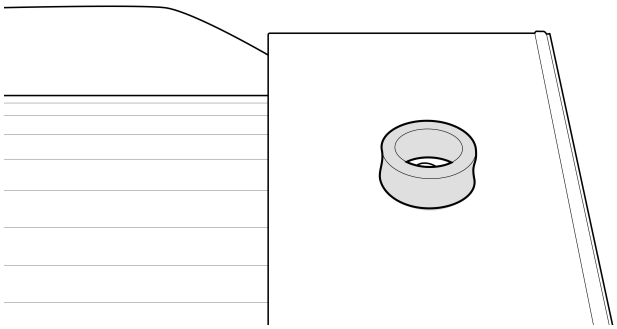

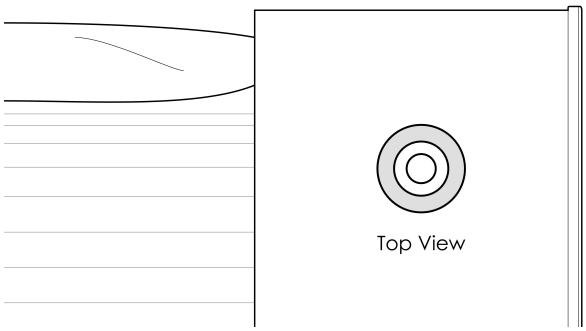

© Roll Я Cover

Step 19

Remove all rubber cups from sports bar.

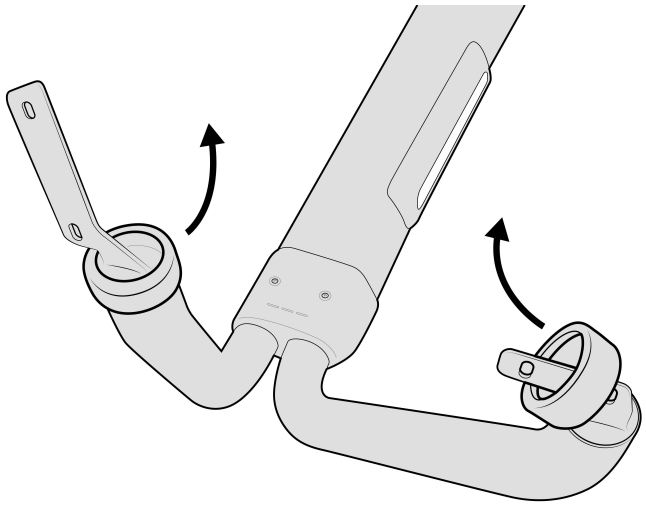

Step 20

Trim front leg of sports bar to base as shown. Repeat on front legs only.

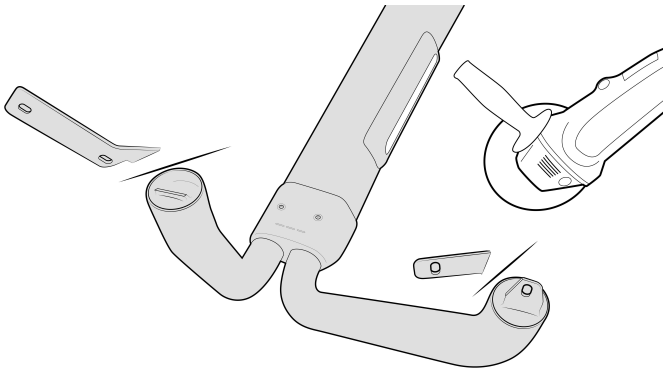

Cut the rear leg as shown be careful not to damage the sports bar.

© Roll Я Cover

Step 21

Place previously removed rubber cups back on the sports bars.

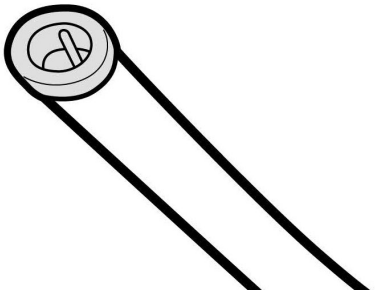

Step 22

Drill the M6 Sports bar hole with a 6.5mm drill only for the front leg. Repeat for mirroring side

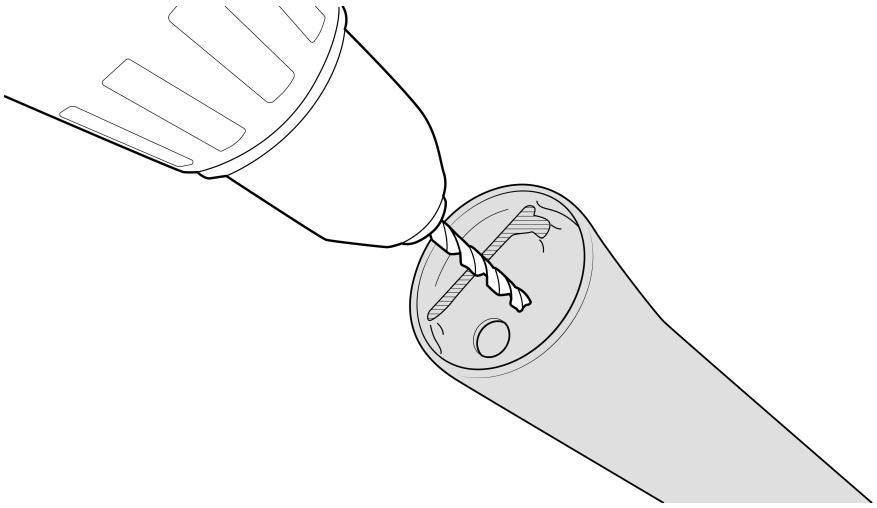

Step 23

Spray the hole and threading bolt provided with the Roll R Cover spray

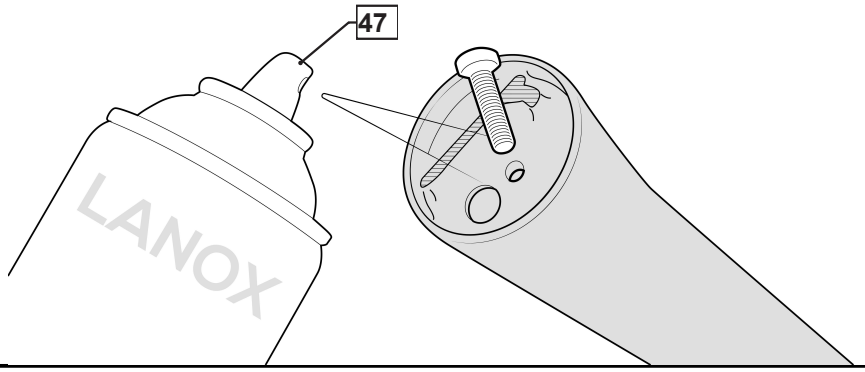

© Roll Я Cover

Step 24

Carefully fasten the threading bolt as shown. This will make a bigger thread in the housing.

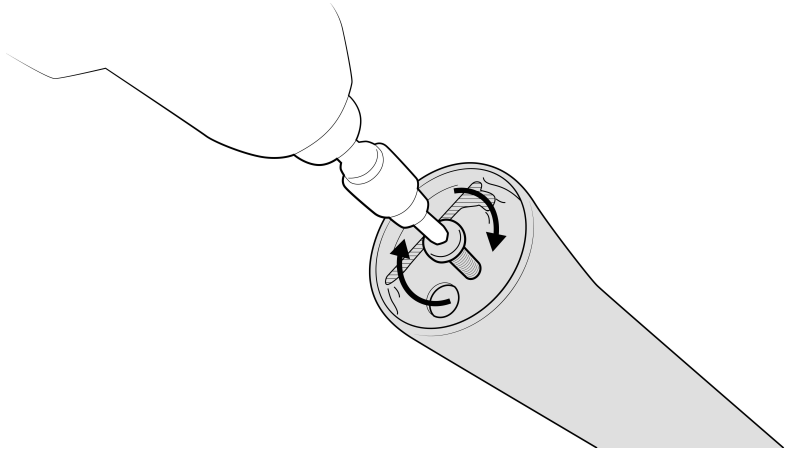

Step 25

Place and tighten grub screw followed by locking it with the nut.

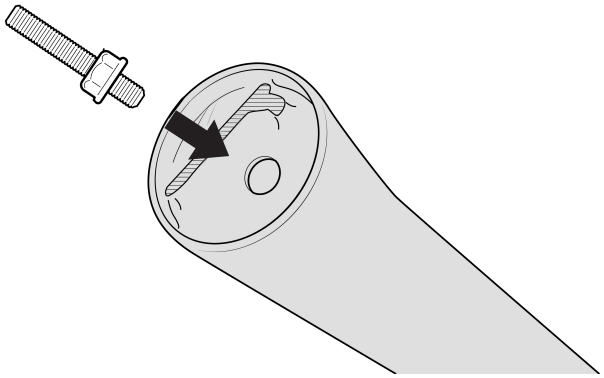

Step 26

Place Sportsbar on Roll R cover

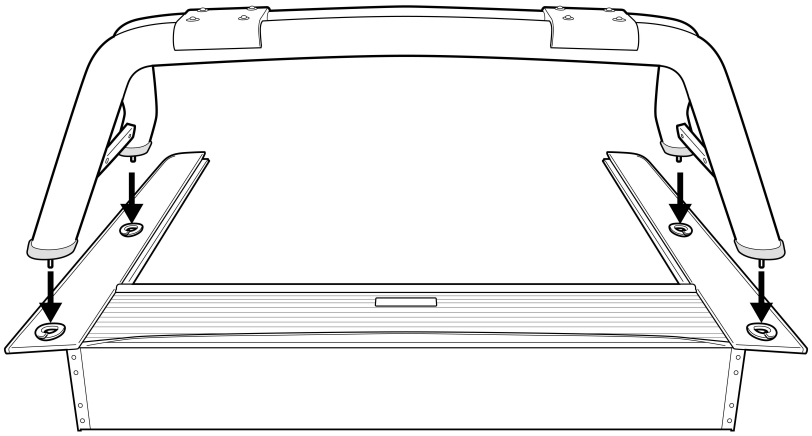

© Roll Я Cover

Step 27

Place flat washer and tighten with the nylock nut provided. Repeat on all four legs.

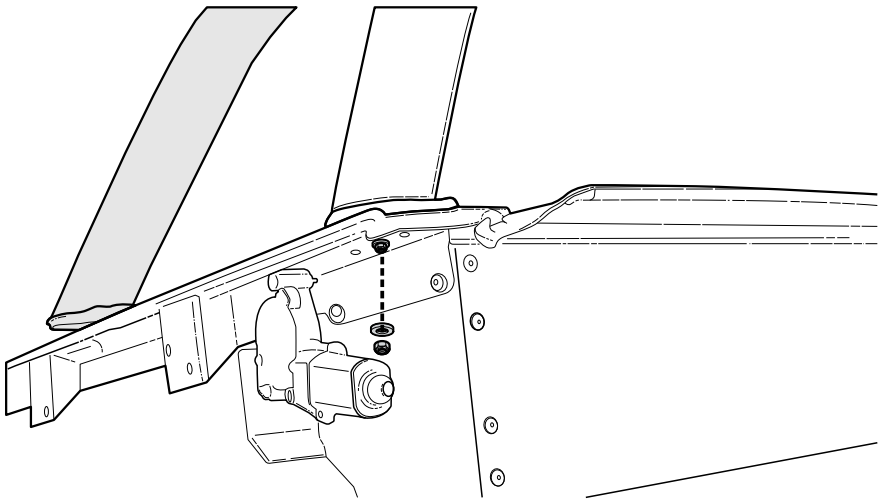

Note - Do not overtighten

Step 28

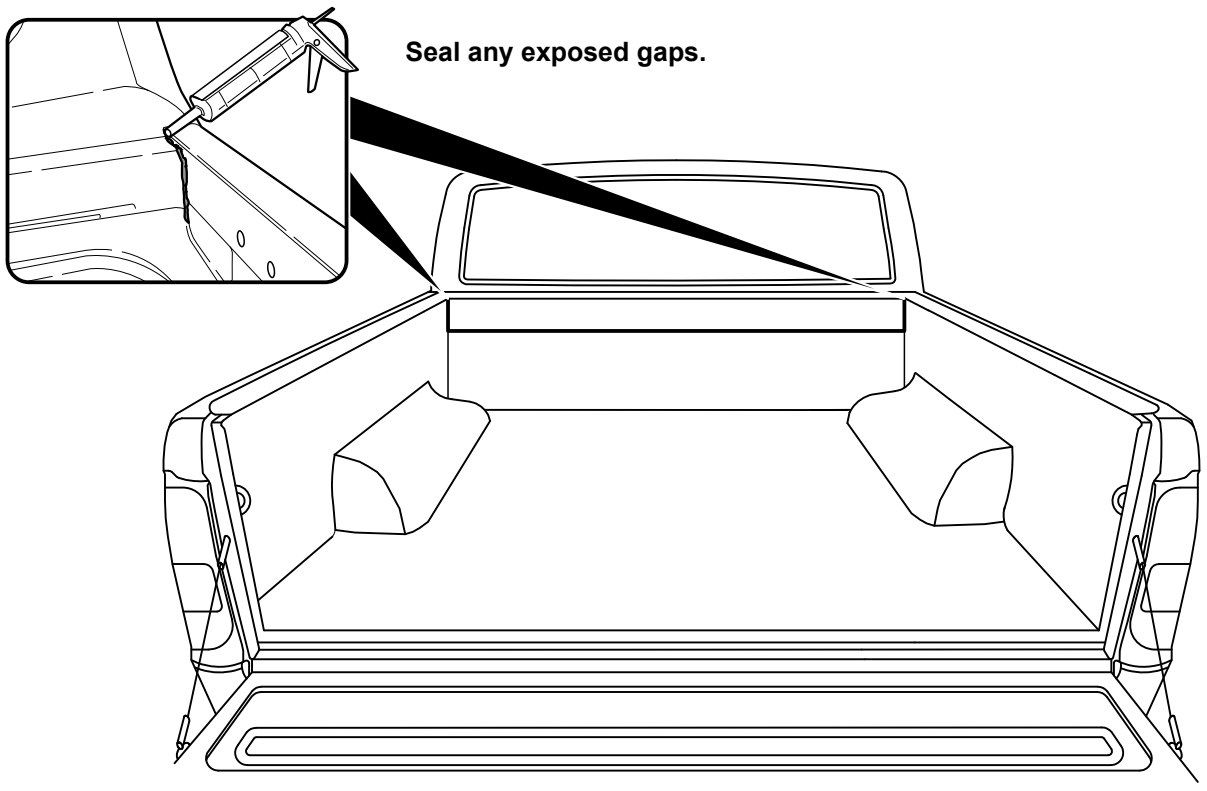

© Roll Я Cover

Step 29

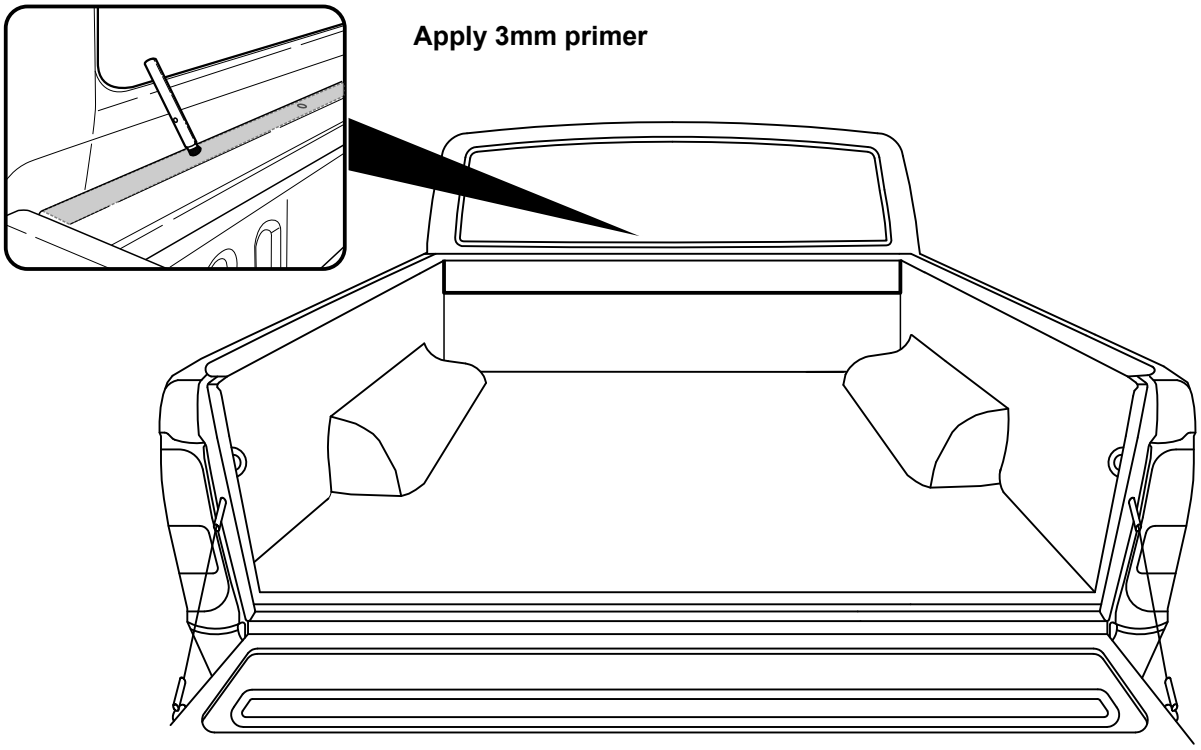

Step 30

Drill the rear hole of the sports bar rear leg mounting holes bigger with a step drill. You should be left with a 16mm hole.

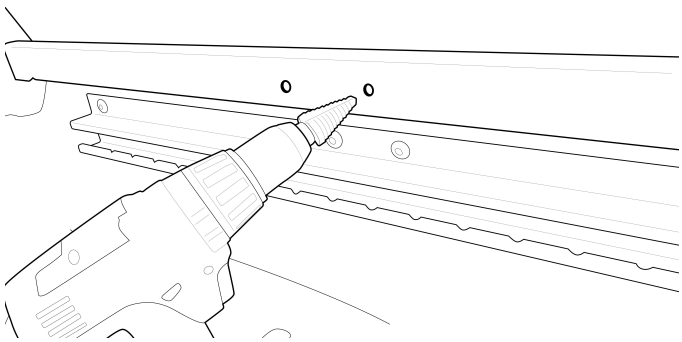

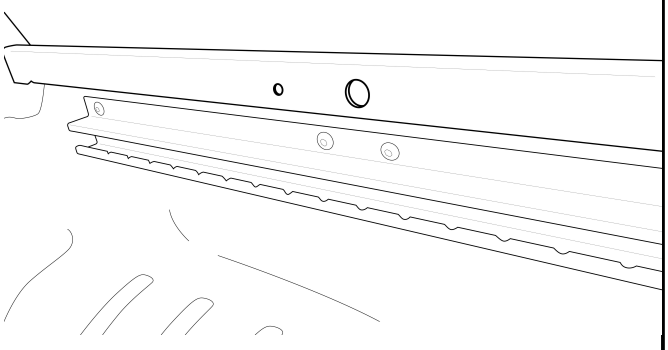

© Roll Я Cover

Step 31

Installing the Roll-R-Cover

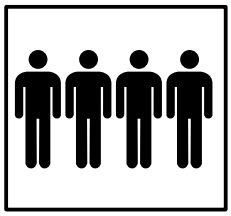

4 People
Recommended for lift

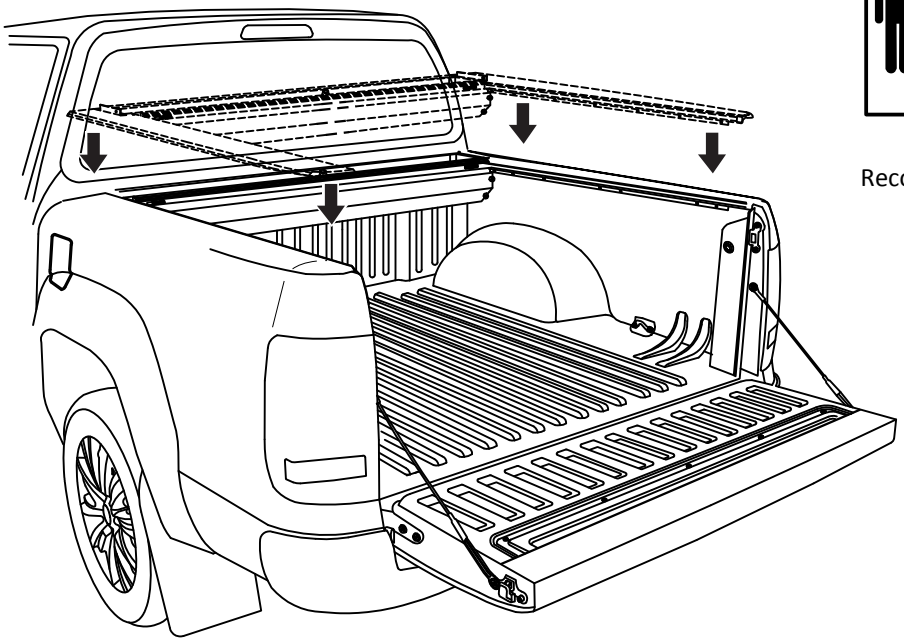

Step 32

Before dropping the Roll R cover into place on the tub, connect all relevant connections or plugs to the receiver and motor plug connection.

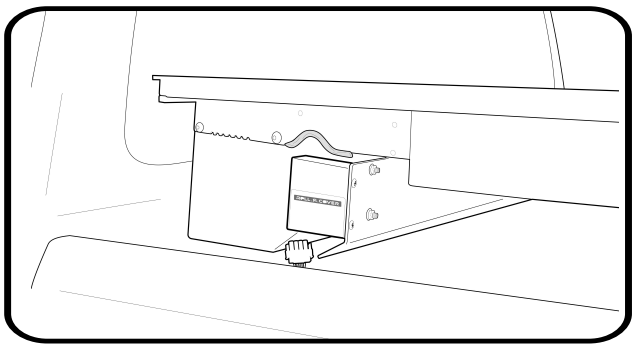

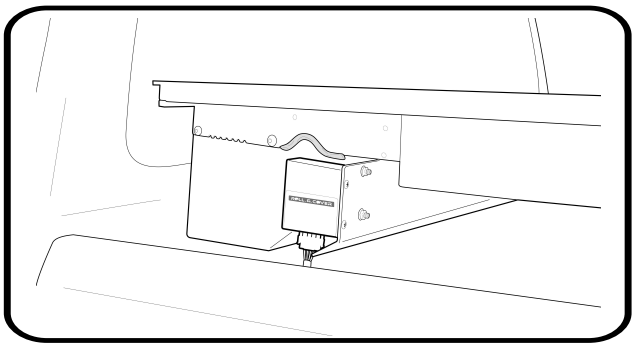

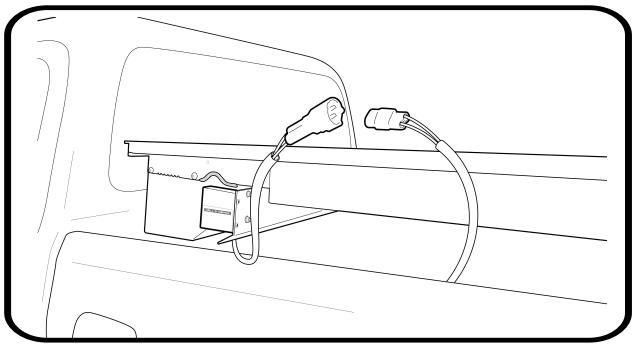

© Roll Я Cover

Step 33

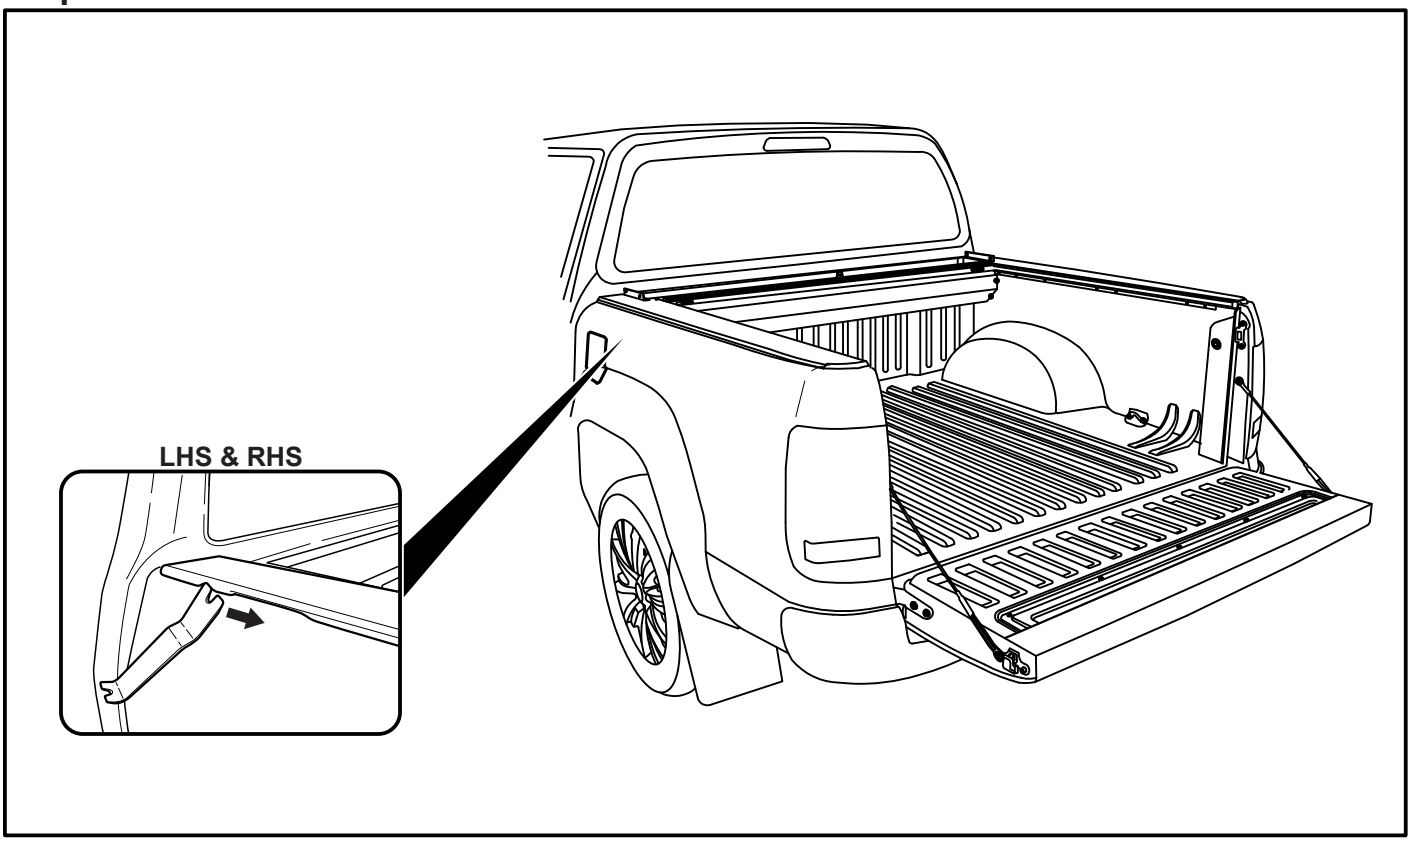

Step 34

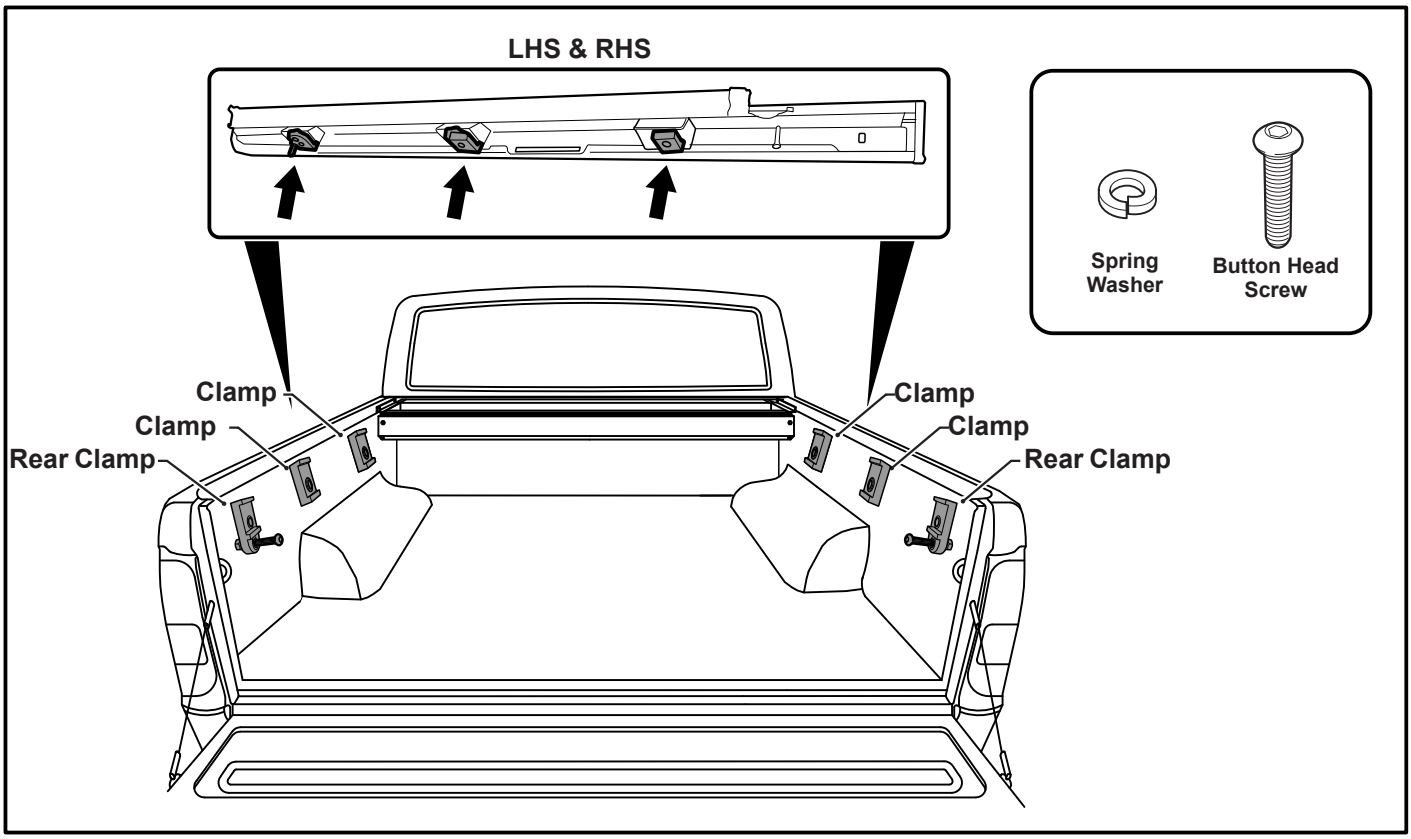

© Roll Я Cover

Step 35

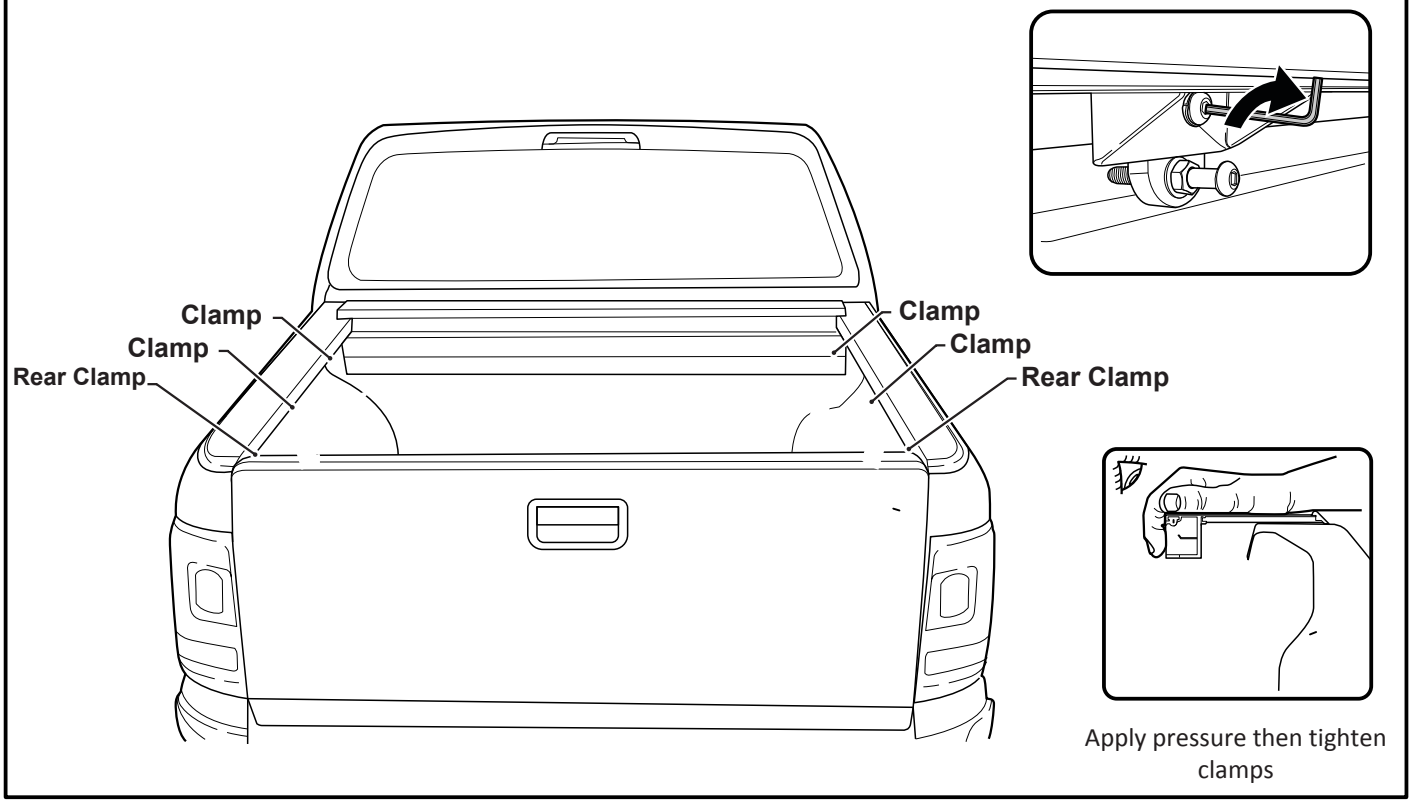

Step 36

Using the retained nut and bolt when removing the sports bar, fasten the rear leg with it.

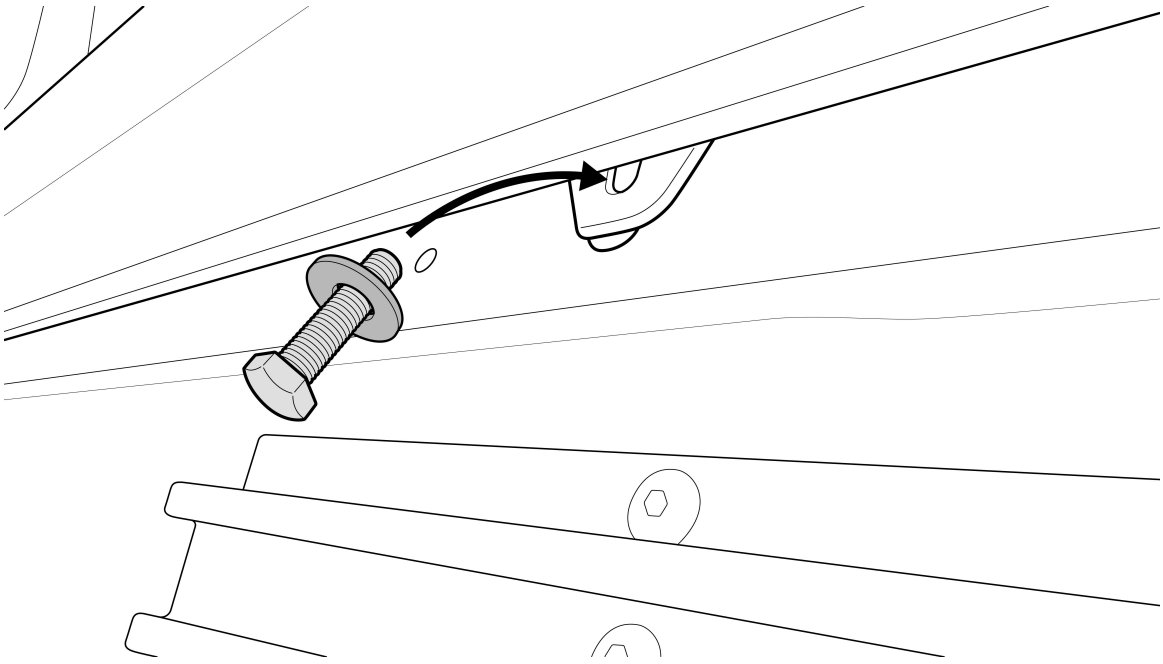

© Roll Я Cover

Step 37

Feed brake light loom back through the cavity and reconnect to connectors for correct operation of brake light.

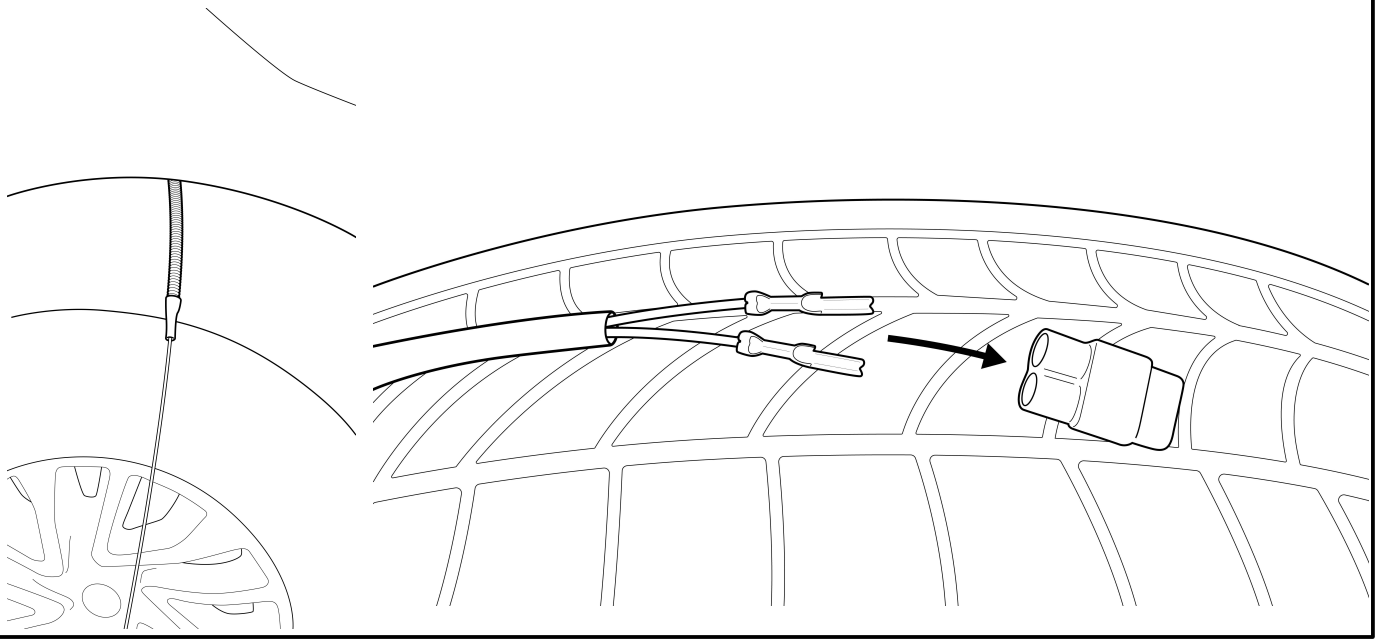

Step 38

If curtain doesn't meet the tailgate in it's fully closed position, loosen the clamps and shift the unit back.

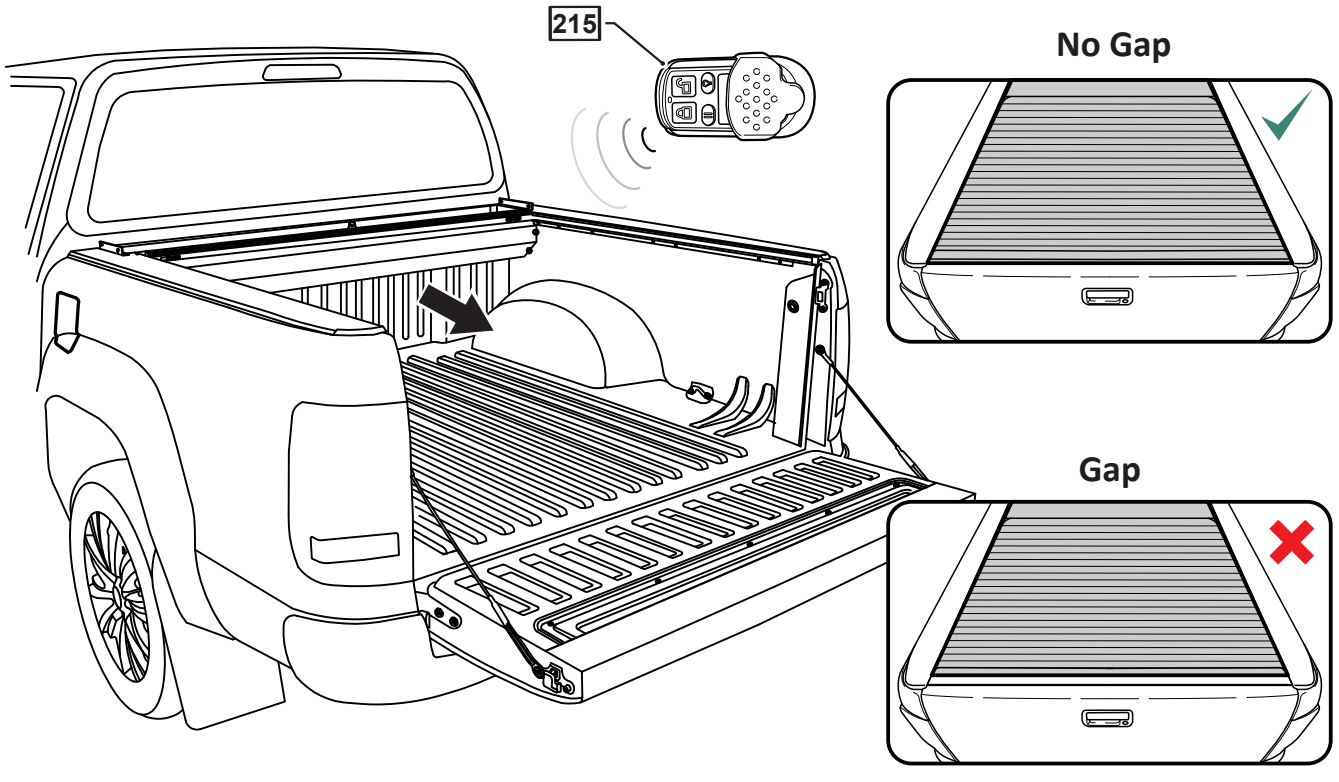

© Roll Я Cover

Step 39

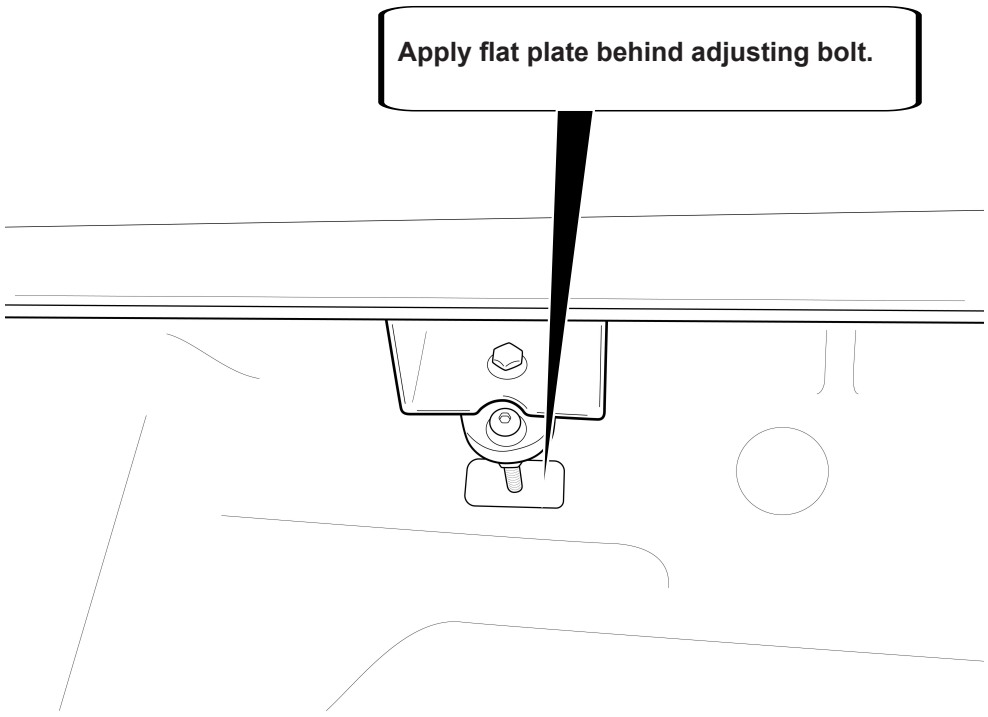

Step 40

Side rail rubber must have a 2mm gap from the top of the tailgate in the closed position.

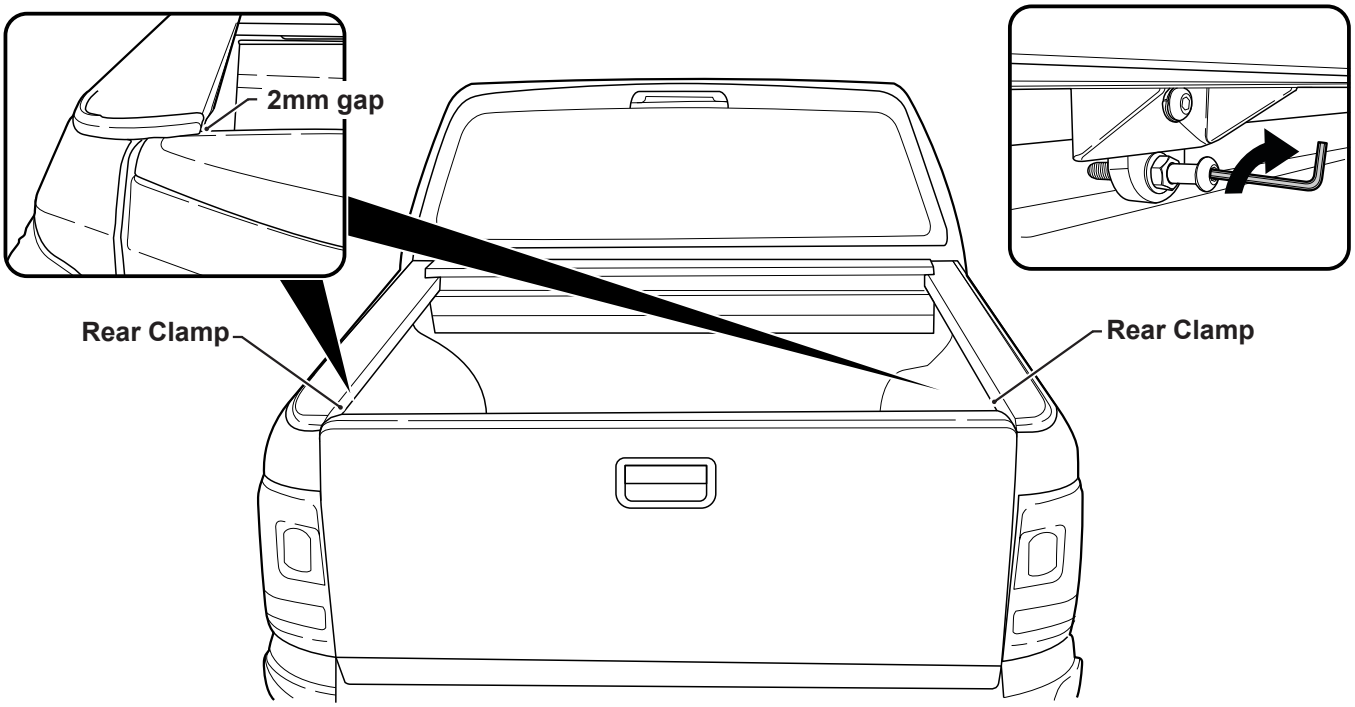

Rear clamp has an adjustment bolt. Drive the bolt in to lift the rear of the side rail till it clears the tailgate.

© Roll Я Cover

Step 41

Peal double sided tape backing off and stick to vehicle.

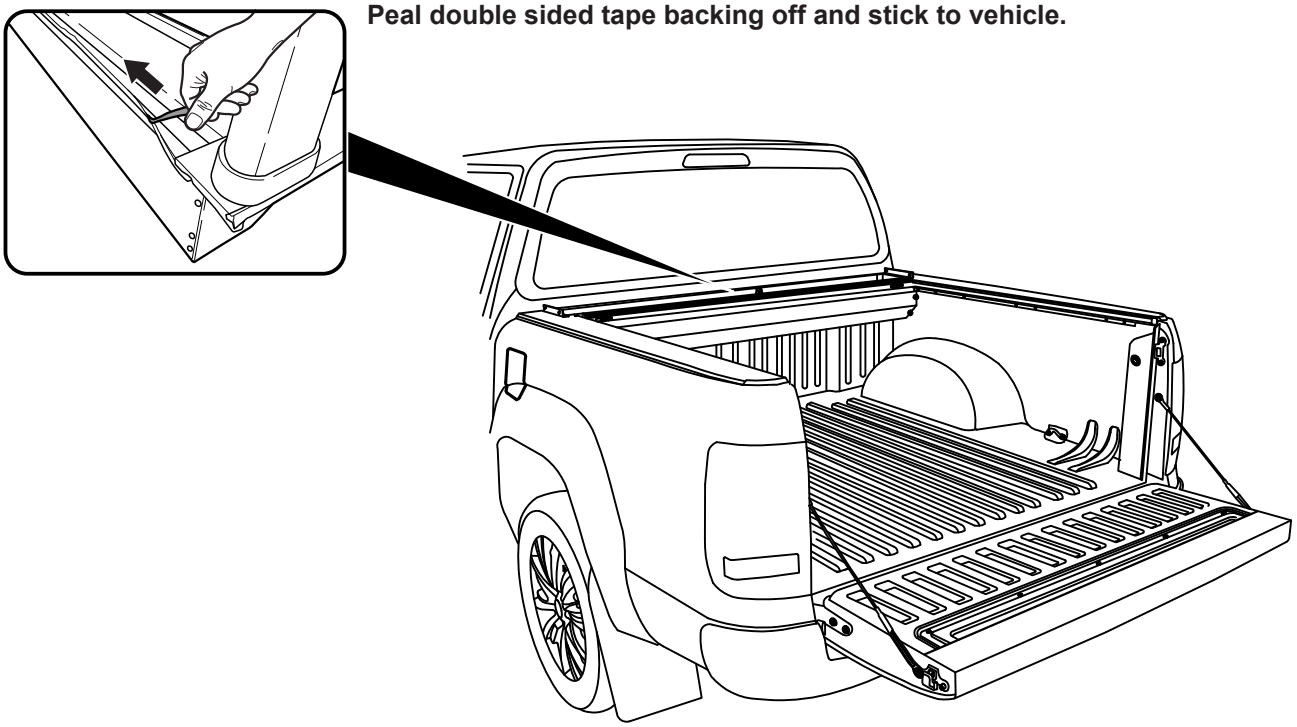

Step 42

Drill through bed and liner (check for obstructions).

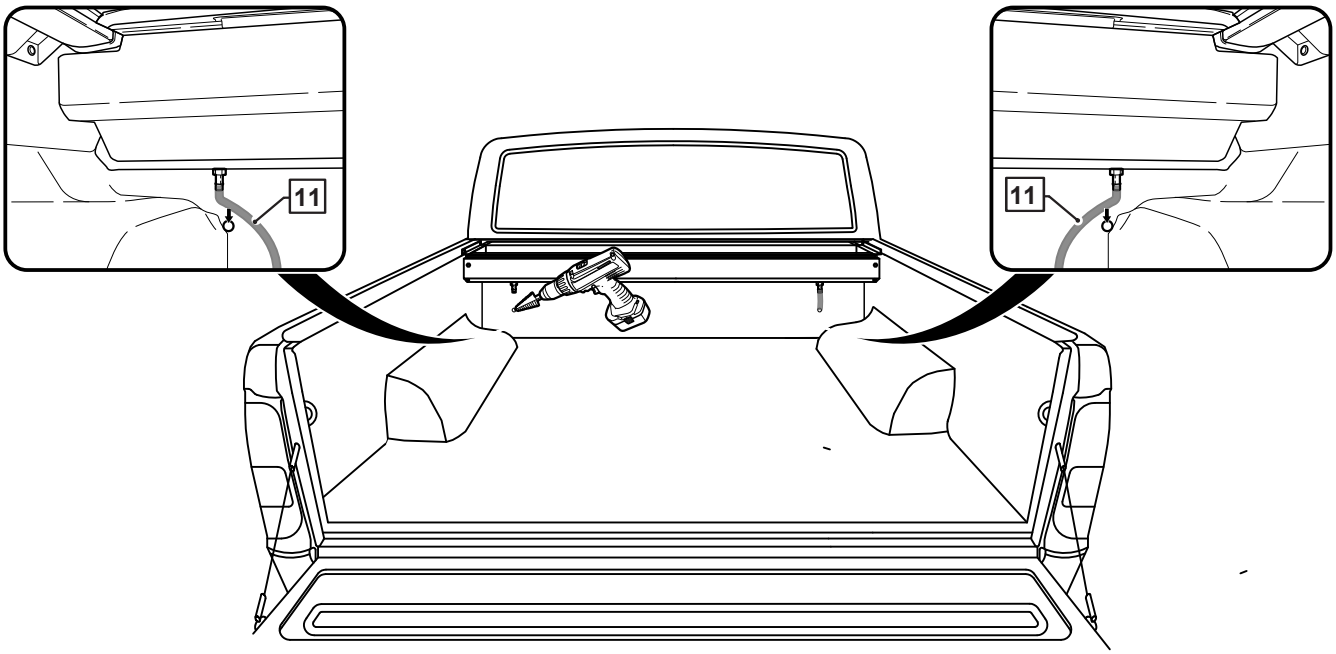

© Roll Я Cover

Step 43

Remove the tail light to check for obstructions before drilling

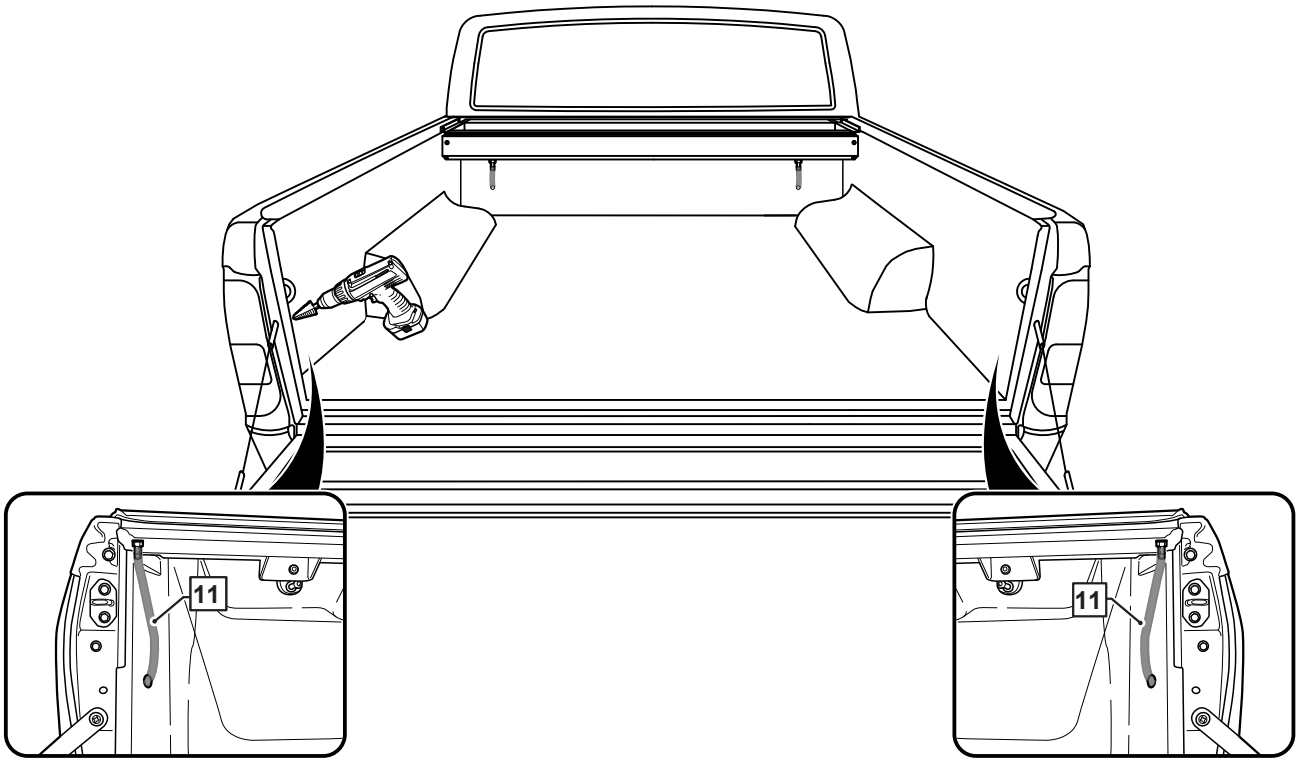

Step 44

Snap fit the top cover.

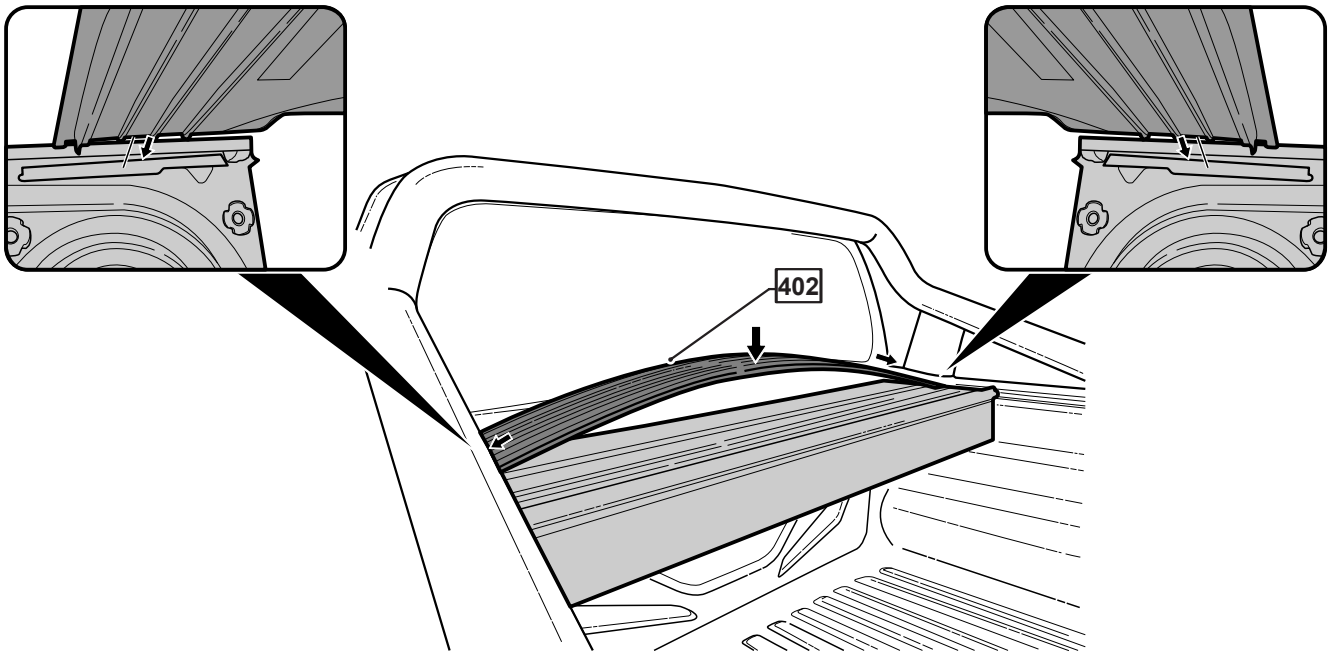

© Roll Я Cover

Step 45

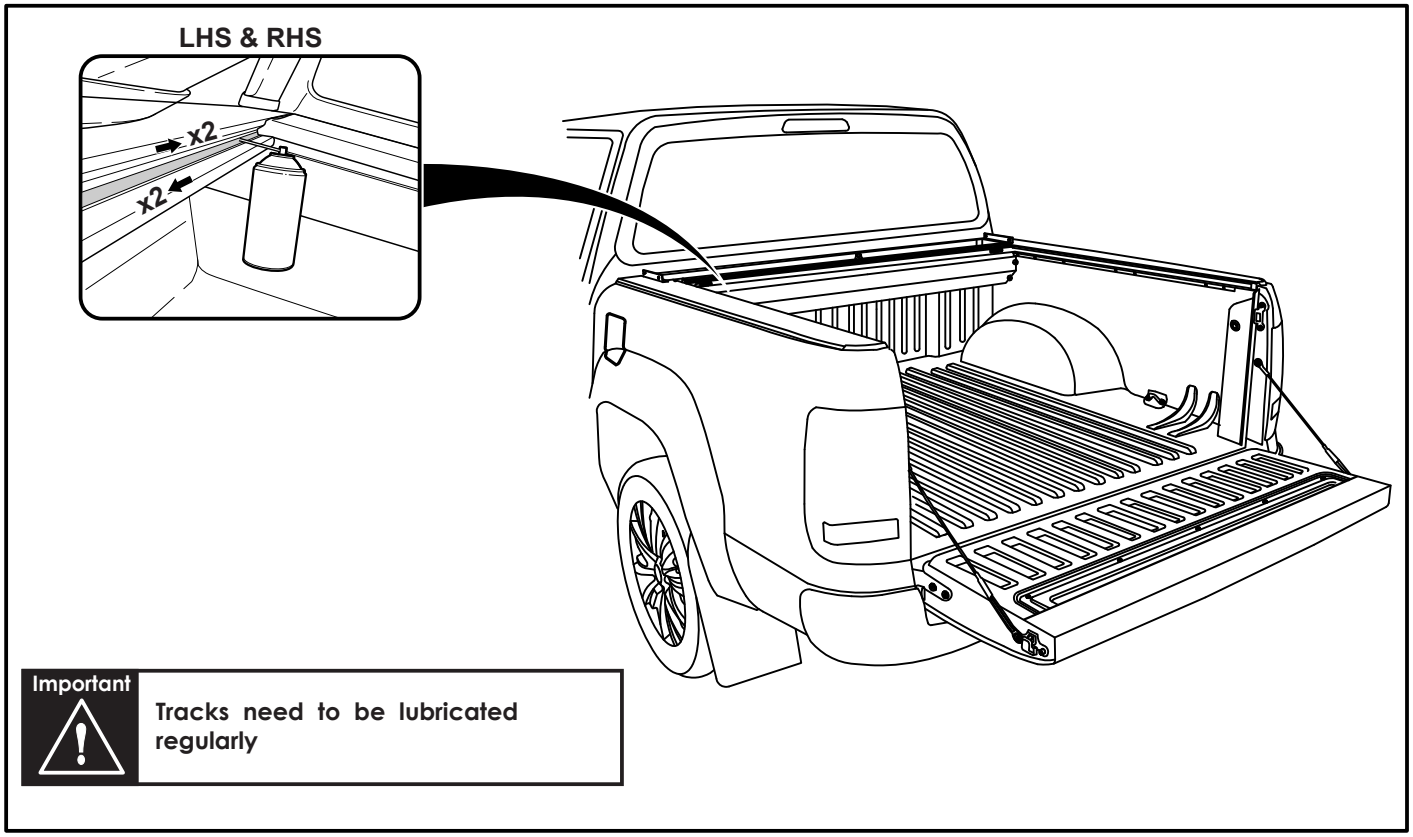

Important

Tracks need to be lubricated regularly

Step 46

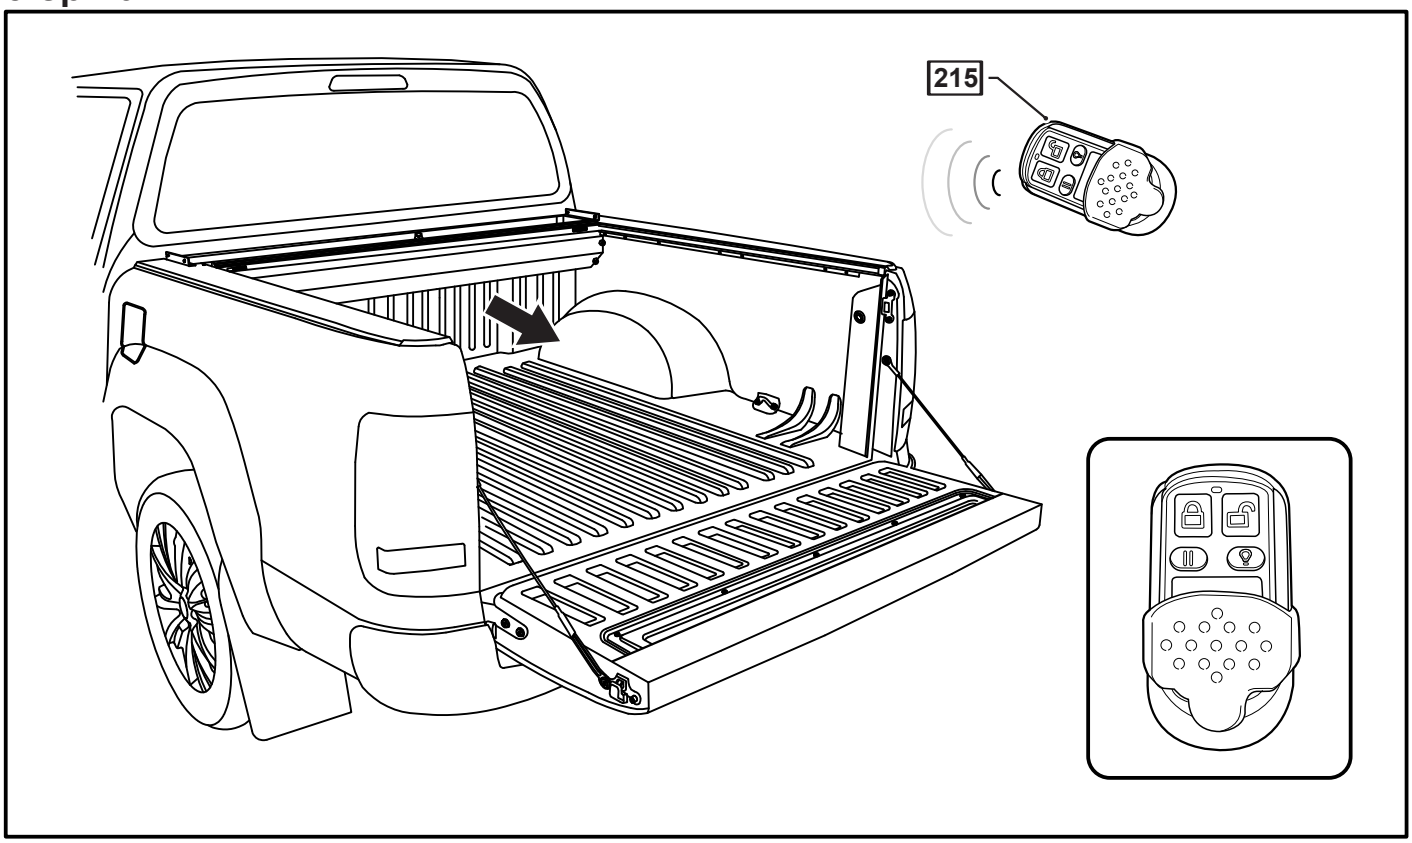

© Roll Я Cover

Step 47

Important

You may open tailgate when Roll R Cover is in closed position, however you MUST NOT close the tailgate when Roll R Cover curtain is in the fully closed position.

E. & O.E. This document is copyright and must not be used except as permitted below or under the Copyright Act 1968. You may reproduce and publish this document in whole or in part for your or your organisation's own personal or internal compliance, educational or non-commercial purposes. You must not alter or amend this document in any way. You must not reproduce or publish this document for commercial gain without the prior written consent of the copyright owner.

© Roll Я Cover