4X4 ACCESSORIES

WWW.HSPUTELIDS.COM
1300 441 498
Part No: X18
Fitting Time: 45mins

TAIL LOCK®

ISUZU D-MAX

HSP TAIL LOCK

FITTING INSTRUCTIONS

GENERAL NOTES

- Read through the fitting instructions prior to installation of accessory.
- Ensure all recyclable components and packaging are discarded and recycled following local recycling regulations.
- Safely store and protect any removed vehicle components.

SAFETY NOTES

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.

FITTING TIME

45mins

PARTS SUPPLIED

Part Description	Part Number	Quality/ Length	CHECK LIST
TAIL LOCK ASSEMBLY			
Main Bracket	X18-A	1	
Tube	X18-B	1	
Actuator	ACT-01	1	
Wiring	CL-LOOM-LONG	1	
Patch Wiring	X-PATCH	1	
Lever	X18-C	1	
FASTENERS			
Actuator Screws	36	2	
Lever Bolt	32	1	
20mm M6 Bolt	16	1	
OTHER			
Cable Ties		5	
Fitting Instruction		1	

STEP 1

Fit the lever through main braket bend as shown.

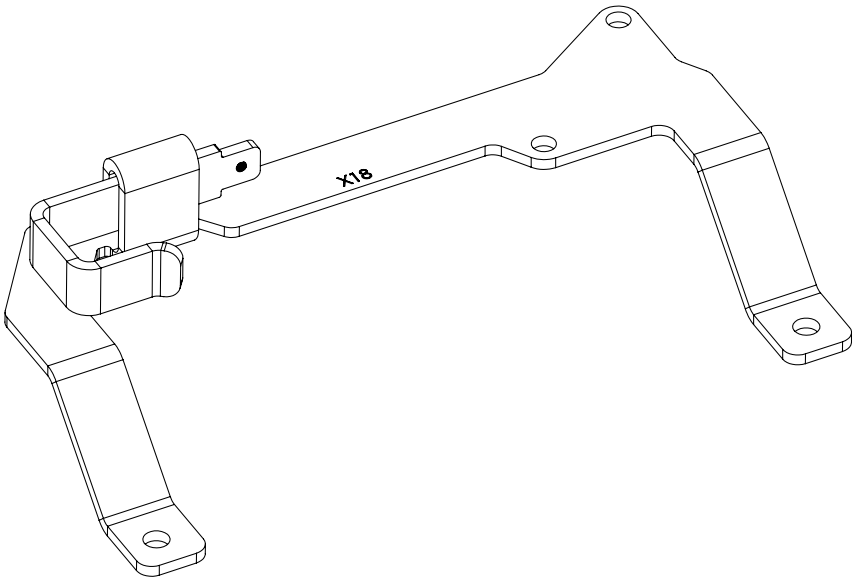

STEP 2

Fit tube to lever and fasten the bolt as shown.

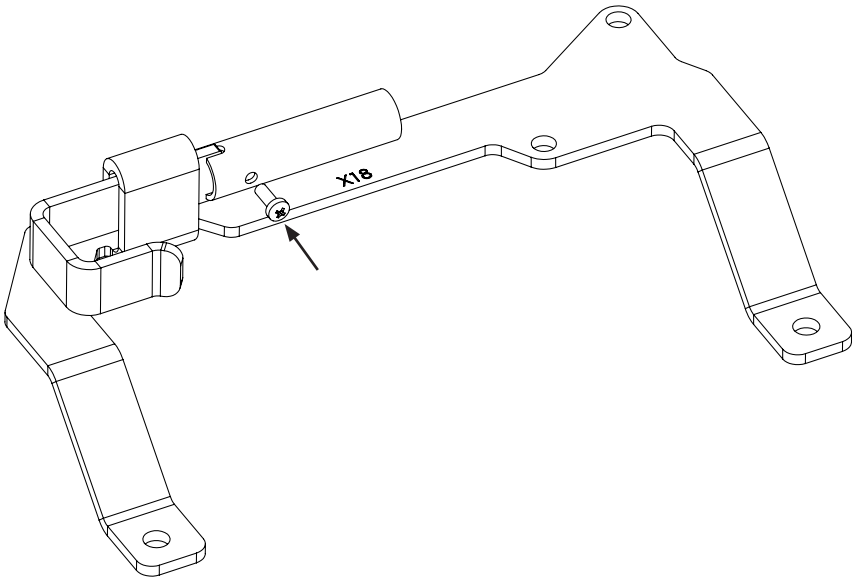

STEP 3

Fit actuator to main bracket as shown.

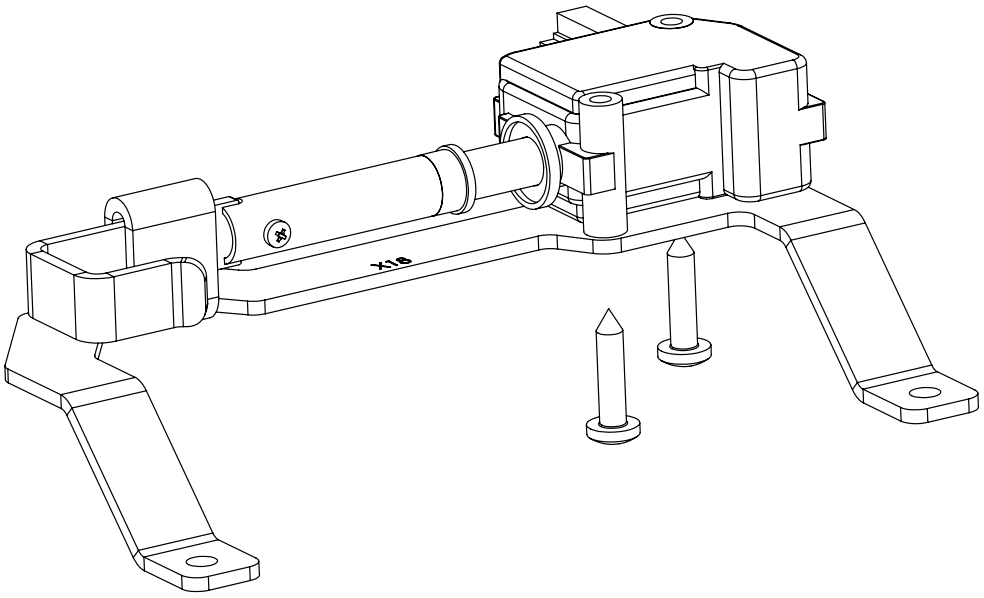

STEP 4

Plug wiring to actuator.

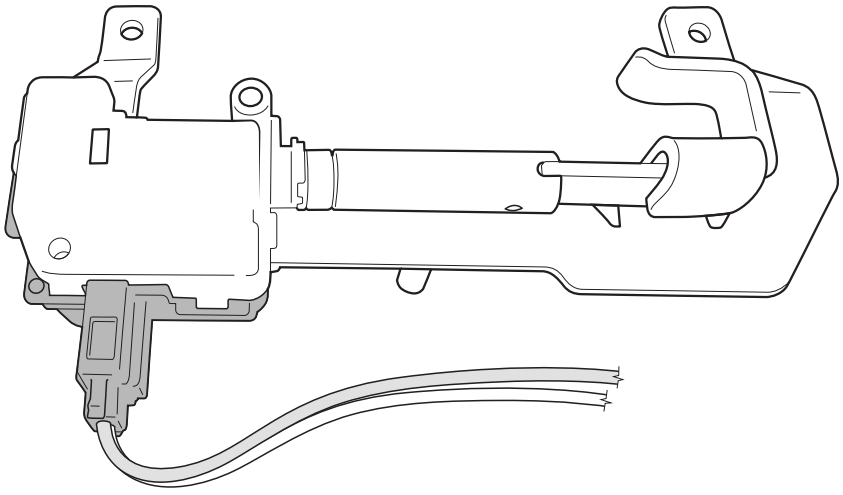

STEP 5

Remove tail gate cover.

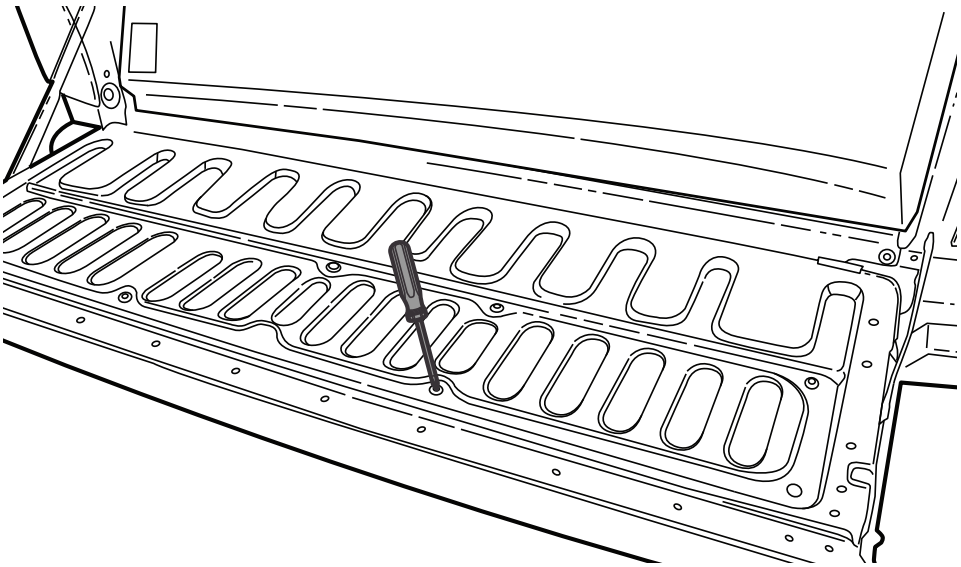

STEP 6

Remove cover then remove the indicated bolts and rod as shown.

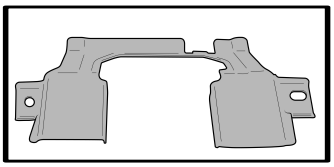

Dispose cover

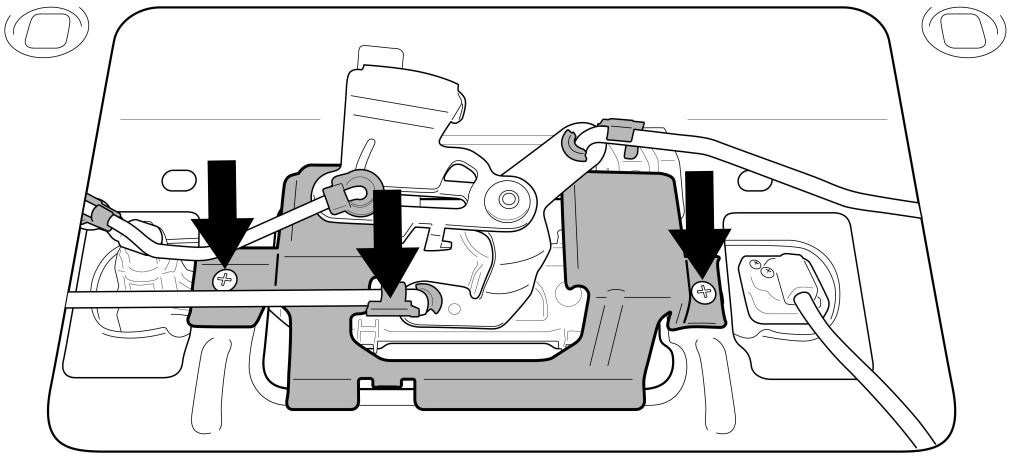

STEP 7

Fit Tail Lock bracket and indicated bolts and rod as shown.

1) Use the longer of the two bolts removed earlier to fasten.
2) Use the included 20mm M6 Bolt to fasten.

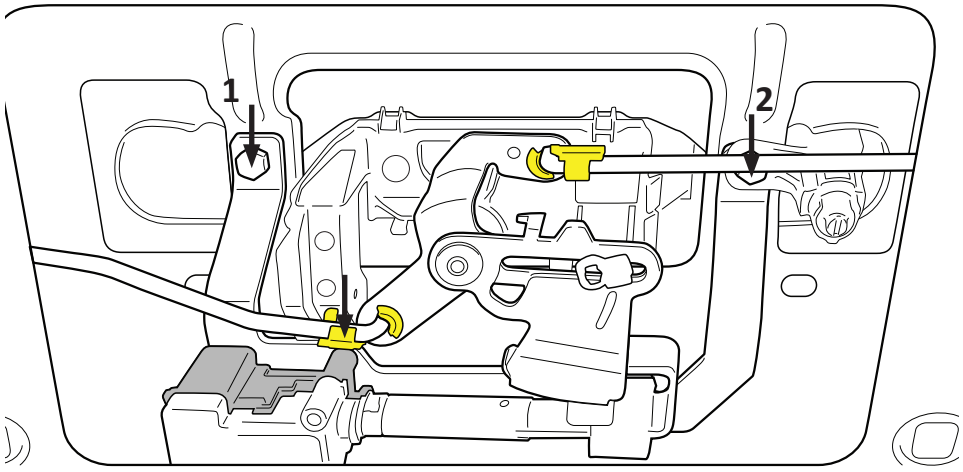

STEP 8

Run wiring from tailgate unde the car

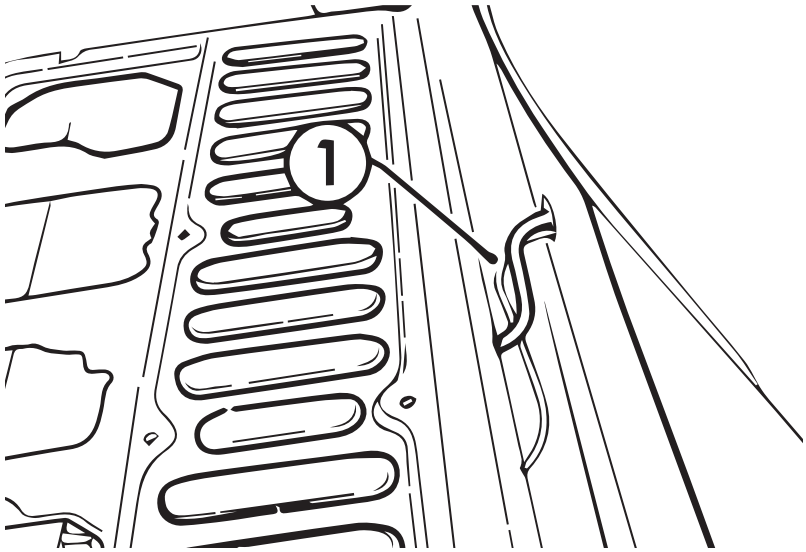

STEP 9

Run wiring from tailgate to front passenger door over chassis rail. Cable tie wiring every 500mm.

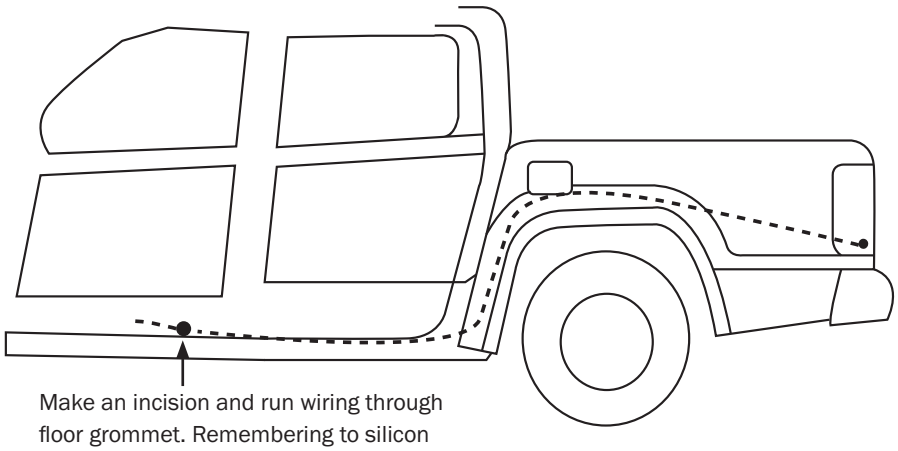

Make an incision and run wiring through floor grommet. Remembering to silicon when finished.

STEP 10



REMOVE
SCUFF PLATE

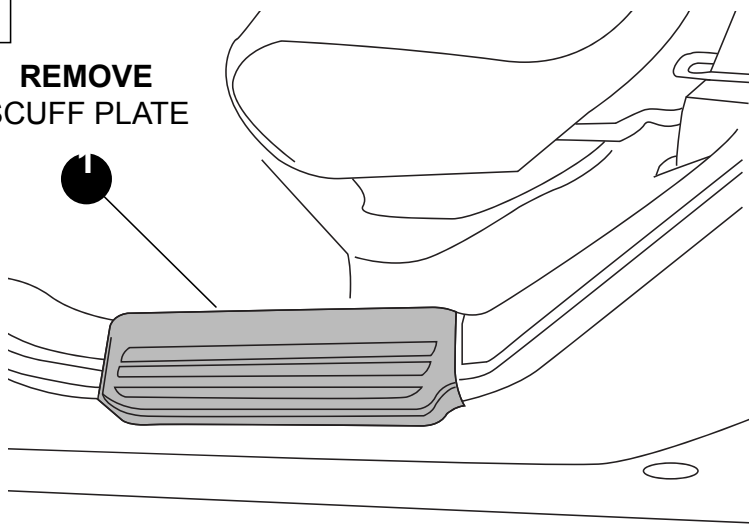

STEP 11

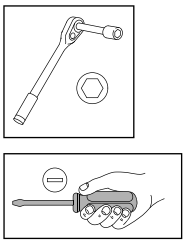

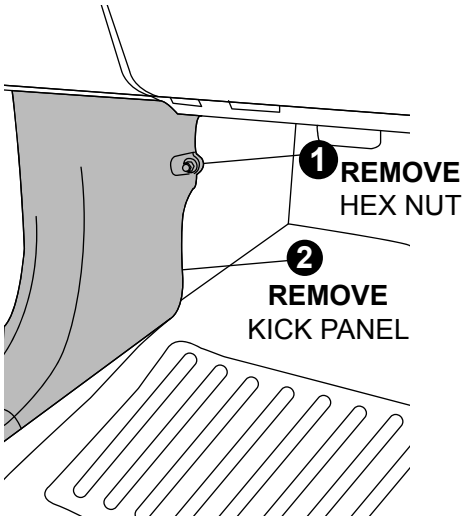

STEP 12

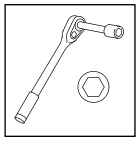

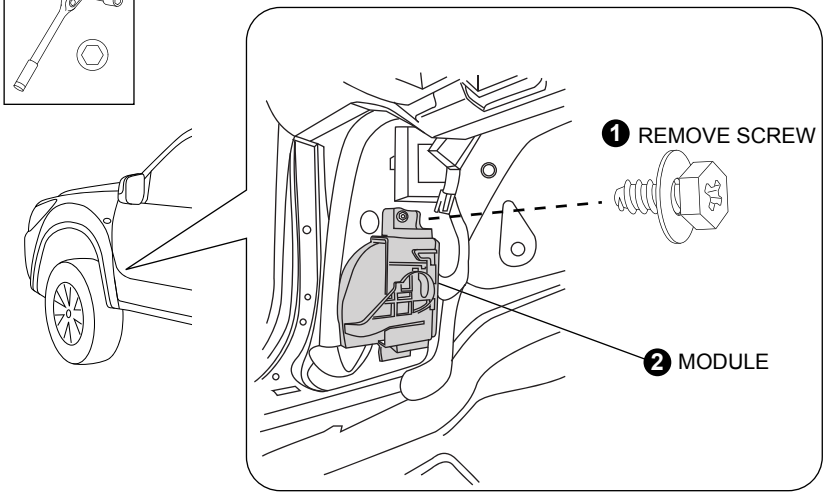

STEP 13

Release the lever and unplug wiring.

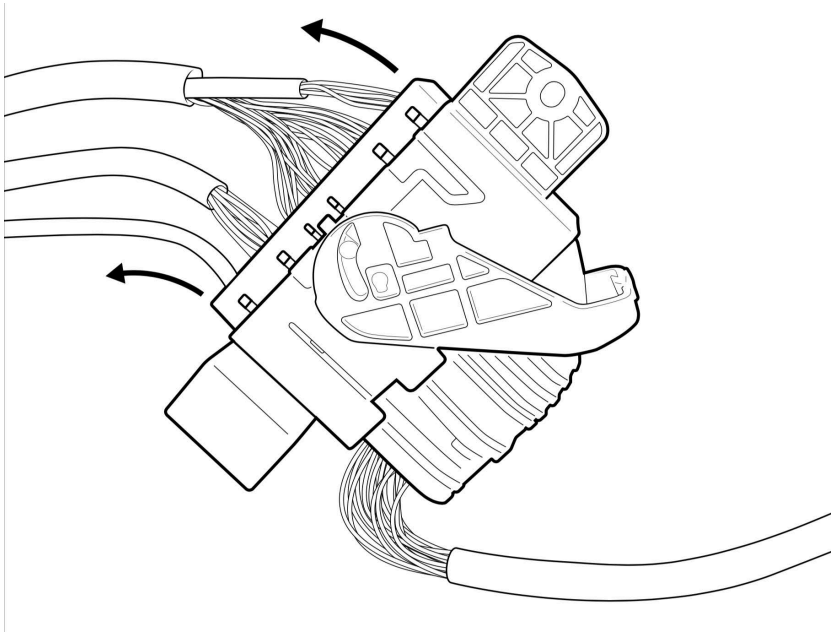

STEP 14

Remove indicated section.

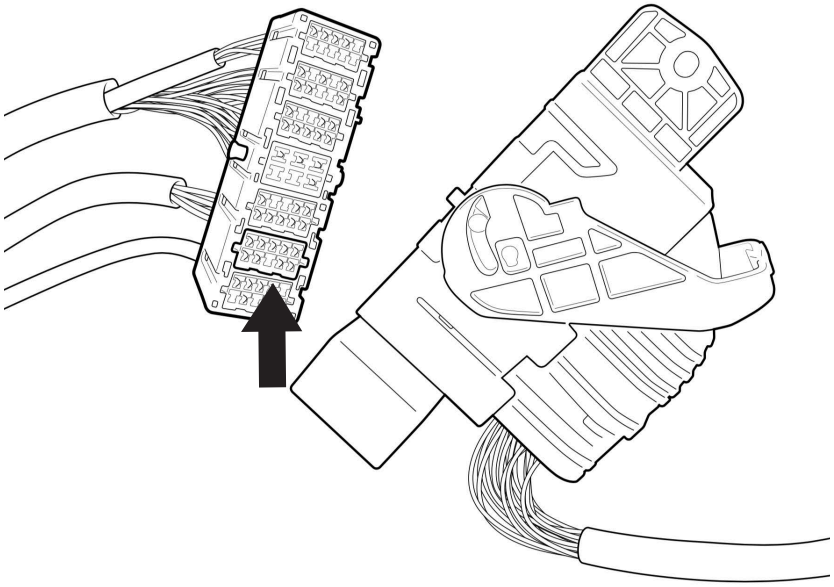

STEP 15

Remove wire blue, replace with wire blue from X-PATCH loom.
Remove wire blue with red trace, replace with wire red from X-PATCH loom

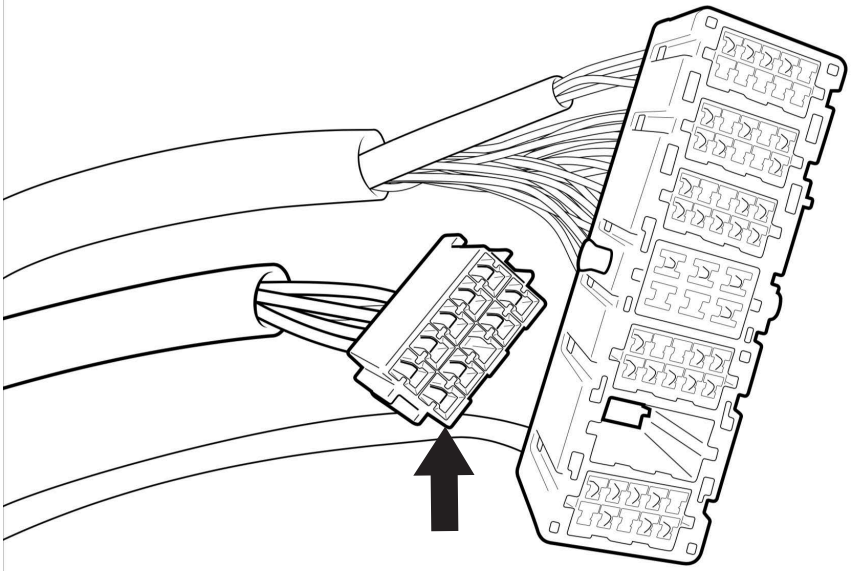

STEP 16

House the actuator wiring harness terminals (1) into the supplied 2-way male connector (2) as shown.

Connect the actuator wiring harness to the vehicle patch harness 2-way connector (3).

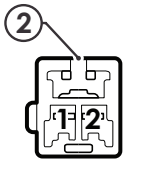

1 - BLUE WITH RED TRACE

2 - BLUE

Rear view of 2-way connector

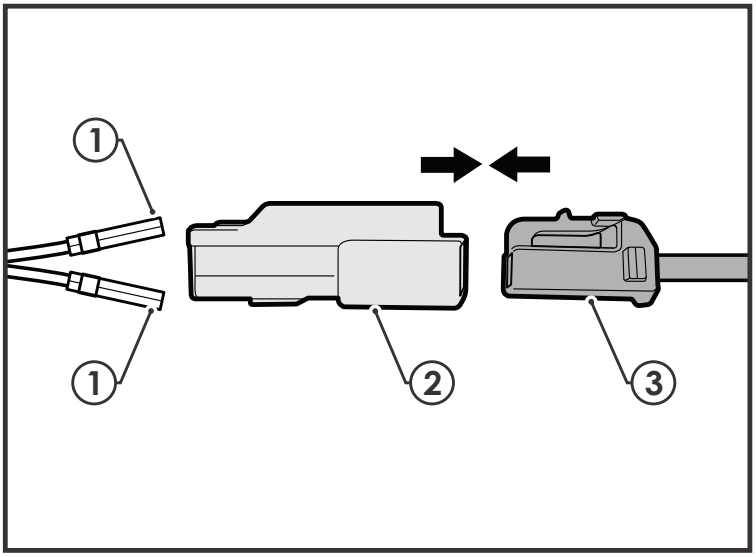

Check the wiring harness and vehicle patch harness are securely attached to the main vehicle harnesses.

STEP 17

Connect X-PATCH loom to CL-LOOM-LONG

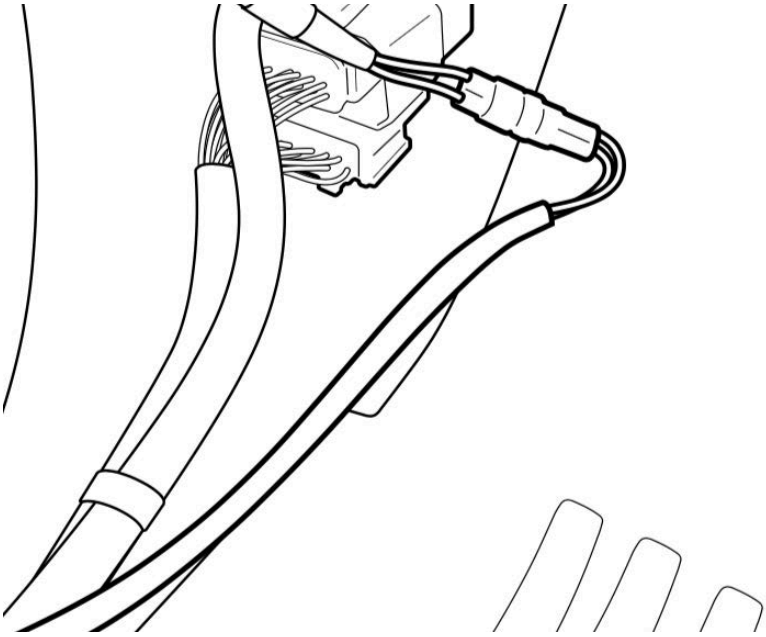

STEP 18

Plug all connectors removed earlier inside kicker panel. Then assemble kicker panel.

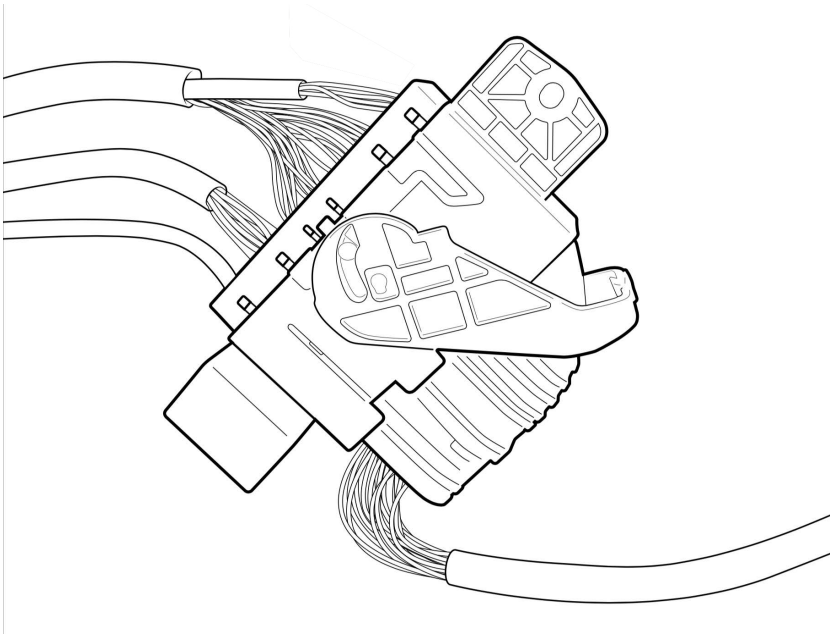

STEP 19

Place and fasten tail gate cover.

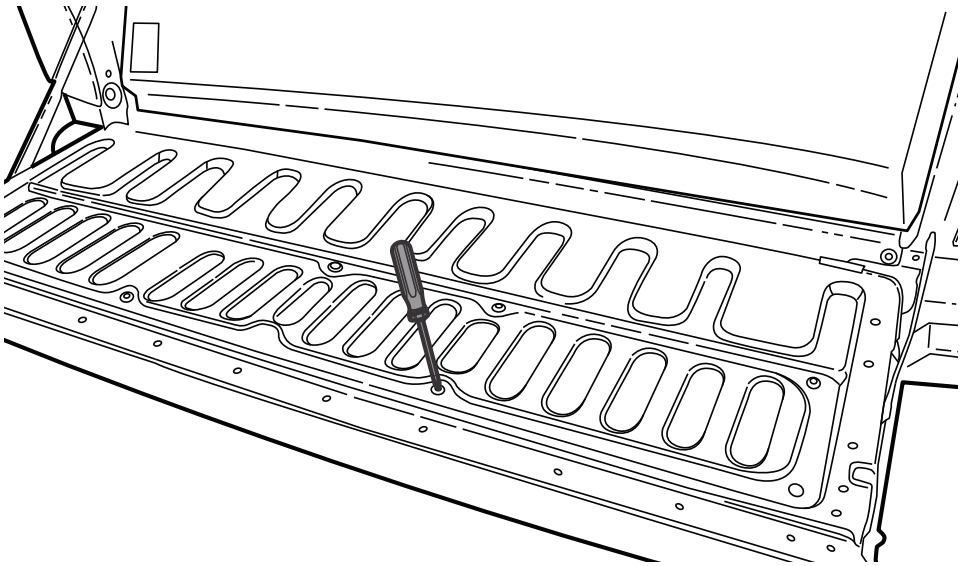

FITTING COMPLETED