



WWW.HSPUTELIDS.COM

1300 441 498

Part No: NN12-1

Fitting Time: 30 mins



**Nissan NP300
Navara Face Lift Dual Cab
MY21.5**

HSP TAIL ASSIST

FITTING INSTRUCTIONS

—GENERAL NOTES

- Read through the fitting instructions prior to installation of accessory.
- Ensure all recyclable components and packaging are discarded and recycled following local recycling regulations.
- Safely store and protect any removed vehicle components.

—SAFETY NOTES

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.

—FITTING TIME




30 mins

—PARTS SUPPLIED

PART NUMBER	PART DESCRIPTION	QUANTY
KSD-SPEC-1	Dampener strut	1
TA-21	Tailgate mount R/H	1
TA-22	Tub mount R/H	1


— STEP 1 —

Open tailgate.

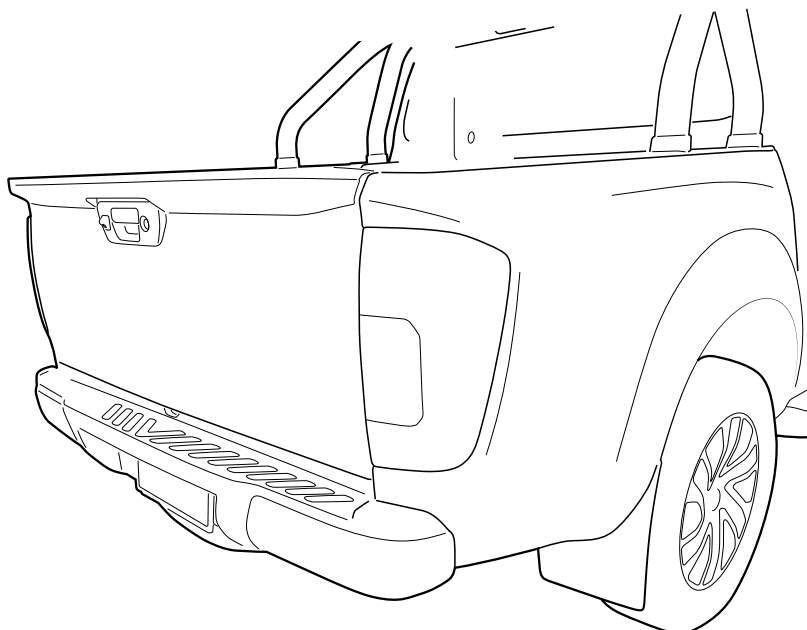


— STEP 2 —

Remove the indicated bolt .

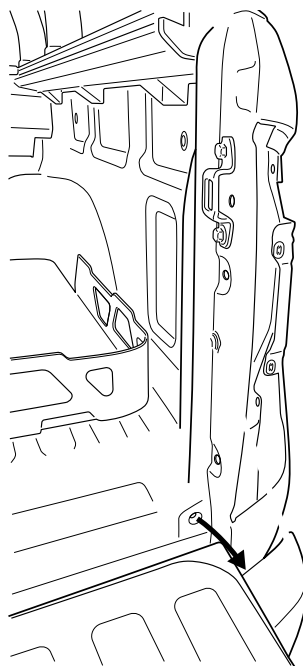

— STEP 7 —

1. Connect part number KSD SPEC 1(Dampener strut) as indicated. You will need to pull on the shaft to extend and click in to position.

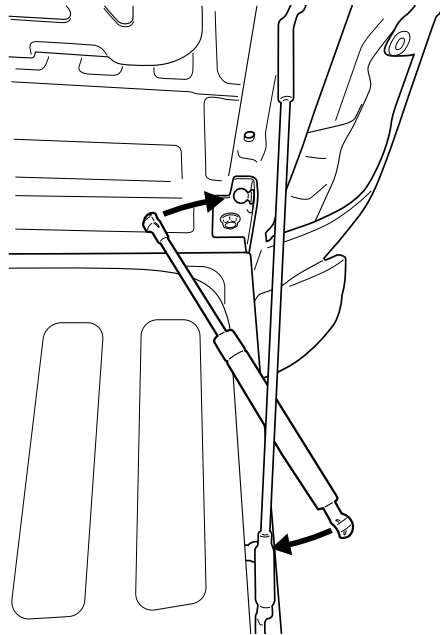

— FITTING COMPLETE —