

Important Information!

Please note that with the box of the Roll R Cover, there is a service kit that includes:

- A User Guide
- Specific Lubrication
- A Servicing Guide
- A Warranty Guide

This must be handed over to the end user in order for them to register their warranty and understand the servicing requirements.





Part No: LD4R-S3.5

INSTALLATION INSTRUCTIONS

To suit LDV **T60**


This instructions has QR codes on relevant sections. You must scan the QR codes via your smart phone camera and watch the video to ensure your fitment is to standard.





INSTALLATION TIME: 1 hours and 45 minutes (Approximately)


IMPORTANT	 Do not stand/sit or rest heavy objects on Roll R Cover Humans or animals are not to be under the closed cover at any given time Tonneau Cover is not dust or water tight If contact with volatile chemicals occur, clean Cover with mild detergent and water solution 			
Care Instructions	 Read Instructions fully before commencing installation. Clean Cover with a mild detergent and water solution Do not use abrasive cleaners or solvents Refer to manufactures instructions applicable to power drill. Protect Tub floor against scratches during installation process. 			
Maintenance	Refer to Maintenance instructions.			
Tools Required	 Pen / Marker Centre Punch Drill & Drill bits Caulking Gun Silicon - Non Acetic 	 Scissors & Knife Spanner & Socket Tape measure Holesaw Filing tool 		 Soapy water solution Allen Key set Screw driver Rust Inhibitor Trim Removal Tool
PERSONAL PROTECTIVE EQ	QUIPMENT:	Rubber Gloves	Goggles	Hearing Protection


© Roll Я Cover

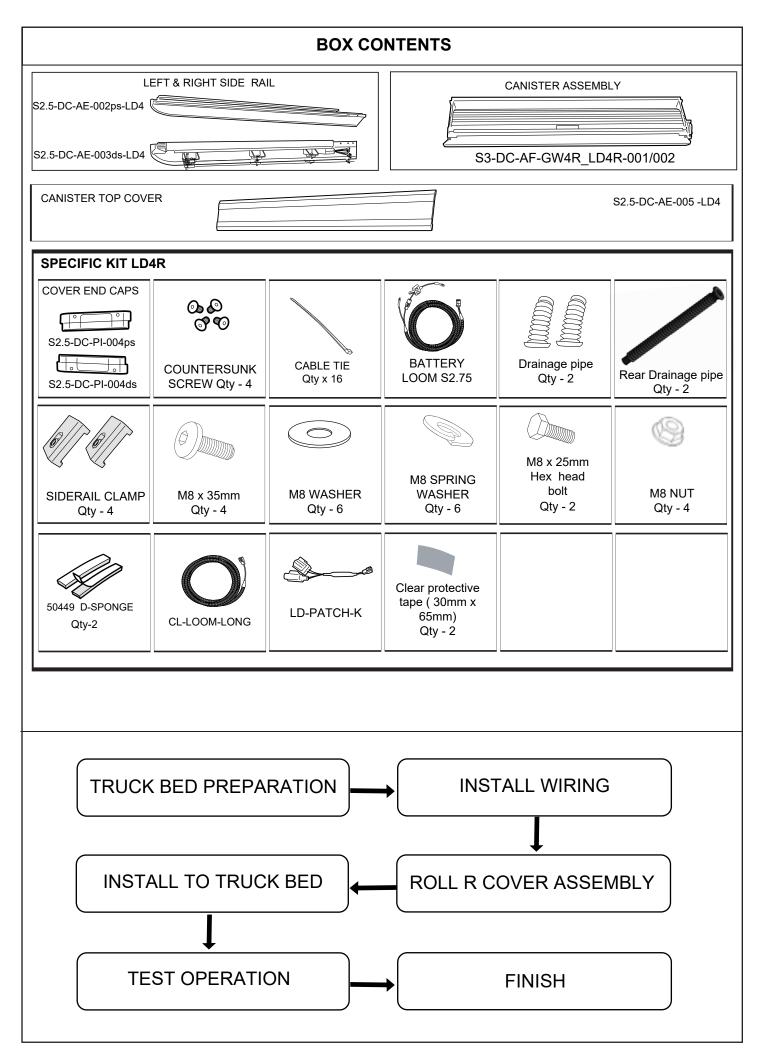


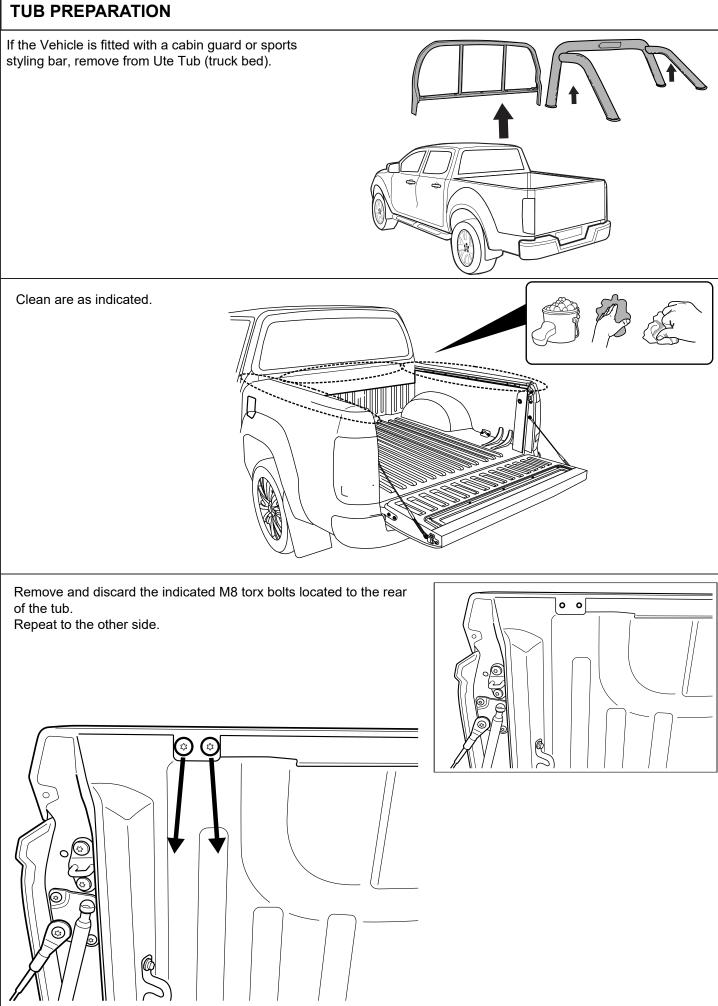


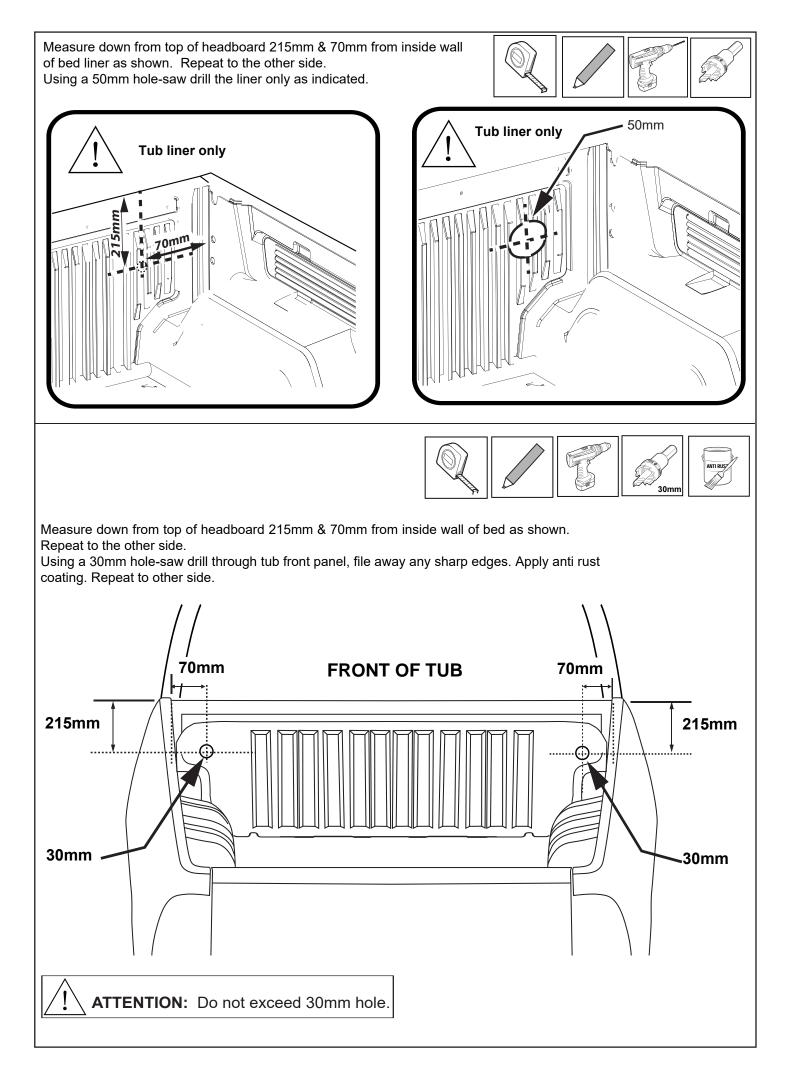


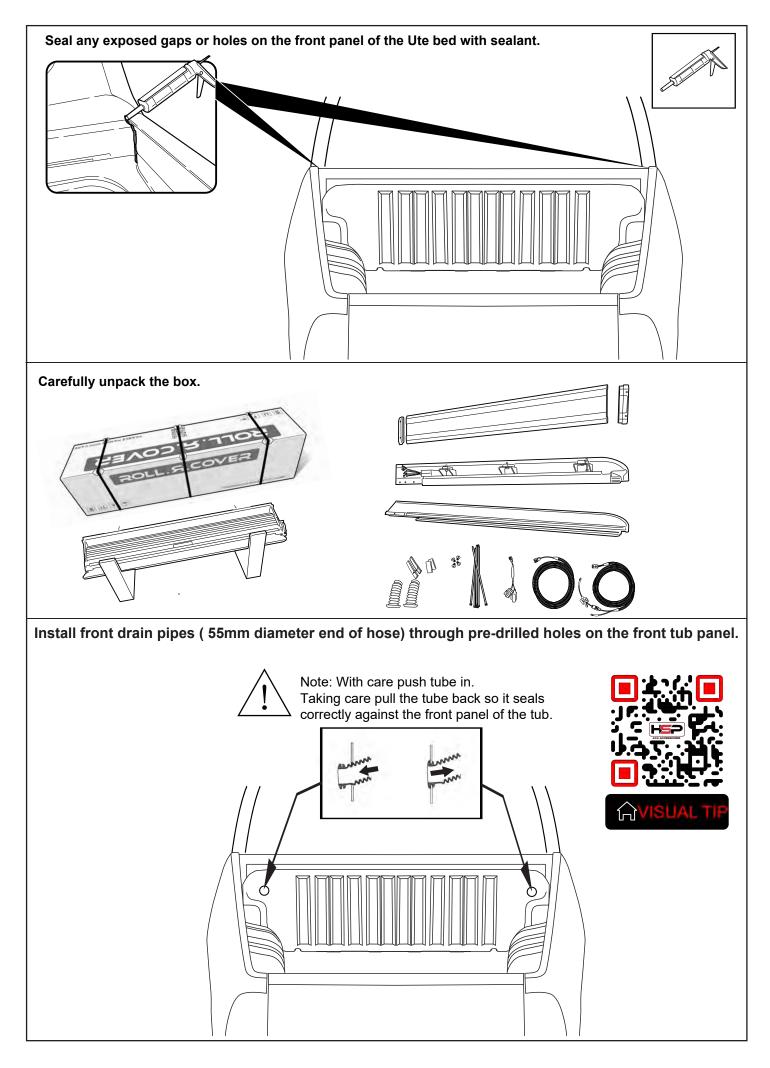


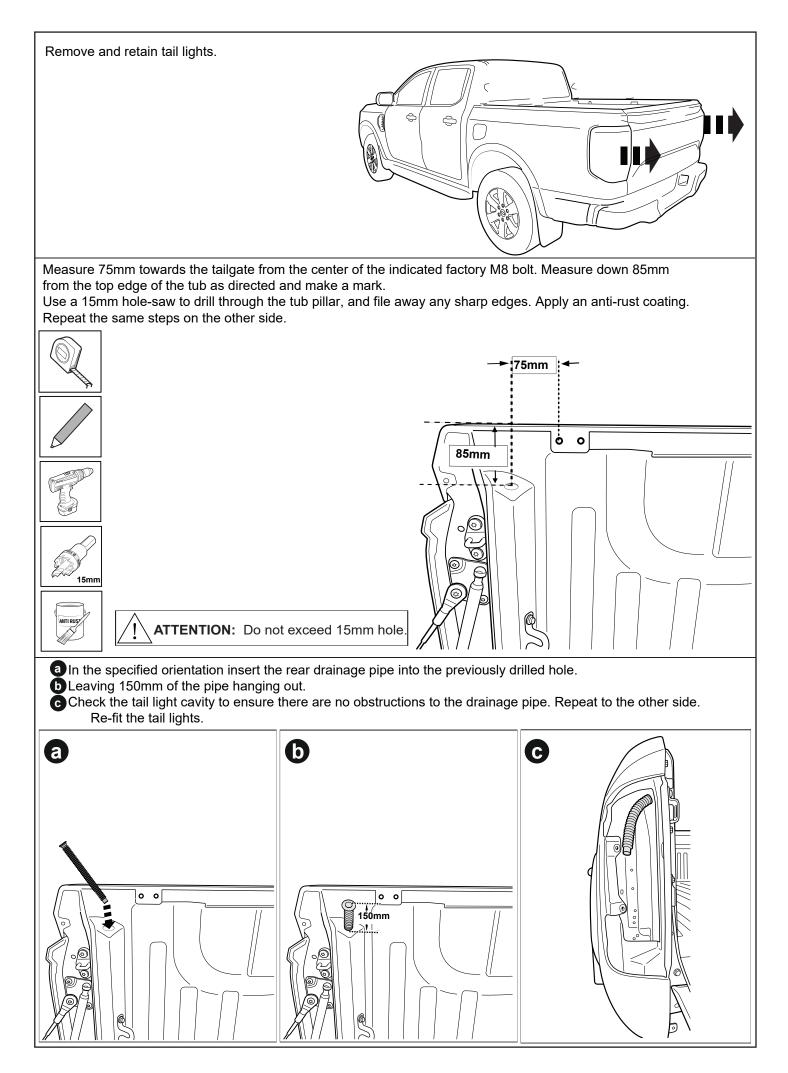


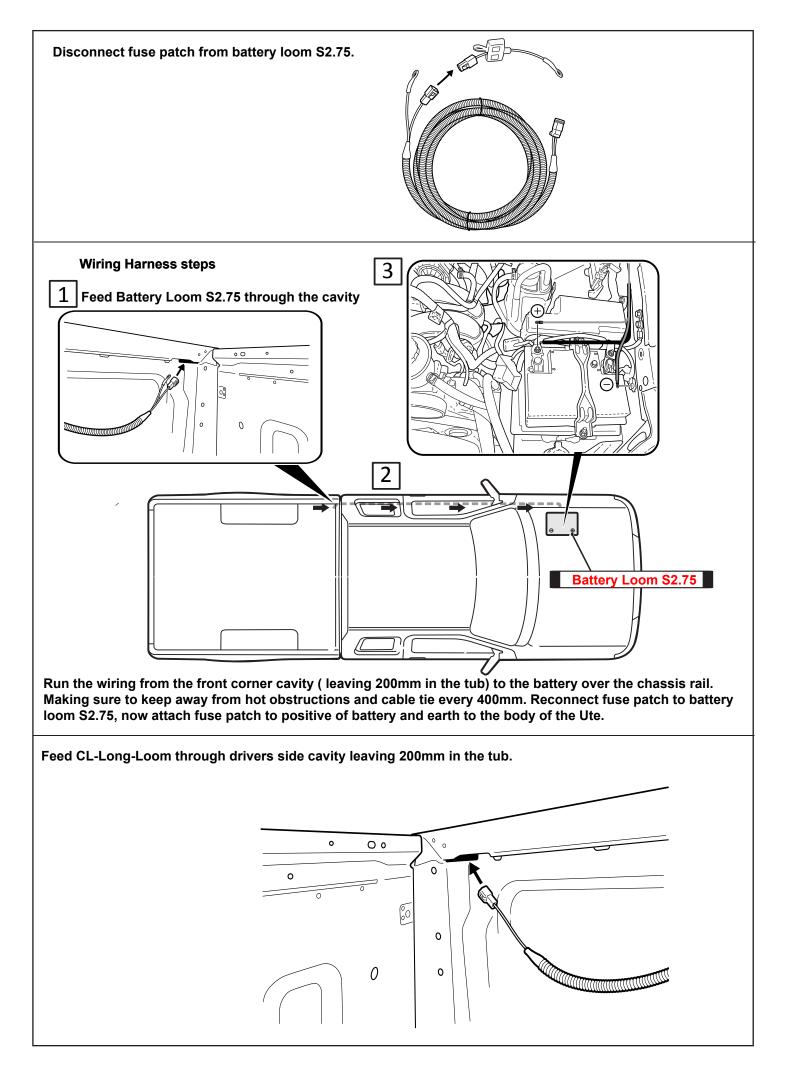


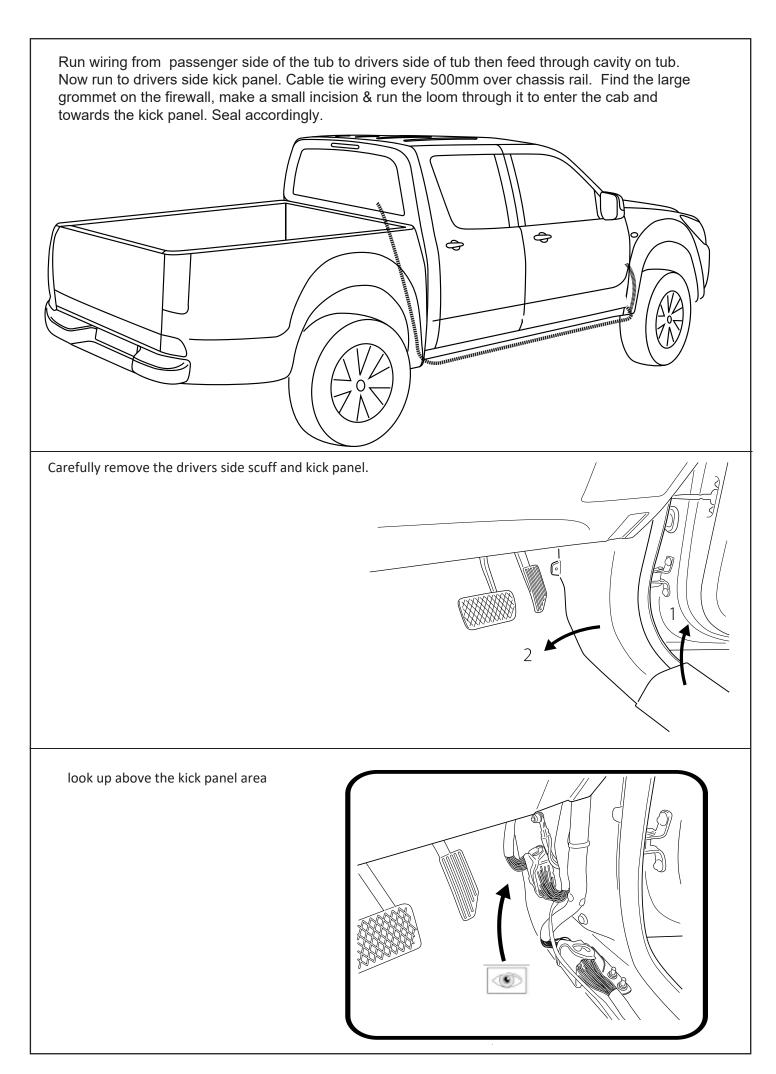


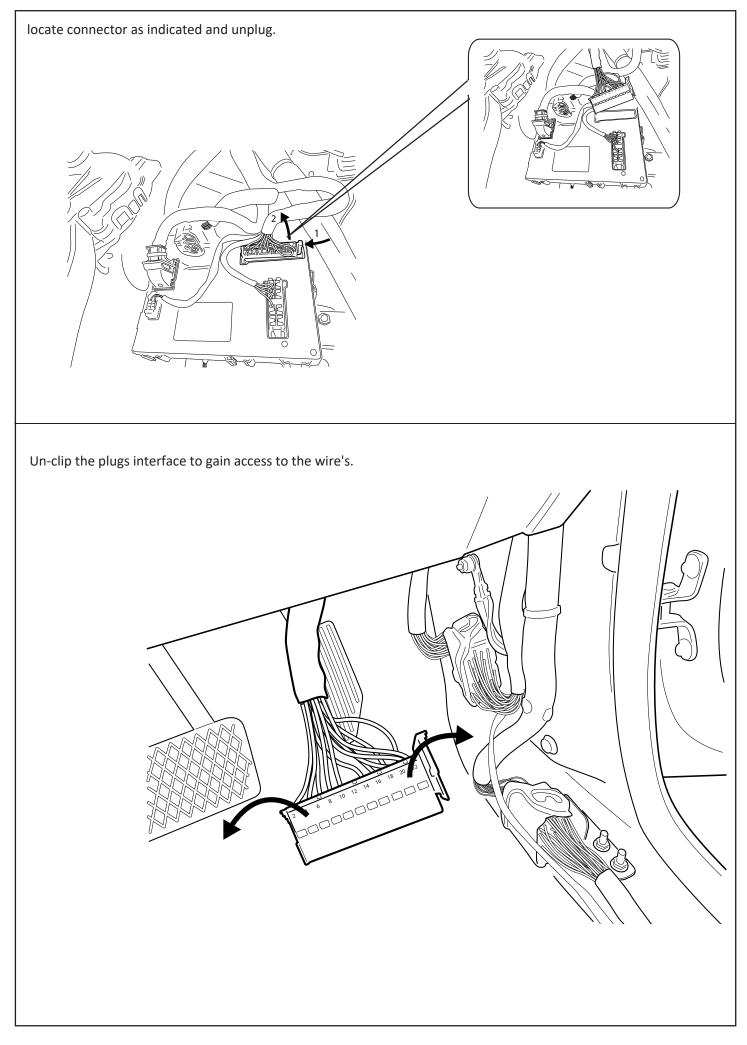

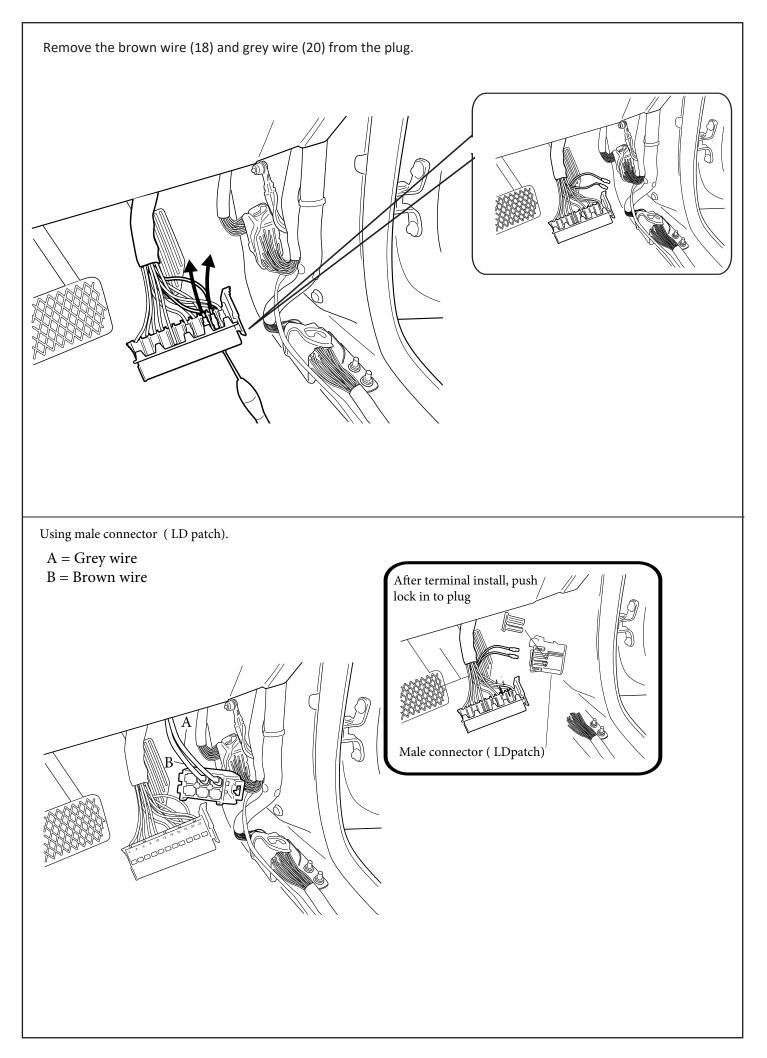


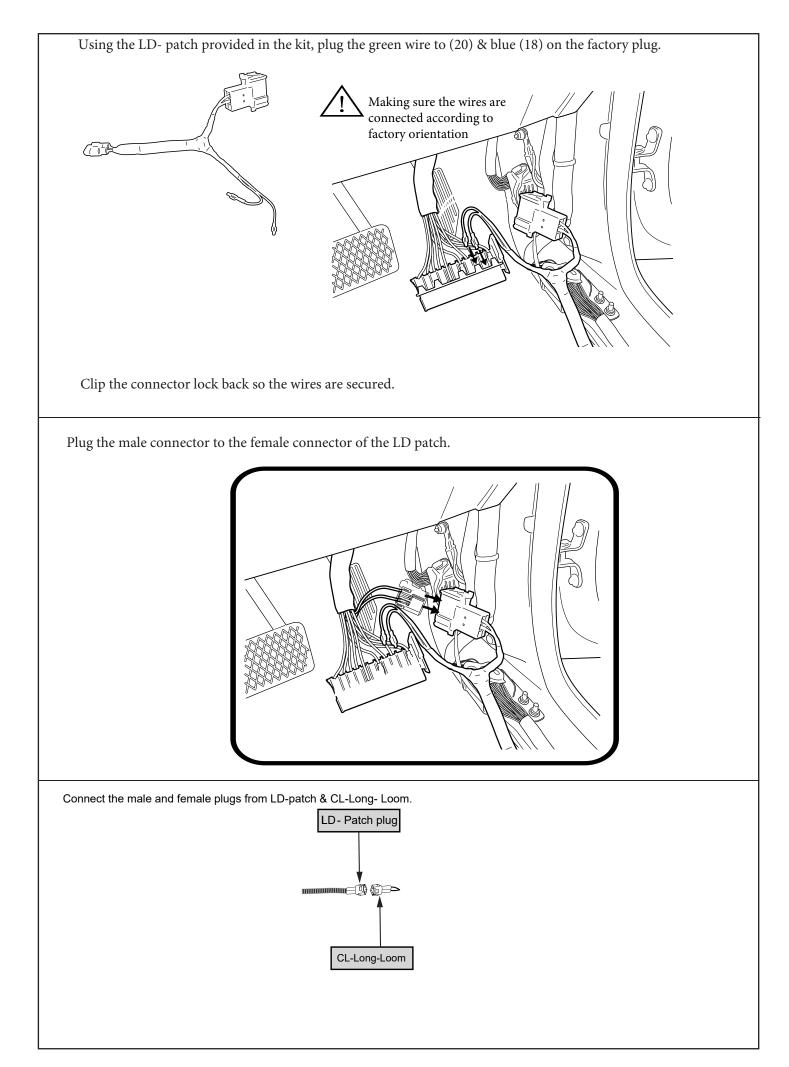


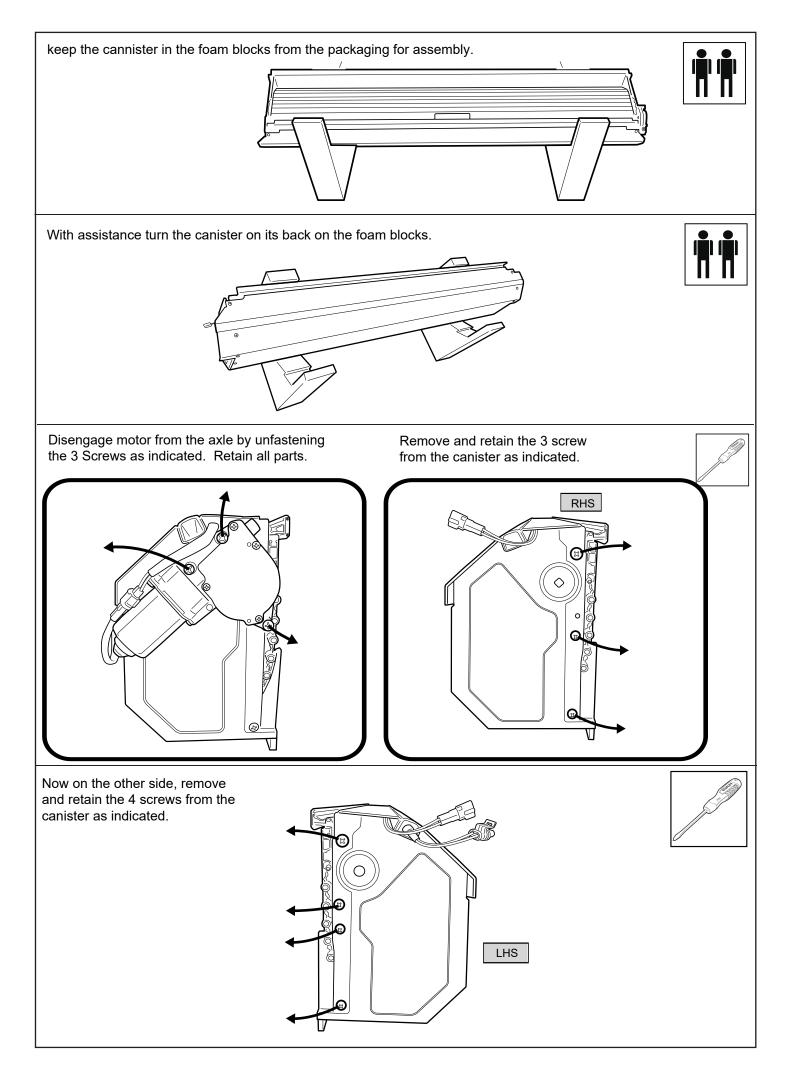


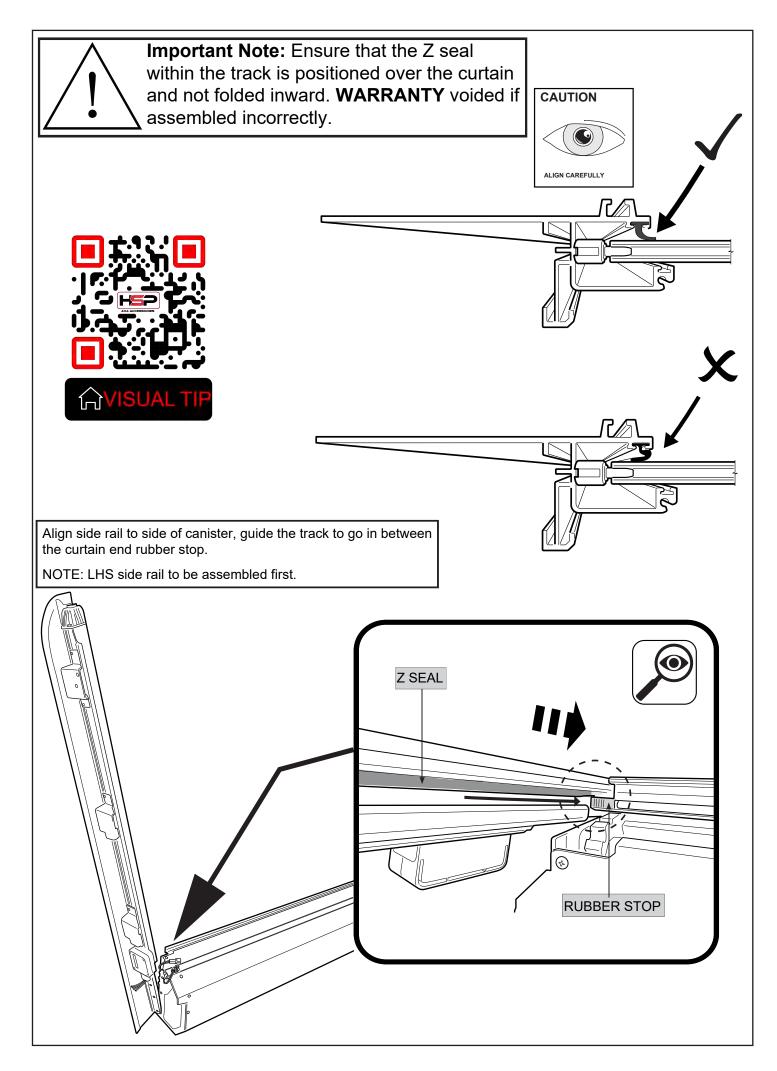


- 1. Using the retained screws, spring washer and washer, Loosely fasten the side rail to the location indicated.
- 2. Side rail edge must compress and meet with the canister profile as indicated below.
- 3. Fasten all screws tight.

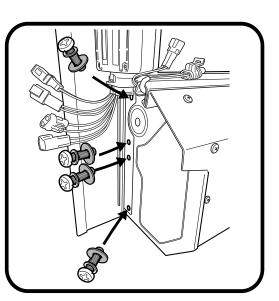


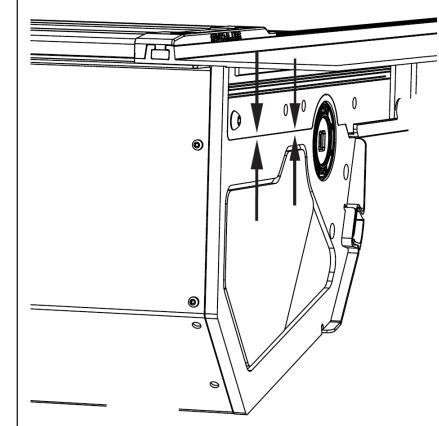


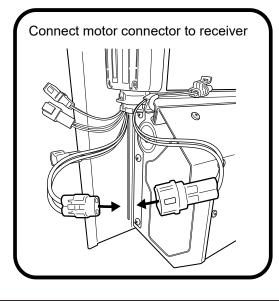


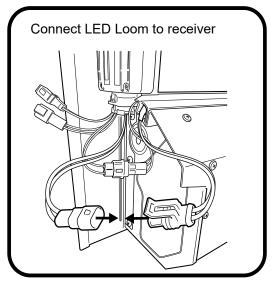



© Roll Я Cover

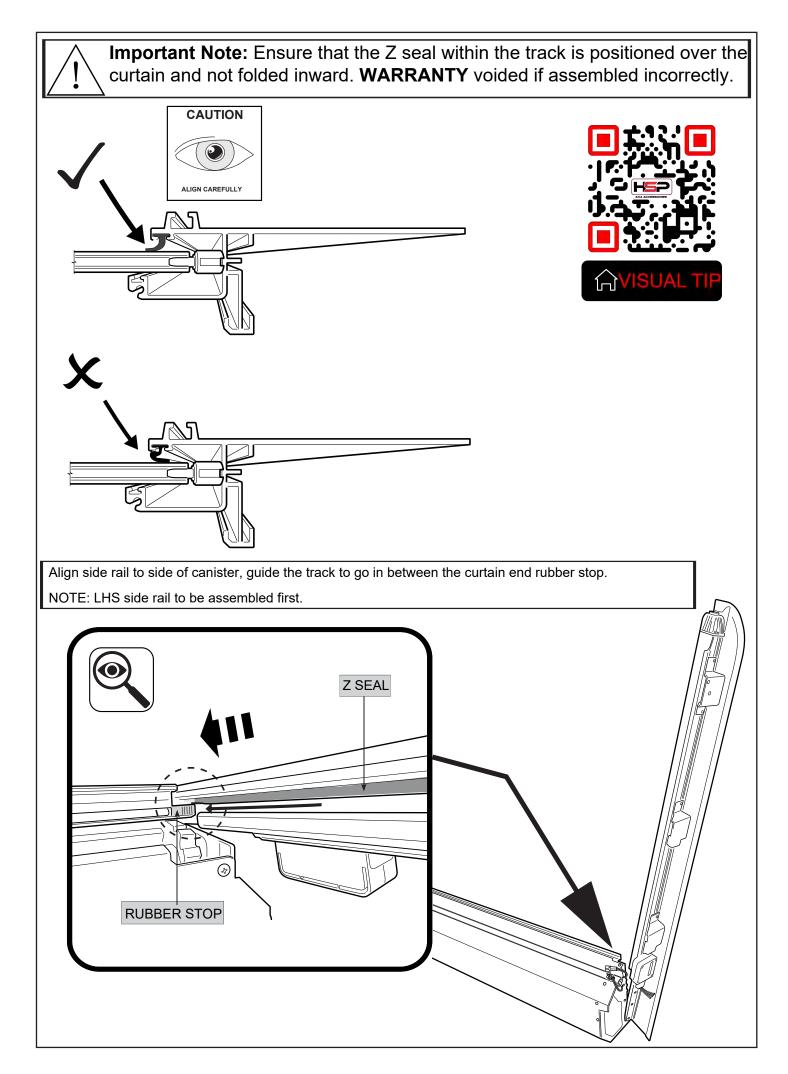


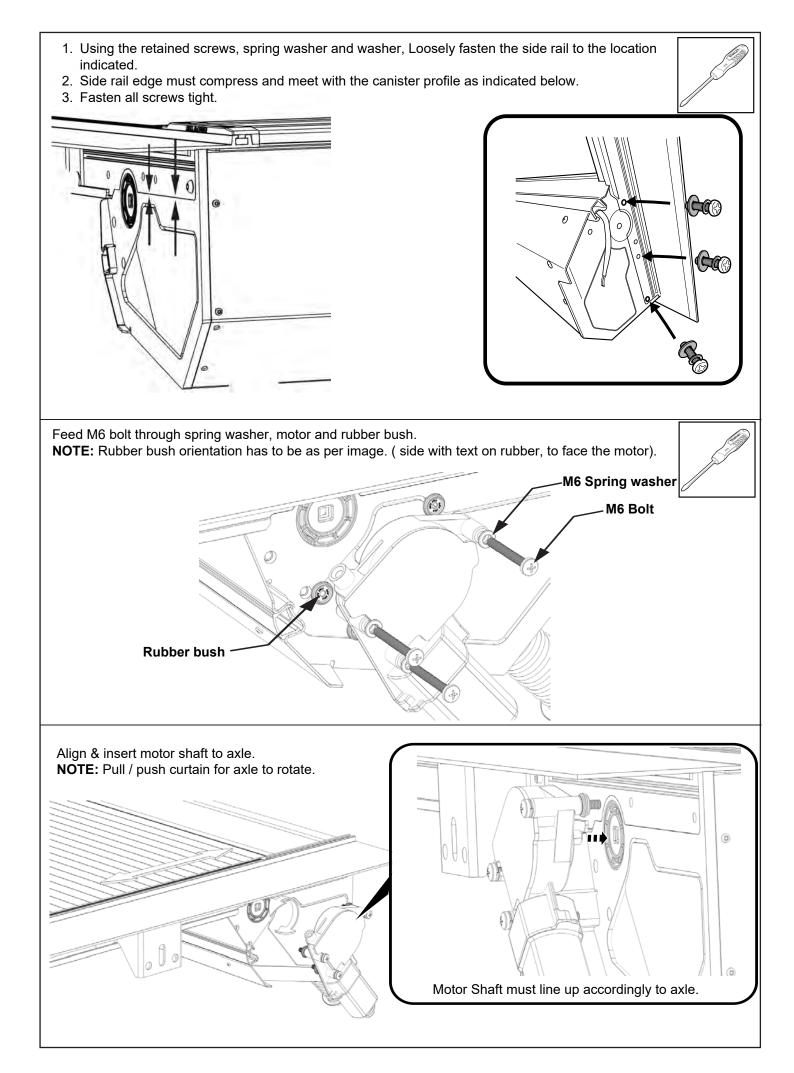


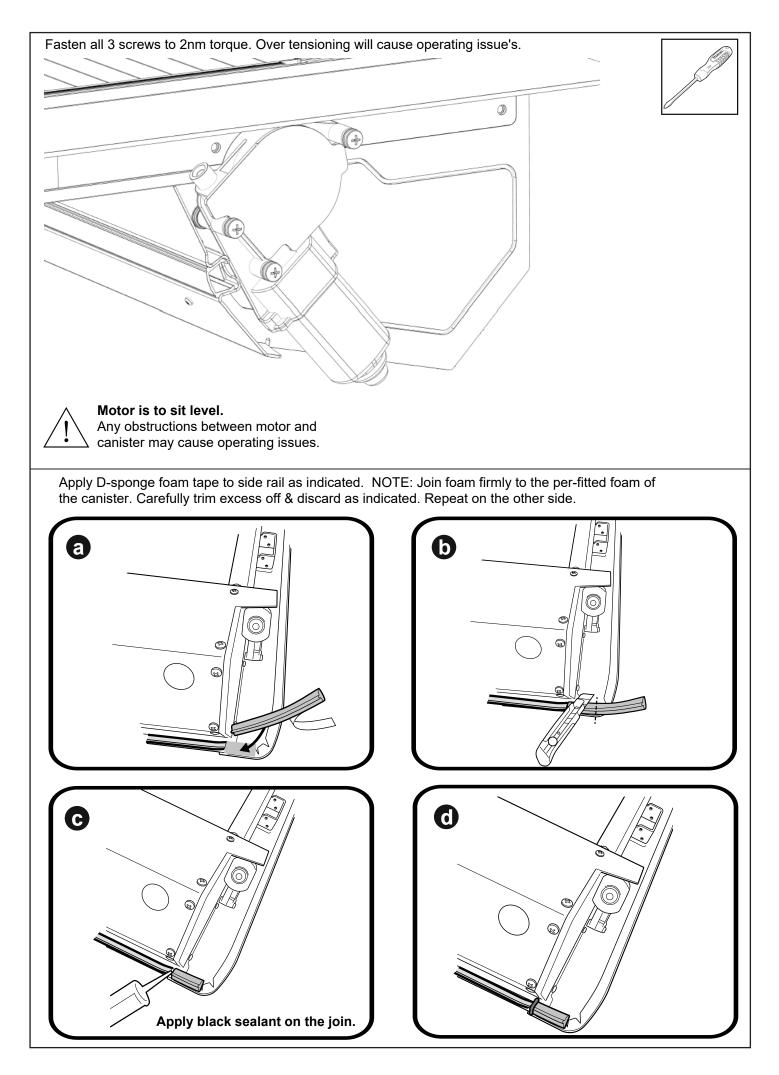

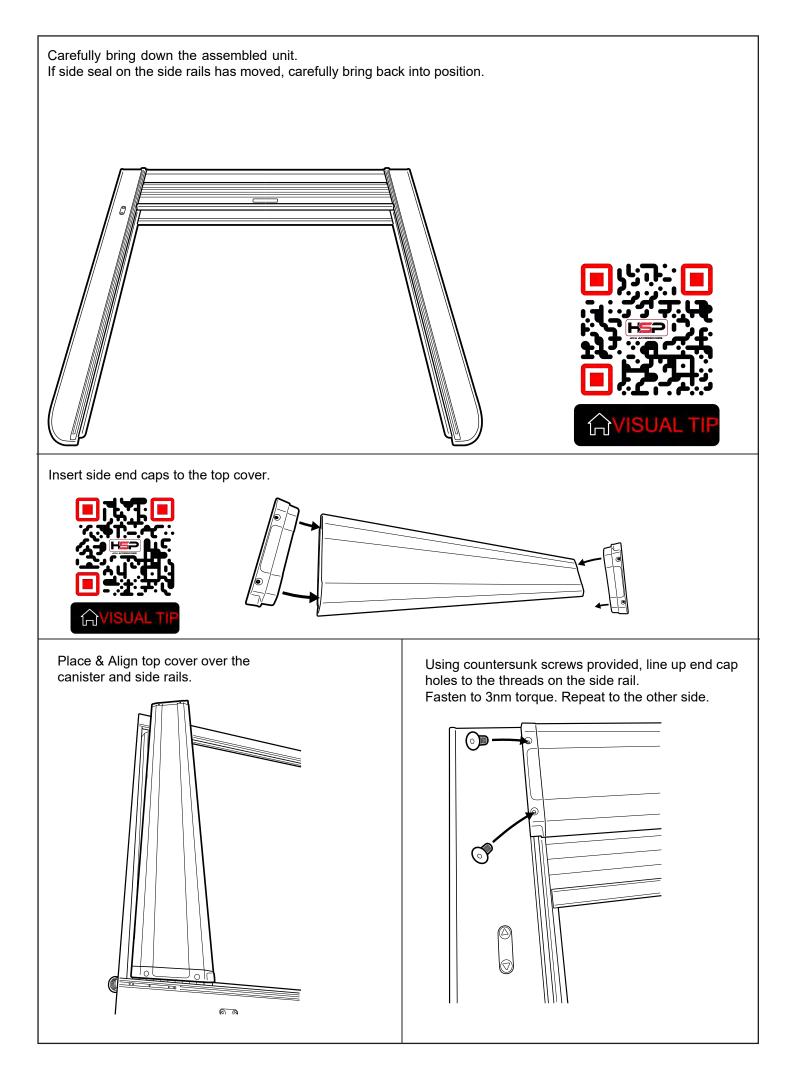

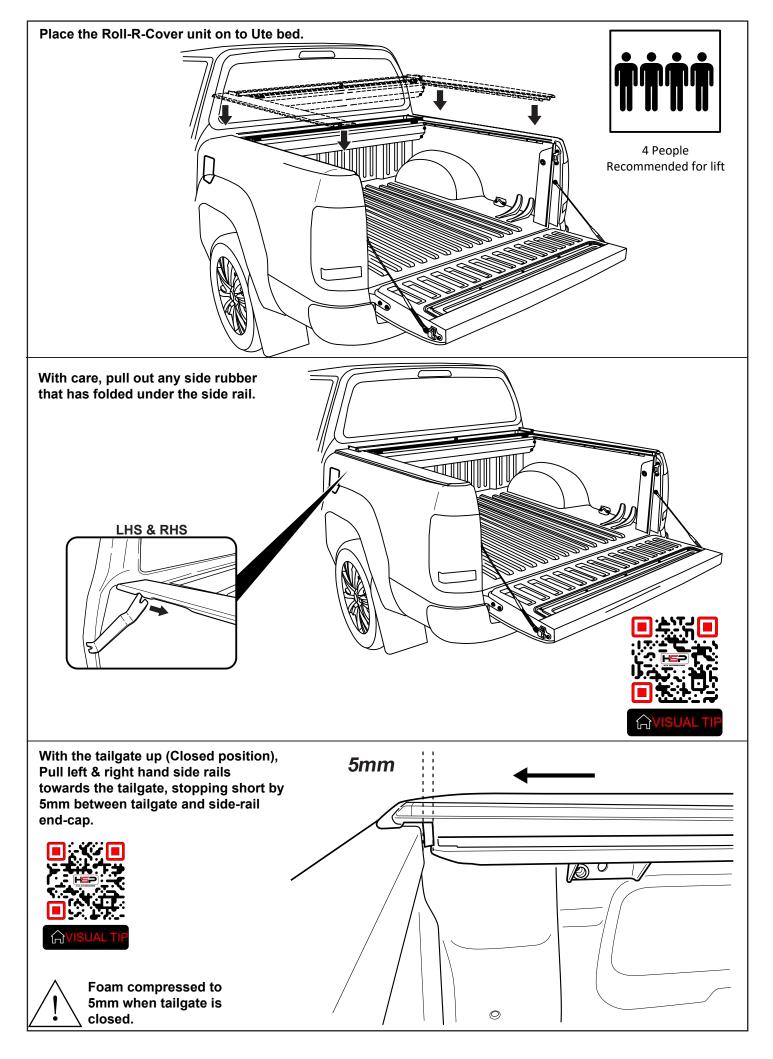


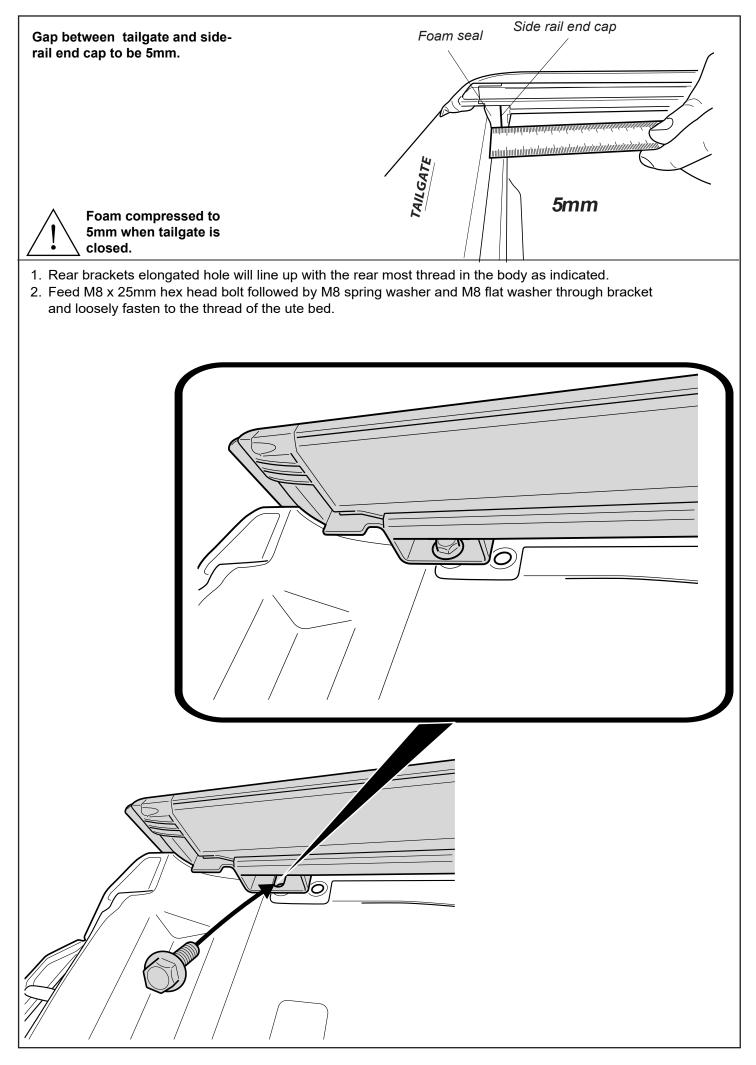


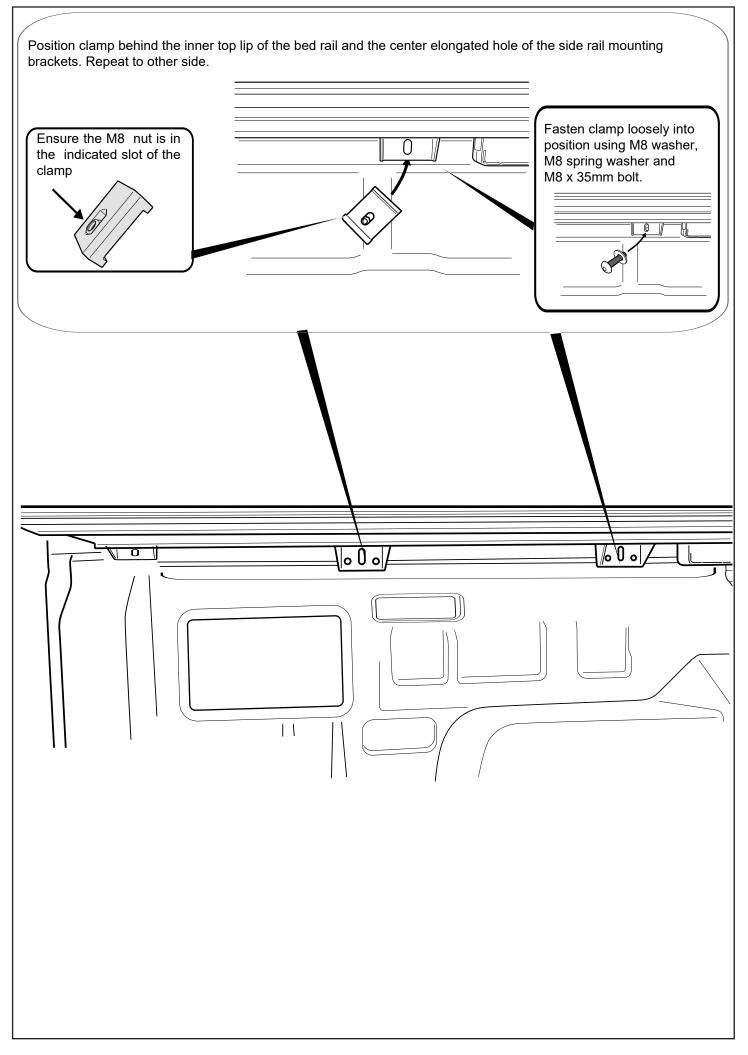


Please follow the steps in order starting with point 1.


- 1. With assistance apply down pressure to the side rail surface. Keeping that position, now fasten the M8 x 25mm hex bolt to 8Nm torque.
- 2. Making sure to push clamps up as far as possible into the inner rail of the tub and fasten bolts to 10Nm torque.
- 3. Making sure to push clamps up as far as possible into the inner rail of the tub and fasten bolts to 10Nm torque.

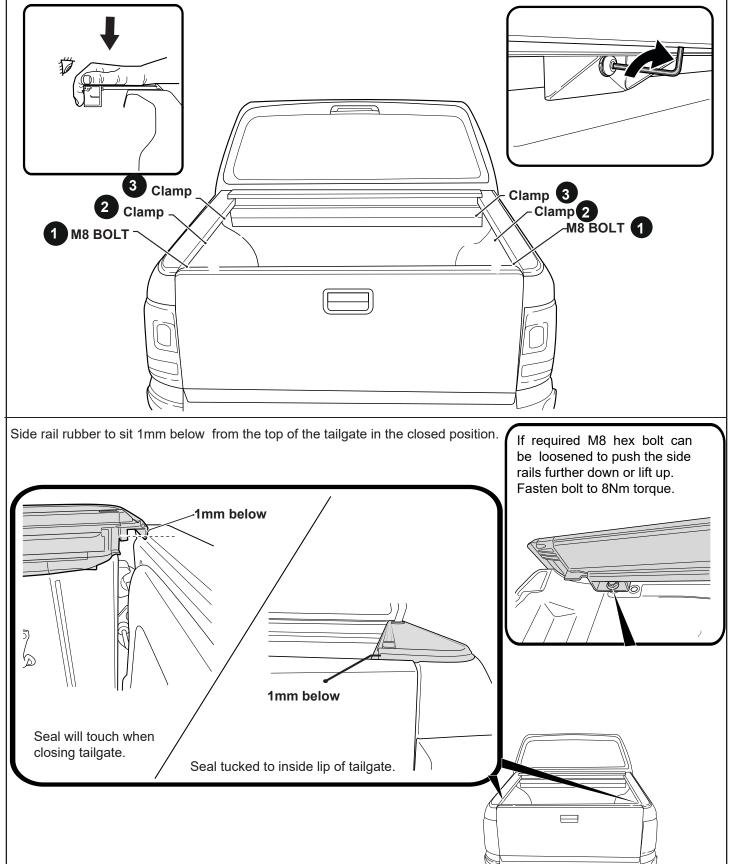

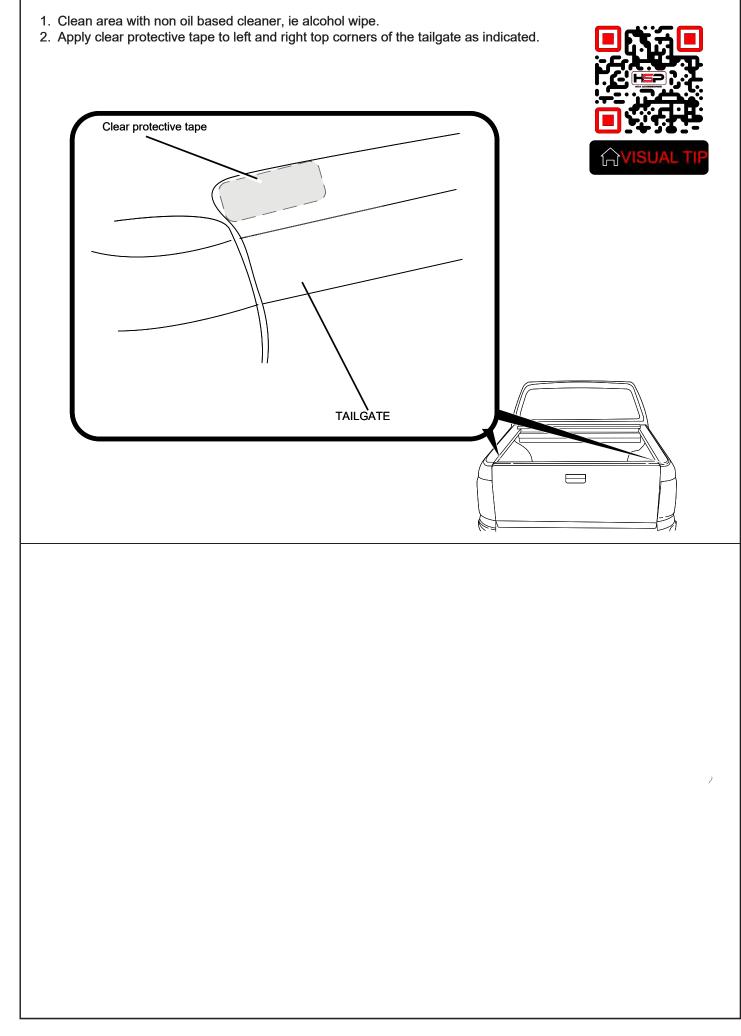

Install front drain pipes through pre-drilled holes of the canister. (RHS/LHS)

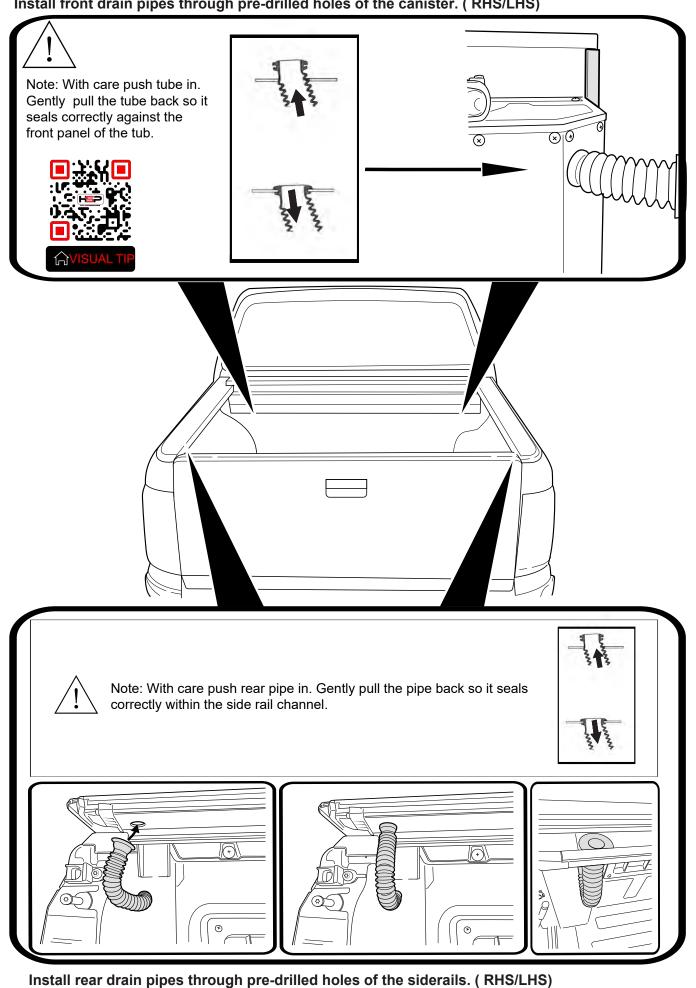

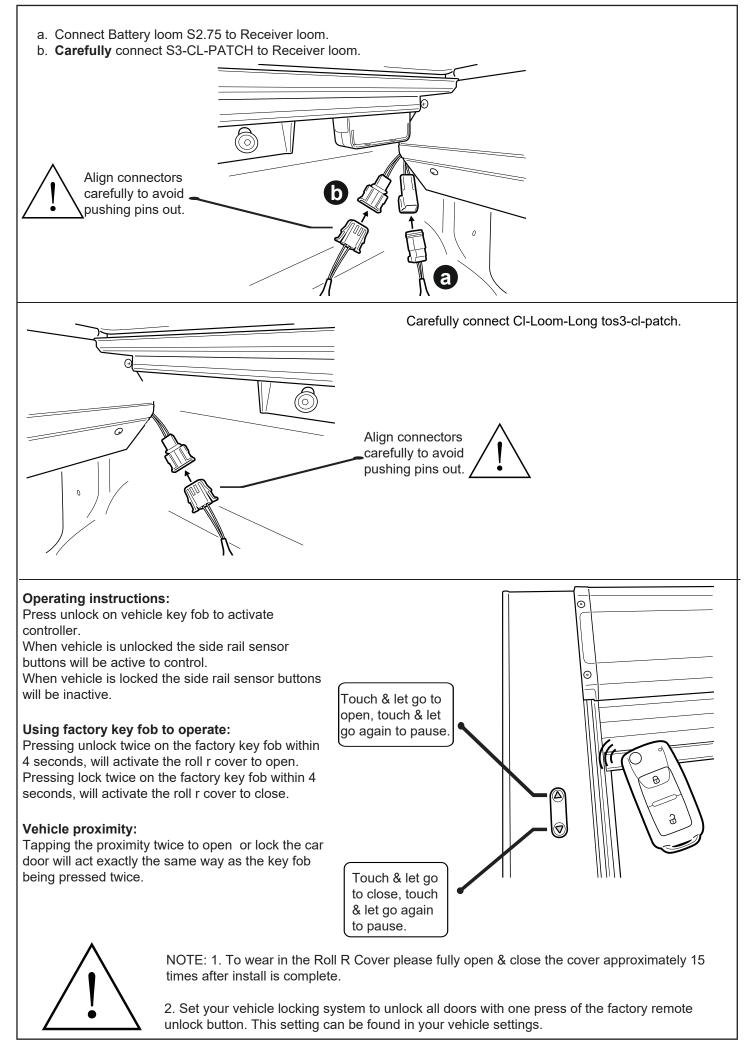

Trouble shooting visual tips:

side rail Parallel test

